

# USER GUIDE

## **Trimble® 5700/5800 GPS Receiver**

Version 2.23  
Revision A  
Part Number 43952-10-ENG  
April 2005





## Contact Details

Trimble Navigation Limited  
Engineering & Construction Division  
5475 Kellenburger Road  
Dayton, Ohio 45424-1099  
USA  
800-538-7800 (toll free in USA)  
+1-937-245-5600 Phone  
+1-937-233-9004 Fax  
www.trimble.com

## Copyright and Trademarks

© 2001-2005, Trimble Navigation Limited. All rights reserved. Trimble, the Globe & Triangle logo, and GPS Total Station are trademarks of Trimble Navigation Limited, registered in the United States Patent and Trademark Office and in other countries. eRTK, GPS Configurator, Micro-Centred, QuickPlan, SiteNet, Trimble Geomatics Office, Trimble Survey Controller, Trimble Survey Pro, TRIMMARK, TRIMTALK, TSC1, TSCe, Zephyr, and Zephyr Geodetic are trademarks of Trimble Navigation Limited. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Trimble Navigation Limited is under license.

Microsoft, Windows, and Windows NT are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. All other trademarks are the property of their respective owners.

## Release Notice

This is the April 2005 release (Revision A) of the 5700/5800 *GPS Receiver User Guide*. It applies to version 2.23 of the Trimble 5700/5800 GPS receiver.

The following limited warranties give you specific legal rights. You may have others, which vary from state/jurisdiction to state/jurisdiction.

### Hardware Limited Warranty

Trimble Navigation Limited warrants that this hardware product (the "Product") will perform substantially in accordance with published specifications and be substantially free of defects in material and workmanship for a period of one (1) year starting from the date of delivery. The warranty set forth in this paragraph shall not apply to software products.

### Software License, Limited Warranty

This Trimble software product, whether provided as a stand-alone computer software product, built into hardware circuitry as firmware, embedded in flash memory, or stored on magnetic or other media, (the "Software") is licensed and not sold, and its use is governed by the terms of the relevant End User License Agreement ("EULA") included with the Software. In the absence of a separate EULA included with the Software providing different limited warranty terms, exclusions and limitations, the following terms and conditions shall apply. Trimble warrants that this Trimble Software product will substantially conform to Trimble's applicable published specifications for the Software for a period of ninety (90) days, starting from the date of delivery.

## Warranty Remedies

Trimble's sole liability and your exclusive remedy under the warranties set forth above shall be, at Trimble's option, to repair or replace any Product or Software that fails to conform to such warranty ("Nonconforming Product") or refund the purchase price paid by you for any such Nonconforming Product, upon your return of any Nonconforming Product to Trimble in accordance with Trimble's standard return material authorization procedures.

## Warranty Exclusions and Disclaimer

These warranties shall be applied only in the event and to the extent that (i) the Products and Software are properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Trimble's relevant operator's manual and specifications, and; (ii) the Products and Software are not modified or misused. The preceding warranties shall not apply to, and Trimble shall not be responsible for defects or performance problems resulting from (i) the combination or utilization of the Product or Software with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Trimble; (ii) the operation of the Product or Software under any specification other than, or in addition to, Trimble's standard specifications for its products; (iii) the unauthorized, installation, modification, or use of the Product or Software; (iv) damage caused by accident, lightning or other electrical discharge, fresh or salt water immersion or spray; or (v) normal wear and tear on consumable parts (e.g., batteries). Trimble does not warrant or guarantee the results obtained through the use of the Product.

THE WARRANTIES ABOVE STATE TRIMBLE'S ENTIRE LIABILITY, AND YOUR EXCLUSIVE REMEDIES, RELATING TO PERFORMANCE OF THE PRODUCTS AND SOFTWARE. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED HEREIN, THE PRODUCTS, SOFTWARE, AND ACCOMPANYING DOCUMENTATION AND MATERIALS ARE PROVIDED "AS-IS" AND WITHOUT EXPRESS OR IMPLIED WARRANTY OF ANY KIND BY EITHER TRIMBLE NAVIGATION LIMITED OR ANYONE WHO HAS BEEN INVOLVED IN ITS CREATION, PRODUCTION, INSTALLATION, OR DISTRIBUTION INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. THE STATED EXPRESS WARRANTIES ARE IN LIEU OF ALL OBLIGATIONS OR LIABILITIES ON THE PART OF TRIMBLE ARISING OUT OF, OR IN CONNECTION WITH, ANY PRODUCTS OR SOFTWARE. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON DURATION OR THE EXCLUSION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

TRIMBLE NAVIGATION LIMITED IS NOT RESPONSIBLE FOR THE OPERATION OR FAILURE OF OPERATION OF GPS SATELLITES OR THE AVAILABILITY OF GPS SATELLITE SIGNALS.



## Limitation of Liability

TRIMBLE'S ENTIRE LIABILITY UNDER ANY PROVISION HEREIN SHALL BE LIMITED TO THE AMOUNT PAID BY YOU FOR THE PRODUCT OR SOFTWARE LICENSE. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL TRIMBLE OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER UNDER ANY CIRCUMSTANCE OR LEGAL THEORY RELATING IN ANY WAY TO THE PRODUCTS, SOFTWARE AND ACCOMPANYING DOCUMENTATION AND MATERIALS, (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS), REGARDLESS WHETHER TRIMBLE HAS BEEN ADVISED OF THE POSSIBILITY OF ANY SUCH LOSS AND REGARDLESS OF THE COURSE OF DEALING WHICH DEVELOPS OR HAS DEVELOPED BETWEEN YOU AND TRIMBLE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

NOTE: THE ABOVE LIMITED WARRANTY PROVISIONS MAY NOT APPLY TO PRODUCTS OR SOFTWARE PURCHASED IN THE EUROPEAN UNION. PLEASE CONTACT YOUR TRIMBLE DEALER FOR APPLICABLE WARRANTY INFORMATION.

## Regulations and Safety

The Bluetooth module inside your 5800 receiver is a radio-modem transmitter and receiver. Regulations regarding the use of the radio-modems vary greatly from country to country. In some countries, the unit can be used without obtaining an end-user license. Other countries require end-user licensing. Consult your local communications governing agency for licensing information. Before operating a 5800 receiver, determine if authorization or a license to operate the unit is required in your country. It is the responsibility of the end user to obtain an operator's permit or license for the 5800 radio-modem for the location or country of use.

### STATEMENT ACCORDING FCC PART 15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### STATEMENT ACCORDING FCC PART 15.21

Modifications not expressly approved by Trimble could void the user's authority to operate the equipment.

### STATEMENT ACCORDING FCC PART 15.105

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Type Approval

Type approval, or acceptance, covers technical parameters of the equipment related to emissions that can cause interference. Type approval is granted to the manufacturer of the transmission equipment, independent from the operation or licensing of the units. Some countries have unique technical requirements for operation in particular radio-modem frequency bands. To comply with those requirements, Trimble may have modified your equipment to be granted Type approval. Unauthorized modification of the units voids the Type approval, the warranty, and the operational license of the equipment.

## Safety

### EXPOSURE TO RADIO FREQUENCY RADIATION

The radiated output power of the internal Bluetooth wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the 5800 receiver is 2.0cm or further from the human body. The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community. Trimble therefore believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.







# Safety Information

Before you use the Trimble® 5700 or 5800 GPS receiver, make sure that you have read and understood this publication, as well as all safety requirements.

## Rechargeable Lithium-Ion Batteries

These receivers use a rechargeable Lithium-ion battery.



---

**WARNING** – Do not damage the rechargeable Lithium-ion battery. A damaged battery can cause an explosion or fire, and can result in personal injury and/or property damage.

To prevent injury or damage:

- Do not use or charge the battery if it appears to be damaged. Signs of damage include, but are not limited to, discoloration, warping, and leaking battery fluid.
  - Do not expose the battery to fire, high temperature, or direct sunlight.
  - Do not immerse the battery in water.
  - Do not use or store the battery inside a vehicle during hot weather.
  - Do not drop or puncture the battery.
  - Do not open the battery or short-circuit its contacts.
-





---

**WARNING** – Avoid contact with the rechargeable Lithium-ion battery if it appears to be leaking. Battery fluid is corrosive, and contact with it can result in personal injury and/or property damage.

To prevent injury or damage:

- If the battery leaks, avoid contact with the battery fluid.
  - If battery fluid gets into your eyes, immediately rinse your eyes with clean water and seek medical attention. Do not rub your eyes!
  - If battery fluid gets onto your skin or clothing, immediately use clean water to wash off the battery fluid.
- 



---

**WARNING** – Charge and use the rechargeable Lithium-ion battery only in strict accordance with the instructions. Charging or using the battery in unauthorized equipment can cause an explosion or fire, and can result in personal injury and/or equipment damage.

To prevent injury or damage:

- Do not charge or use the battery if it appears to be damaged or leaking.
  - Charge the Lithium-ion battery only in a Trimble product that is specified to charge it. Be sure to follow all instructions that are provided with the battery charger.
  - Discontinue charging a battery that gives off extreme heat or a burning odor.
  - Use the battery only in Trimble equipment that is specified to use it.
  - Use the battery only for its intended use and according to the instructions in the product documentation.
-



# Contents

	<b>Safety Information . . . . .</b>	<b>v</b>
	Rechargeable Lithium-Ion Batteries . . . . .	v
<b>1</b>	<b>Introduction . . . . .</b>	<b>1</b>
	Related Information 1	
	Technical Assistance 2	
	Your Comments 2	
	<b>5700 GPS RECEIVER. . . . .</b>	<b>3</b>
<b>2</b>	<b>Overview . . . . .</b>	<b>5</b>
	Features . . . . .	6
	Use and Care . . . . .	7
	COCOM Limits . . . . .	7
<b>3</b>	<b>Setting up the Receiver . . . . .</b>	<b>9</b>
	Parts of the Receiver . . . . .	10
	Front panel. . . . .	10
	Rear panel . . . . .	11
	Top panel. . . . .	12
	Bottom panel . . . . .	14
	Setup Guidelines . . . . .	15
	Environmental conditions . . . . .	16
	Sources of electrical interference . . . . .	16
	General guidelines . . . . .	17
	Postprocessed Setup . . . . .	17



Pole-Mounted Setup . . . . .	19
Backpack Setup . . . . .	25
Other System Components . . . . .	28
Radios . . . . .	28
Cellular modems . . . . .	30
Antennas . . . . .	32
CompactFlash cards . . . . .	33
<b>4 General Operation . . . . .</b>	<b>35</b>
Button Functions . . . . .	36
LED Behavior . . . . .	37
Logging/Memory LED . . . . .	38
SV Tracking LED . . . . .	38
Radio LED . . . . .	38
Battery 1 LED and Battery 2 LED . . . . .	39
Starting and Stopping the Receiver . . . . .	39
Logging Data . . . . .	39
Logging internally . . . . .	40
Logging to a Trimble controller . . . . .	41
Resetting to Defaults . . . . .	41
Formatting a CompactFlash Card . . . . .	42
Power Supply . . . . .	42
Batteries . . . . .	44
Operating with the controller . . . . .	46
Power output . . . . .	47
Firmware . . . . .	48
<b>5 Configuration . . . . .</b>	<b>51</b>
Introduction . . . . .	51
Configuring the Receiver in Real Time . . . . .	52
Configuring the Receiver Using Application Files . . . . .	52
Application Files . . . . .	52
Special application files . . . . .	53



	Timed application files . . . . .	55
	Applying application files. . . . .	57
	Storing application files. . . . .	57
	Naming application files . . . . .	57
<b>6</b>	<b>Transferring Data . . . . .</b>	<b>59</b>
	Introduction . . . . .	59
	Connecting to the Office Computer . . . . .	60
	Transferring Data . . . . .	62
	Transferring Files Directly from a CompactFlash Card . . . . .	62
	Deleting Files in the Receiver. . . . .	64
	Supported File Types. . . . .	64
<b>7</b>	<b>Software Utilities . . . . .</b>	<b>65</b>
	The GPS Configurator Software . . . . .	66
	Configuring the 5700 receiver . . . . .	66
	The WinFlash Software . . . . .	67
	Installing the WinFlash software . . . . .	67
	Upgrading firmware . . . . .	67
	Adding frequencies for the 450 MHz internal radio . . . . .	69
	Configuring the internal 900 MHz radio setup . . . . .	71
<b>8</b>	<b>Specifications . . . . .</b>	<b>73</b>
	Physical Specifications. . . . .	74
	Positioning Specifications. . . . .	75
	Technical Specifications. . . . .	75
<b>9</b>	<b>Default Settings . . . . .</b>	<b>77</b>
	Default Settings . . . . .	78
	Resetting to Factory Defaults. . . . .	80
	Examples . . . . .	80
	Default behavior . . . . .	80
	Power up settings. . . . .	81
	Logging after power loss . . . . .	81



	Disabling logging . . . . .	82
	Application files. . . . .	82
<b>10</b>	<b>Cables and Connectors . . . . .</b>	<b>85</b>
	Port 1, 2, and 3 Connectors . . . . .	86
	Power/serial data cable . . . . .	88
	Event Marker/1PPS Cable. . . . .	88
	GPS Antennas and Cables. . . . .	90
<b>11</b>	<b>Event Marker Input and 1PPS Output . . . . .</b>	<b>93</b>
	Introduction . . . . .	93
	Event Marker Input. . . . .	93
	Enabling and configuring event marker input. . . . .	94
	1PPS Output . . . . .	95
	1PPS pulse definition . . . . .	95
	ASCII time tag definition . . . . .	96
	Enabling and configuring 1PPS output . . . . .	97
	<b>5800 GPS RECEIVER. . . . .</b>	<b>99</b>
<b>12</b>	<b>Overview . . . . .</b>	<b>101</b>
	Features . . . . .	102
	Use and Care . . . . .	103
	COCOM Limits . . . . .	103
<b>13</b>	<b>Setting up the Receiver . . . . .</b>	<b>105</b>
	Parts of the Receiver . . . . .	106
	Front panel. . . . .	106
	Lower housing. . . . .	107
	Setup Guidelines . . . . .	108
	Environmental conditions . . . . .	108
	Sources of electrical interference . . . . .	109
	General guidelines . . . . .	109



---

Pole-Mounted Setup . . . . .	110
Other System Components . . . . .	111
Radios . . . . .	111
Cellular modems and external radios . . . . .	112
<b>14 General Operation . . . . .</b>	<b>115</b>
Button Functions . . . . .	116
LED Behavior . . . . .	117
LED flash patterns . . . . .	117
Starting and Stopping the Receiver . . . . .	118
Logging Data . . . . .	118
Logging internally . . . . .	118
Logging to a Trimble controller . . . . .	119
Resetting to Defaults . . . . .	119
Batteries and Power . . . . .	120
Power output . . . . .	122
Firmware . . . . .	122
<b>15 Configuration . . . . .</b>	<b>123</b>
Configuring the Receiver in Real Time . . . . .	124
Configuring the Receiver Using Application Files . . . . .	124
Application Files . . . . .	125
Special application files . . . . .	126
Applying application files . . . . .	127
Storing application files . . . . .	128
Naming application files . . . . .	128
<b>16 Software Utilities . . . . .</b>	<b>129</b>
The GPS Configurator Software . . . . .	130
Installing GPS Configurator . . . . .	130
Configuring the 5800 receiver . . . . .	130
The WinFlash Software . . . . .	131
Installing the WinFlash software . . . . .	131



	Upgrading firmware . . . . .	132
	Adding frequencies for the 450 MHz internal radio . . . . .	133
	Configuring the internal 900 MHz radio setup . . . . .	135
<b>17</b>	<b>Specifications . . . . .</b>	<b>139</b>
	Physical Specifications. . . . .	140
	Positioning Specifications. . . . .	141
	Technical Specifications. . . . .	142
<b>18</b>	<b>Default Settings . . . . .</b>	<b>143</b>
	Default Settings . . . . .	144
	Resetting to Factory Defaults. . . . .	145
	Default behavior . . . . .	145
	Power up settings. . . . .	146
<b>19</b>	<b>Cables and Connectors . . . . .</b>	<b>147</b>
	Port 1 and 2 Connectors. . . . .	148
	Power/Serial Data Cables . . . . .	150
	<b>APPENDIXES . . . . .</b>	<b>153</b>
<b>A</b>	<b>NMEA-0183 Output . . . . .</b>	<b>155</b>
	NMEA-0183 Outputs. . . . .	156
	Common Message Elements . . . . .	158
	Message values . . . . .	158
	NMEA Messages . . . . .	159
<b>B</b>	<b>RTCM Output . . . . .</b>	<b>175</b>
	RTCM Output . . . . .	176
	Message Scheduling . . . . .	177
<b>C</b>	<b>Troubleshooting . . . . .</b>	<b>179</b>
	<b>Index . . . . .</b>	<b>185</b>



# Introduction

Welcome to the *5700/5800 GPS Receiver User Guide*. This manual describes how to install, set up, and use the Trimble® 5700 and 5800 GPS receivers.

Even if you have used other Global Positioning System (GPS) products before, Trimble recommends that you spend some time reading this manual to learn about the special features of this product.

If you are not familiar with GPS, visit our website for an interactive look at Trimble and GPS at:

- [www.trimble.com](http://www.trimble.com)

Trimble assumes that you are familiar with the Microsoft® Windows® operating system and know how to use a mouse, select options from menus and dialogs, make selections from lists, and refer to online help.

## Related Information

An electronic copy of this manual is available in portable document format (PDF) on the *Trimble R7, Trimble R8, 5700, and 5800 GPS Receivers CD*. Use Adobe Acrobat Reader to view the contents of this file.



Other sources of related information are:

- Release notes – the release notes describe new features of the product, information not included in the manual, and any changes to the manual. They are provided as a PDF on the *Trimble R7, Trimble R8, 5700, and 5800 GPS Receivers CD*. Use Adobe Acrobat Reader to view the contents of the release notes.
- Registration – register your receiver to automatically receive e-mail notifications of 5700/5800 receiver firmware upgrades and new functionality. To register, do one of the following:
  - Run the *Trimble R7, Trimble R8, 5700, and 5800 GPS Receivers CD*.
  - Register electronically through the internet.
  - Print the registration form that is on the *Trimble R7, Trimble R8, 5700, and 5800 GPS Receivers CD*, fill it in, and fax or mail it to the address shown.

Contact your local Trimble Dealer for more information about the support agreement contracts for software and firmware, and an extended warranty program for hardware.

- Trimble training courses – consider a training course to help you use your GPS system to its fullest potential. For more information, visit the Trimble website at [www.trimble.com/training.html](http://www.trimble.com/training.html)

## Technical Assistance

If you have a problem and cannot find the information you need in the product documentation, *contact your local Dealer*. Alternatively, request technical support using the Trimble website at: [www.trimble.com/support.html](http://www.trimble.com/support.html)

## Your Comments

Your feedback about the supporting documentation helps us to improve it with each revision. E-mail your comments to [ReaderFeedback@trimble.com](mailto:ReaderFeedback@trimble.com).



**SECTION**

---

**I**

# 5700 GPS RECEIVER



---



# Overview

## In this chapter:

- Features
- Use and Care
- COCOM Limits



This chapter introduces the 5700 receiver, which is designed for GPS surveying applications. The receiver features one-touch logging for ease of use, and five LEDs that let you monitor the survey in progress and the available battery capacity.

The 5700 receiver tracks GPS satellites on both the L1 and L2 frequencies to provide precise position data for land survey applications. The receiver records GPS data on an internal CompactFlash card and makes all data available through serial or USB ports.

You can use the 5700 receiver alone by logging data internally, or as part of the GPS Total Station 5700 system, which logs GPS data from the 5700 receiver to a Trimble controller running the Trimble Survey Controller™ or Trimble Survey Pro™ software.

## Features

The receiver provides the following features:

- Centimeter-accuracy real-time positioning with RTK/OTF data, and up to 10 Hz position updates
- Submeter-accuracy real-time positioning using pseudorange corrections
- Adaptive dual-frequency RTK engine
- WAAS/EGNOS capability (Wide Area Augmentation System/European Geo-Stationary Navigation System)
- Automatic OTF (on-the-fly) initialization while moving
- 1PPS (One Pulse Per Second) output
- Dual event-marker input
- USB port for data transfer
- Type I CompactFlash card for data storage
- Internal charging of batteries (no external battery charger required)



- Three RS-232 serial ports for:
  - NMEA output
  - RTCM SC-104 input and output
  - Trimble Format (CMR) input and output
- Two TNC ports for connecting to the GPS and radio antennas

## Use and Care

The 5700 receiver is designed to withstand the rough treatment that typically occurs in the field. However, the receiver is a high-precision electronic instrument and should be treated with reasonable care.



---

**WARNING** – Operating or storing the 5700 receiver outside the specified temperature range can damage it. For more information, see Physical specifications, page 74.

---

High-power signals from a nearby radio or radar transmitter can overwhelm the receiver circuits. This does not harm the instrument, but it can prevent the receiver electronics from functioning correctly. Avoid using the receiver within 400 meters of powerful radar, television, or other transmitters. Low-power transmitters such as those used in cellphones and two-way radios normally do not interfere with 5700 receiver operations.

For more information, see the Trimble technical note *Using Radio Communication Systems with GPS Surveying Receivers*.

## COCOM Limits

The U.S. Department of Commerce requires that all exportable GPS products contain performance limitations so that they cannot be used in a manner that could threaten the security of the United States. The following limitations are implemented on the 5700 receiver.



## 2 Overview

---

Immediate access to satellite measurements and navigation results is disabled when the receiver's velocity is computed to be greater than 1000 knots, or its altitude is computed to be above 18,000 meters. The receiver continuously resets until the COCOM situation is cleared.



# Setting up the Receiver

## **In this chapter:**

- [Parts of the Receiver](#)
- [Setup Guidelines](#)
- [Postprocessed Setup](#)
- [Pole-Mounted Setup](#)
- [Backpack Setup](#)
- [Other System Components](#)



### 3 Setting up the Receiver

This chapter provides general setup information, connection information, and cabling diagrams for the most common uses of the 5700 receiver.

## Parts of the Receiver

All operating controls, ports, and connectors on the 5700 receiver are located on its four main panels, as shown in Figure 3.1. This section provides a brief overview of the features of each of these panels.

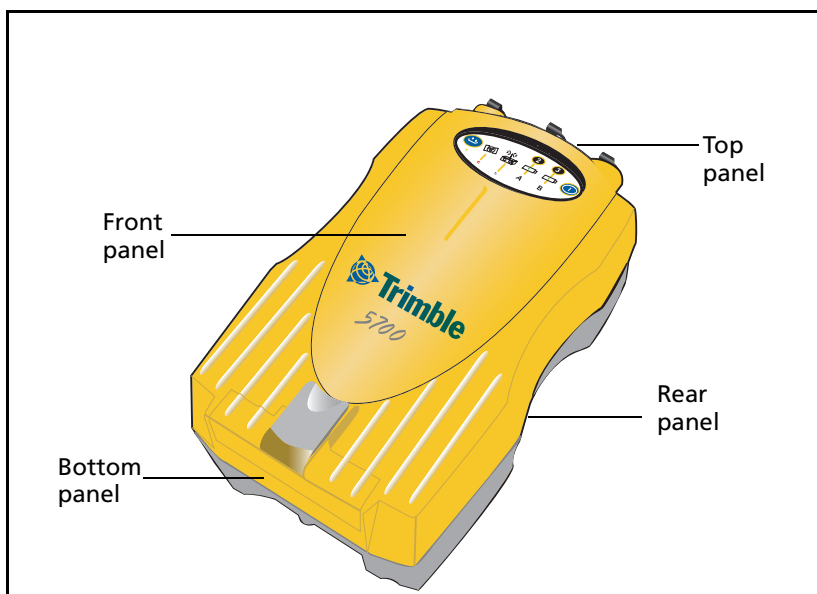


Figure 3.1 Panels on the 5700 receiver

### Front panel

Figure 3.2 shows the front panel of the 5700 receiver. This panel contains the five indicator LEDs, the two buttons, and the catch for the CompactFlash/USB door.



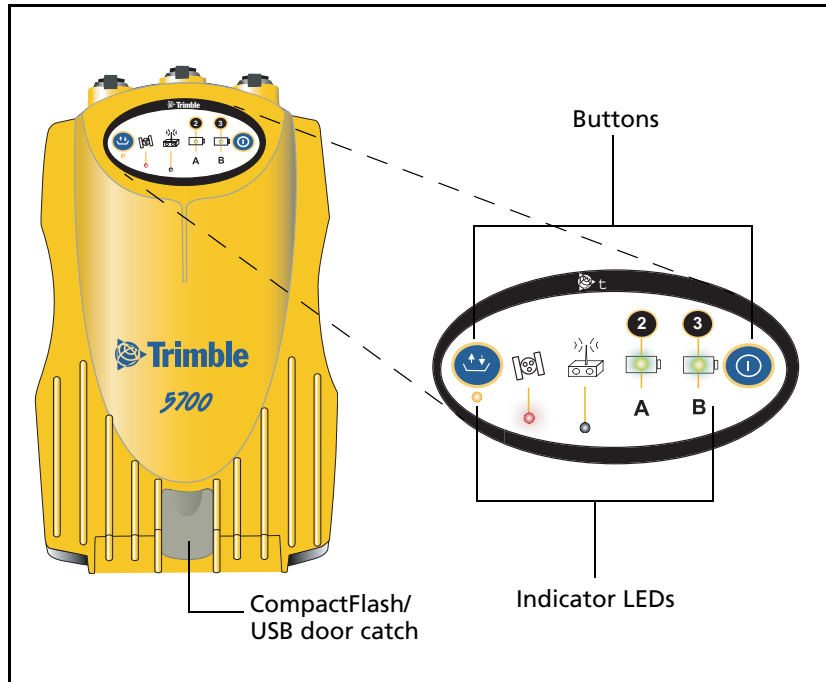


Figure 3.2 Front panel

The two buttons control data logging, data management, power, and settings. For more information, see Button Functions, page 36.

The indicator LEDs show the status of logging, power, satellite tracking, and radio reception. For more information, see LED Behavior, page 37.

## Rear panel

Figure 3.3 shows the rear panel of the 5700 receiver. This panel contains a slot for attaching the receiver catch lock, and the catches for the two battery compartments on the bottom panel. The catch lock should already be attached to your receiver.



### 3 Setting up the Receiver

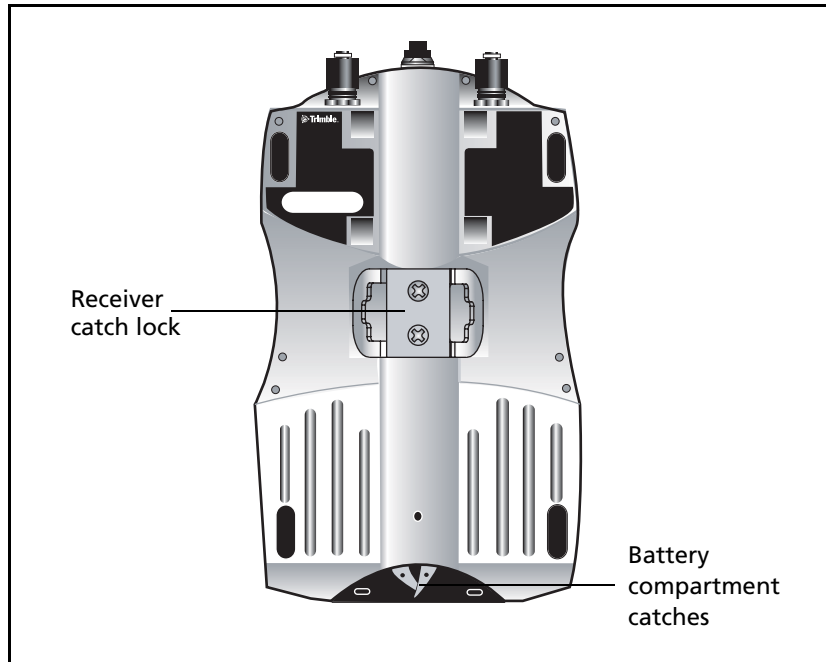


Figure 3.3 Rear panel

To mount the receiver on a pole, you need to attach the receiver bracket to the pole and then insert the catch lock into the bracket. For more information, see Pole-Mounted Setup, page 19.

#### Top panel

Figure 3.4 shows the top panel of the 5700 receiver. This panel contains the three power/serial data ports and (TNC) ports for GPS and radio antenna connections.



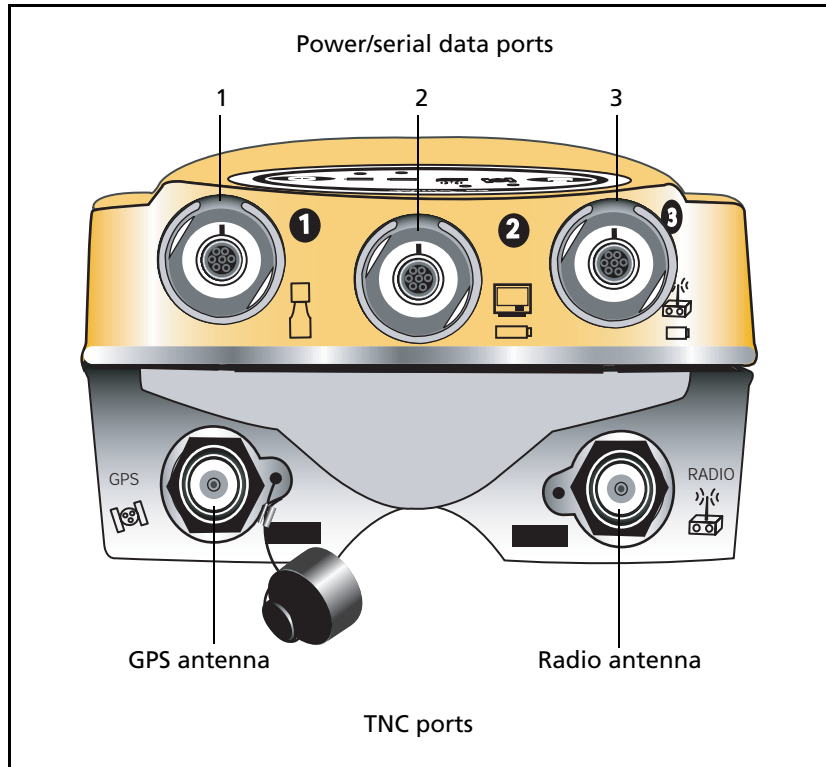




Figure 3.4 Top panel




Each port on the top panel is marked with an icon to indicate its main function.

**Table 3.1 5700 receiver ports**

Icon	Name	Connections
	Port 1	Trimble controller, event marker, or computer
	Port 2	Power in, computer, 1PPS, or event marker



**Table 3.1     5700 receiver ports**

Icon	Name	Connections
	Port 3	External radio, power in
	GPS	GPS antenna
	RADIO	Radio communications antenna

The power/serial data ports are all 7 pin 0-shell Lemo connectors. Both Port 2 and Port 3 can accept external power. For more information, see Default Settings, page 78. For more information, see Cables and Connectors, page 85.

The TNC port connectors are color-coded for easy system setup. Connect the yellow GPS antenna cable to the yellow TNC port marked GPS, and connect the blue Range Pole antenna (RPA) cable to the blue TNC connector marked RADIO. For more information, see the following sections in this chapter.

**Bottom panel**

Figure 3.5 shows the bottom panel of the 5700 receiver. This panel contains the USB port, the CompactFlash port, and the compartments for the two internal batteries.



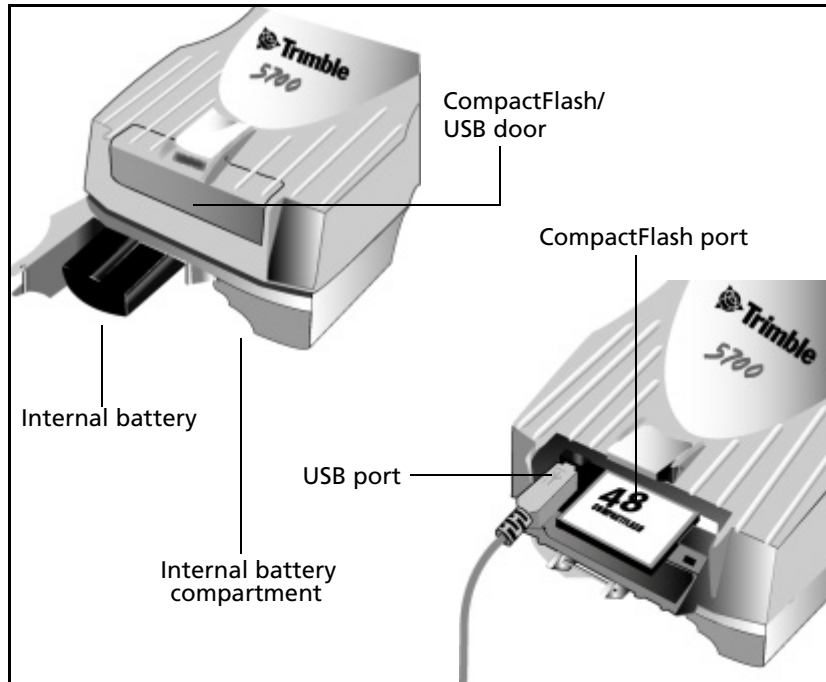


Figure 3.5 Bottom panel

The CompactFlash/USB door conceals the CompactFlash port and USB port. To open the door, push the catch on the front panel down.



**WARNING** – When no USB cable is connected, or when using the receiver in a harsh environment, keep this door closed to keep moisture, dust, and dirt out of the ports. The temperature rating of the receiver applies only when all doors on the receiver are closed.

## Setup Guidelines

Consider the following guidelines when setting up the 5700 receiver.



## Environmental conditions

Although the 5700 receiver has a waterproof housing, reasonable care should be taken to keep the unit dry. Avoid exposure to extreme environmental conditions, including:

- Water
- Heat greater than 65° C (149° F)
- Cold less than -40° C (-40° F)
- Corrosive fluids and gases

Avoiding these conditions improves the 5700 receiver's performance and long-term reliability.

## Sources of electrical interference

Avoid the following sources of electrical and magnetic noise:

- Gasoline engines (spark plugs)
- Televisions and computer monitors
- Alternators and generators
- Electric motors
- Equipment with DC-to-AC converters
- Fluorescent lights
- Switching power supplies



## General guidelines



**WARNING** – 5700 and 5800 GPS receivers use a rechargeable Lithium-ion battery. To avoid personal injury or equipment damage, make sure that you read and understand the Safety Information chapter at the front of this manual.

The following guidelines apply whenever you set up your receiver for operation:

- When plugging in a Lemo cable, make sure that the red dots on the receiver port and the cable connector line up. **Do not** use force to plug cables in, as this may damage the connector pins.
- When disconnecting a Lemo cable, grasp the cable by the sliding collar or lanyard and pull the cable connector straight out of the port. Do not twist the connector or pull on the cable itself.
- To securely connect a TNC cable, align the cable connector with the receiver receptacle and thread the cable connector onto the receptacle until snug.
- Insert the internal batteries with the battery contacts facing the CompactFlash/USB door. The undersides of the batteries have a center groove for alignment when being inserted into the receiver.

## Postprocessed Setup

For a postprocessed survey, you only need:

- the 5700 receiver
- a Zephyr™ or Zephyr Geodetic™ antenna
- a GPS antenna cable

Other equipment, as described below, is optional.



### 3 Setting up the Receiver

---

To set up the 5700 receiver for a postprocessed survey:

1. Set up the tripod with the tribrach and antenna adapter over the survey mark.

Instead of a tripod, you can use a range pole with a bipod. However, Trimble recommends that you use a tripod for greater stability.

2. Mount the antenna on the tribrach adapter.
3. Use the tripod clip to hang the 5700 receiver on the tripod.
4. Connect the yellow GPS antenna cable to the Zephyr antenna.
5. Connect the other end of the GPS antenna cable to the yellow TNC port on the 5700 receiver.
6. If external power is required, connect a battery with an 0-shell Lemo connection to Port 2 or Port 3 on the receiver.

Figure 3.6 shows the 5700 receiver postprocessed setup.





Figure 3.6 Postprocessed setup

**Note** – Instead of hanging the receiver on the tripod, you can place the receiver in its base case. Run the antenna cable out of the portal in the side of the base case to the antenna so that the case can stay closed while the receiver is running.

## Pole-Mounted Setup

To mount the 5700 receiver on a pole, you need to do the following:

1. Mount the eRTK™ Range Pole antenna (RPA).
2. Mount the 5700 receiver.



### 3 Setting up the Receiver

---

3. Mount the Trimble controller.

This section provides detailed instructions on each of these three steps.

#### Mounting the Range Pole antenna (RPA)

To mount the RPA on the pole:

1. Install the RPA bracket 7.5 cm (3") from the pole top by placing the two pieces together and securing with screws. If you are using a 1" diameter pole, place the bracket inserts inside the bracket before securing.

*Note – You can use a quarter-wave whip (“rubber duck”) antenna attached directly to the receiver instead of the RPA.*

2. Connect the yellow TNC-to-TNC GPS cable and run it through the RPA bracket clips where it is labeled on the bracket. Make sure that the right-angle connector is at the top.

*Note – The cable must be routed inside the RPA, through the bracket, or it will affect the RPA radio reception performance.*

3. Align the TNC connector on the RPA with the GPS antenna cable on the bracket, and while feeding the cable through the RPA, slide the RPA onto the bracket until it clicks.

Figure 2.7 shows the 5700 receiver pole-mounted setup.



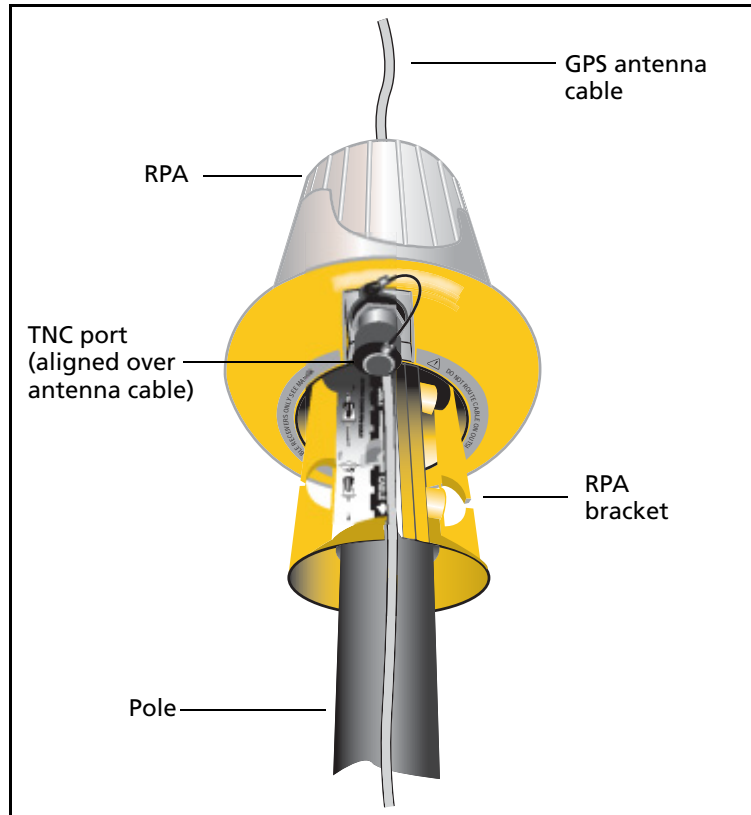


Figure 3.7 RPA and bracket

4. Mount the Zephyr antenna on the range pole.
5. Connect the GPS antenna cable. Make sure that the GPS cable is not hanging over the top of the RPA.
6. Connect the blue TNC-to-TNC radio cable to the RPA.



### 3 Setting up the Receiver

#### Mounting the 5700 receiver

To mount the 5700 receiver on the pole:

1. Attach the receiver bracket to the pole:
  - a. Place the bracket against the pole, approximately 0.5 m from the ground.

*Note – If you are using a 1" diameter pole, flip the black insert around inside the bracket, as shown in Figure 3.8.*

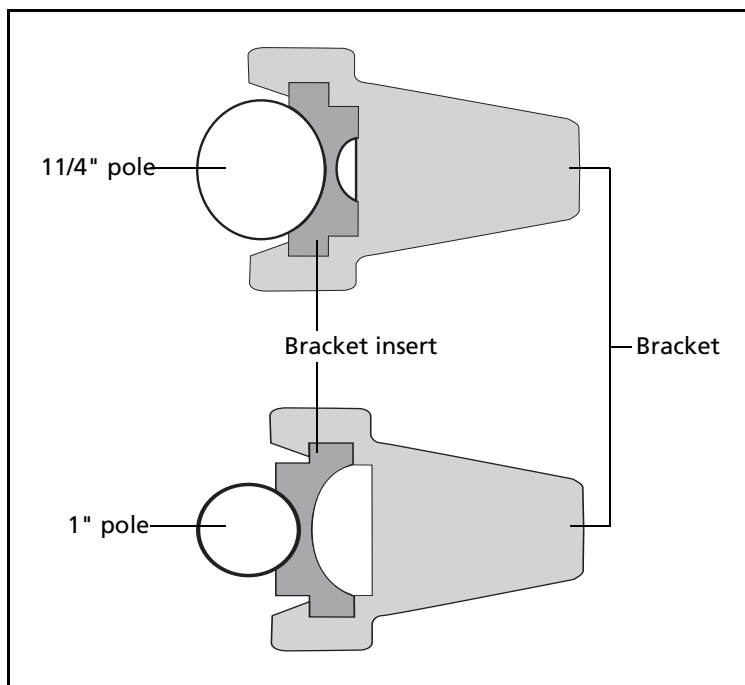


Figure 3.8 Receiver bracket insert

- b. Close the gates of the bracket around the pole.
    - c. Seat the base of the clip lock in the opposite gate.
    - d. Lock the clip lock.



If the clip lock is too tight to be locked, turn it one or two turns counterclockwise and try again. If it is too loose, turn it one or two turns clockwise and try to lock it again.

2. Mount the 5700 receiver on the bracket:
  - a. Pull the bracket side locks in towards the pole.
  - b. Set the receiver catch lock in the bracket.
  - c. Holding the receiver in the bracket, pull the side locks back to their original positions, as shown in Figure 3.9.

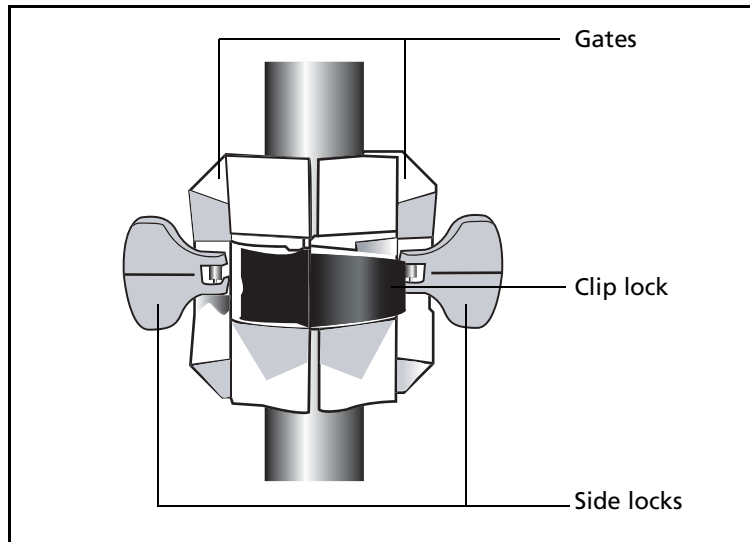


Figure 3.9 5700 receiver bracket

3. Connect the blue TNC radio communications cable to the blue TNC port on the receiver. If necessary, adjust the position of the receiver to remove cable slack.
4. Connect the yellow TNC GPS antenna cable to the yellow TNC port on the receiver. If necessary, adjust the position of the receiver to remove cable slack.



### 3 Setting up the Receiver

---

#### Mounting the TSC1 or TSCe controller

To mount the TSC1™ or TSCe™ controller (“the controller”) on the pole:

1. Mount the controller bracket on the pole:
  - a. Place the bracket against the pole at a comfortable height.
  - b. Rotate the clamping screw on the bracket pole until tight.
  - c. Place the controller into the cradle assembly and tighten the clamping mechanism.
  - d. Any cables running down the pole should be run through the machined groove on the inside of the controller bracket.
  - e. Position the controller in the preferred position for operation by pressing the spring-loaded release button on the cradle, pulling the assembly outward, and rotating the cradle assembly to the desired angle. Reseat the cradle in the proper position by lining up the alignment pins and pushing inward until the release button locks.
2. Connect one end of the 2 ft 0-shell to 0-shell Lemo cable to the controller.
3. Connect the other end of the Lemo cable to Port 1 on the 5700 receiver.
4. Place the hand grip below the controller bracket (or above it, depending on the position of the bracket), with the cables running through the grip.
5. Secure any loose cables, using the velcro cable ties.

Figure 2.10 shows the pole-mounted setup.



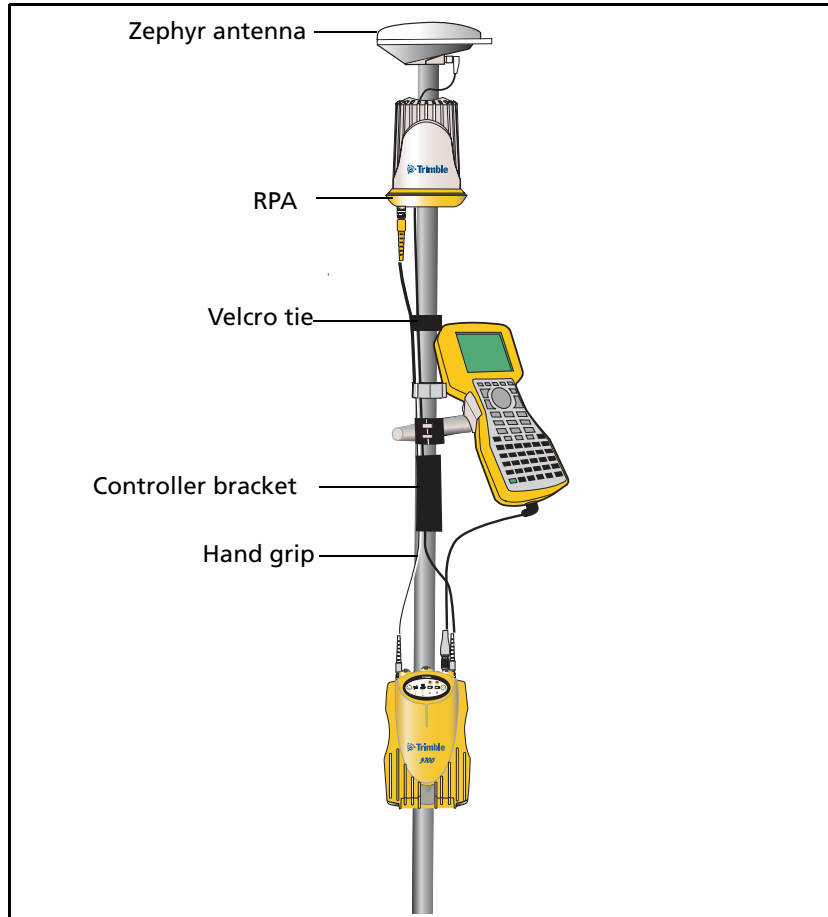


Figure 3.10 Pole-mounted setup

## Backpack Setup

Both the whip and RPA antennae are suitable for use in a backpack. The RPA is installed in the same manner as for the pole-mounted setup (see Pole-Mounted Setup, page 19).



### 3 Setting up the Receiver

---



**WARNING** – The RPA is tuned for operation with the GPS antenna cable running through it. Operating it from a backpack may reduce its operating range. Trimble recommends using the whip antenna.

---

To set up the 5700 receiver for use in a backpack:

1. Insert the 5700 receiver into the backpack with the ports on the top panel facing upwards and the front panel facing outwards. Secure the receiver around the middle with the velcro strap.
2. Attach the Zephyr antenna to a range pole.
3. Attach the whip antenna mount to one of the fittings on the top of the backpack.
4. The backpack has a feedthrough on both sides at the top and on both sides near the bottom to allow cables to be positioned out of the way of the main zipper. Run the radio communications cable through at the top, and connect it to the blue TNC port on the receiver.
5. Connect the straight end of the yellow GPS cable to the yellow TNC port on the receiver.
6. Run the right-angle connector on the yellow GPS cable through the top or side slot on the backpack, and connect it to the Zephyr antenna.
7. Connect one end of the 6 ft 0-shell to 0-shell cable to Port 1 on the 5700 receiver.
8. Run the 0-shell cable through the side slot of the backpack and connect it to the controller.

Figure 3.11 shows the backpack setup.



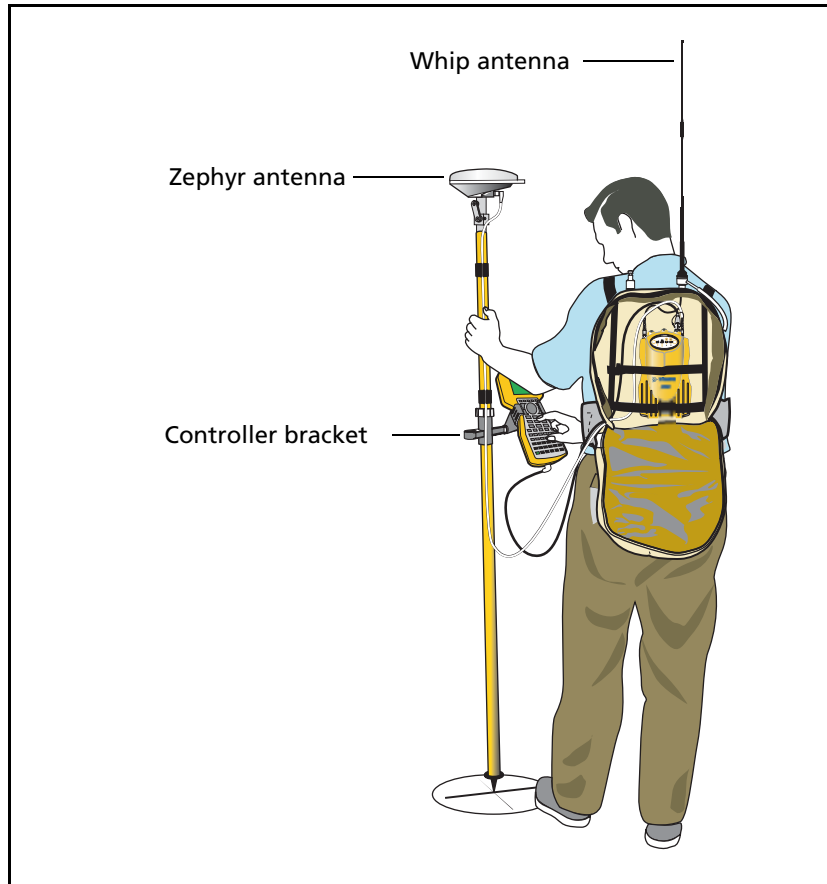


Figure 3.11 Backpack setup



## Other System Components

This section describes optional components that you can use with the 5700 receiver.

### Radios

Radios are the most common data link for Real-Time Kinematic (RTK) surveying. The 5700 receiver is available with an optional internal radio in either the 450 or 900 MHz UHF bands. You can also connect an external radio to Port 3, whether the internal radio is installed or not.

The 5700 receiver supports the following Trimble base radios when using the internal receiver radio:

- TRIMMARK™ 3
- TRIMMARK IIe
- TRIMTALK™ 450S
- SiteNet™ 450
- SiteNet 900

### Internal Radio Setup

You can configure the receiver's optional internal radio using any of the following:

- the GPS Configurator software
- the WinFlash software
- the Trimble Survey Controller software

For more information, refer to the GPS Configurator Help, the WinFlash Help, or the *Trimble Survey Controller User Guide*.

By default, the internal UHF radio has only a few frequencies installed. Use the WinFlash software to configure additional frequencies. For more information, see Adding frequencies for the 450 MHz internal radio, page 69.



## External radio setup

To use an external radio with the 5700 receiver, you need an external power source for the radio.

To set up a 5700 receiver using an external radio:

1. Connect one end of the yellow GPS antenna cable to the yellow TNC port on the 5700 receiver.
2. Connect the other end of the GPS antenna cable to a Zephyr or Zephyr Geodetic antenna.
3. Connect the external radio to Port 3 on the receiver.
4. Connect a radio antenna to the external radio.

Figure 3.12 shows a TRIMMARK 3 radio connected to a 5700 receiver.

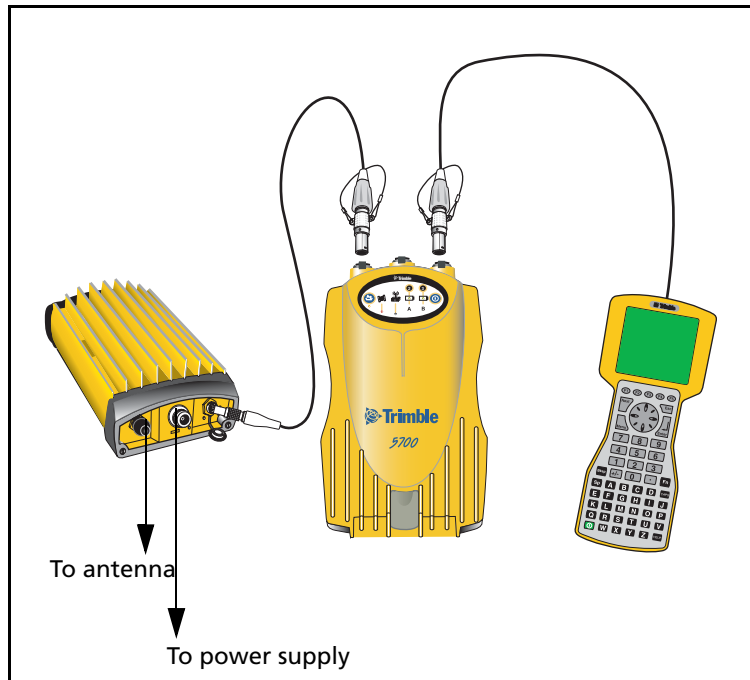


Figure 3.12 Connecting an external radio



### 3 Setting up the Receiver

5. Connect an external power source to Port 2 on the receiver.

*Note – External rover radios must have their own power source because the internal Lithium-Ion batteries do not supply enough voltage. Alternatively, supply external power to port 2 of the 5700 receiver, and enable power out on port 3.*

*Base radios must have their own power source because of their high power consumption*

Alternatively, you can apply external power directly to the radio, if it supports it.

You can use a 10 Ah battery, a 6 Ah battery, or camcorder batteries. The choice of power supply depends on the application, and whether you are using the radio as a reference or rover radio. For more information about the power capabilities of the 5700 receiver, see Power Supply, page 42.

6. Configure the external radio using the Trimble Survey Controller software. Alternatively, you can configure a TRIMMARK 3 radio using the WinFlash software or the configuration software supplied with the radio.

For more information, refer to the *Trimble Survey Controller User Guide* or the appropriate Help.

7. Set up any other equipment as required, depending on whether you are using the radio as a reference or a rover radio.

## Cellular modems

You can use a cellular modem instead of a radio as your data communications link. Cellular modems and other radio links can be used to extend the limits of your surveys.

To connect a cellular modem to a 5700 receiver, you need the following:

- 5700 receiver
- A custom-designed cellular modem, or a cellphone that can transmit and receive data



- Serial (cellphone to DB9) cable (supplied with the cellular modem or phone)
- Trimble DB9 to 0-shell Lemo cable

*Note – This cable is suitable only if flow control can be disabled on the cellular modem. If the cellular modem does not support this functionality, a special cable is required. For more information, refer to the document *Using Cellular and CDPD Modems for RTK*, which is available from your local Trimble Distributor.*

Figure 3.13 shows the components required to connect a cellphone to a 5700 receiver.

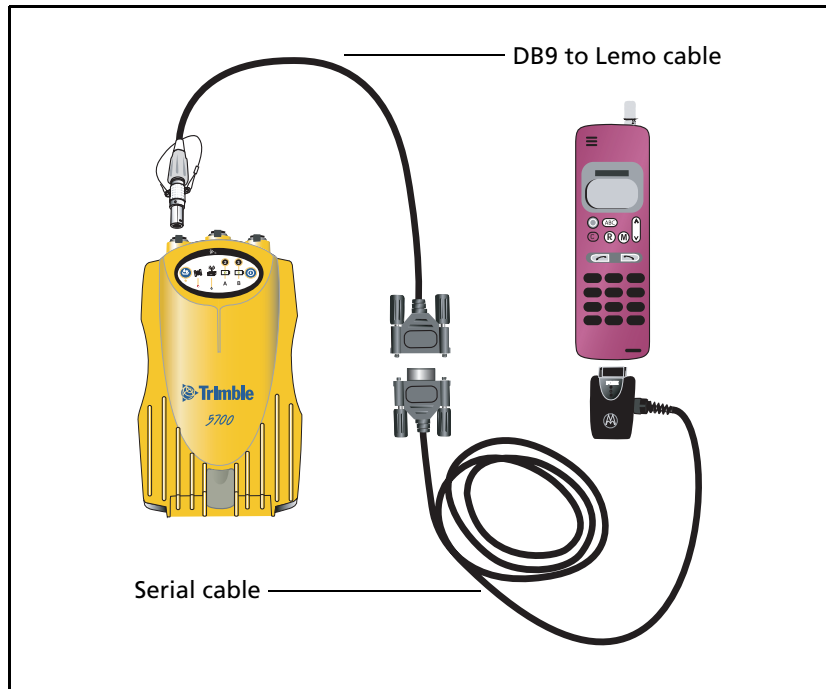


Figure 3.13 Connecting a cellphone

For more information on using a cellular modem as a data link, refer to the *Trimble Survey Controller User Guide*.



### 3 Setting up the Receiver

## Antennas

The 5700 receiver should normally be used with a Zephyr or Zephyr Geodetic antenna, which have been designed specifically for use with the 5700 receiver.

Use Figure 3.14 as a guide for measuring the height of the Zephyr and Zephyr Geodetic antennas. The Zephyr antenna is designed to be measured to the top of the notch. The Zephyr Geodetic (shown) has been designed to be measured to the bottom of the notch.

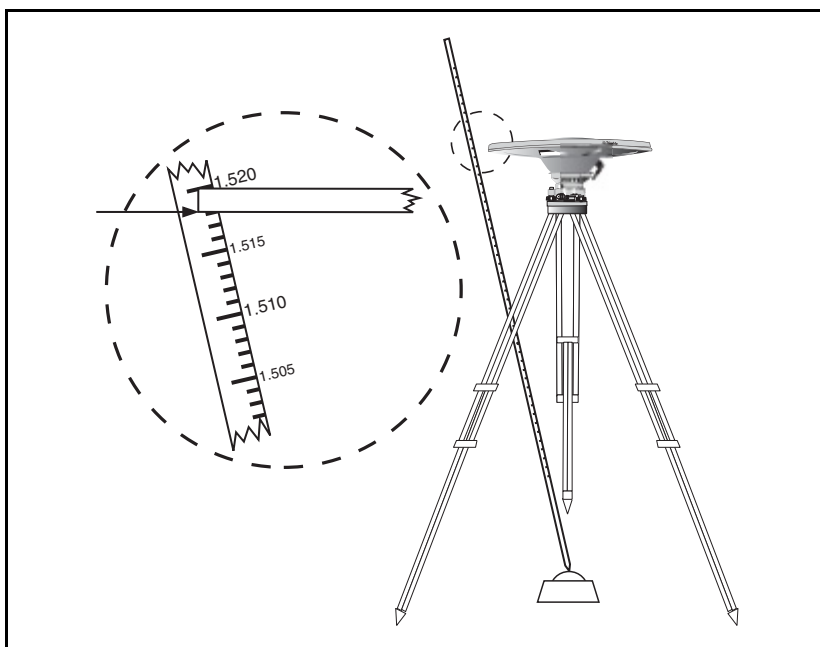


Figure 3.14 Measuring antenna height

Older models of antennas, such as the Choke Ring or Micro-Centered™ L1/L2 antennas, need more power to operate than the Zephyr models. To configure the receiver to output more power on the antenna port, select the correct antenna type in the GPS Configurator™ software, or through the Trimble controller. For information on how to do this, contact your local Trimble Service Provider.



## CompactFlash cards

The 5700 receiver logs data internally on a CompactFlash card. However, it only support the Type I CompactFlash card. Trimble recommends that you use an industrial-rated CompactFlash card, as commercial cards have a limited operating temperature range.

Before logging data to a CompactFlash card, format the card to ensure the integrity of the file system. To format the card, insert it in the 5700 receiver and then hold down the power button for 30 seconds.

**Note** – *Make sure that you format your CompactFlash card in the receiver. This prevents data on the card from being corrupted if the card is removed while data is being logged. Formatting the card in your computer may cause data corruption, or loss of data.*

When inserting the card, make sure that it slides into the card slot properly.



---

### **WARNING –**

- The 5700 receiver allows for a maximum of 512 files on the CompactFlash card, regardless of the card's capacity. The file names must be in 8.3 format, otherwise files copied to the CompactFlash card may cause data corruption or loss of data when logging.
  - If the card does not seat into the pins correctly, do **not** use force or you may damage the pins. Remove the card and reinsert it carefully.
-



### **3**    Setting up the Receiver

---



# General Operation

## In this chapter:

- Button Functions
- LED Behavior
- Starting and Stopping the Receiver
- Logging Data
- Resetting to Defaults
- Formatting a CompactFlash Card
- Power Supply



## 4 General Operation

All the controls that you need for general operation of the 5700 receiver are located on the front panel, as shown in Figure 4.1.

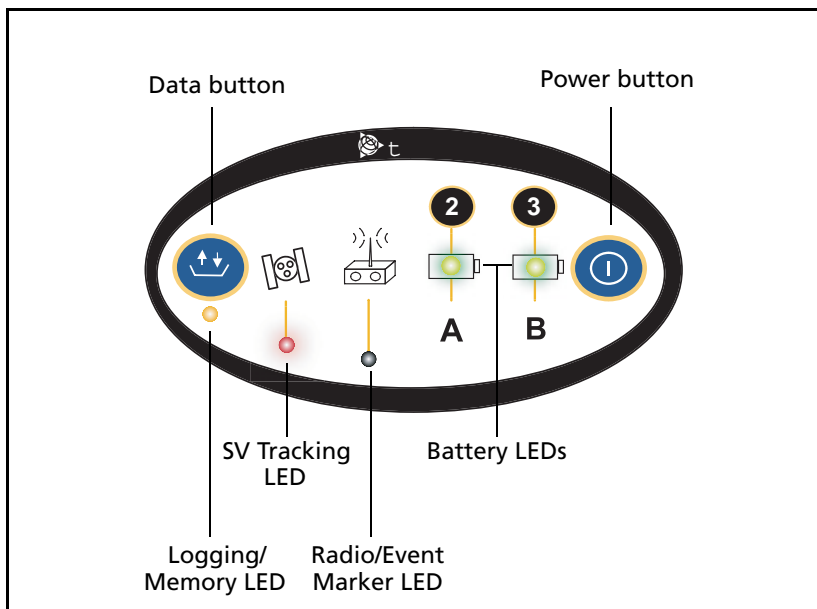


Figure 4.1 Controls on the front panel of the 5700 receiver

For more information, see Parts of the Receiver, page 10.

## Button Functions

The 5700 receiver has only two buttons: a Power button, represented in this manual by **[P]**, and a Data button, represented by **[D]**.

Press **[P]** to switch the receiver on or off, and to perform data management functions such as deleting files or resetting the receiver.

Use **[D]** to start or stop logging. This button is effective only when the receiver is switched on and has completed any power-up and initialization tasks.



Table 4.1 describes the main functions of the two buttons.

**Table 4.1 Button functions**

Action	Power button	Data button
Turn on the receiver	Press	
Turn off the receiver	Hold for 2 seconds	
Start logging data internally		Press
Stop logging data internally		Hold for 2 seconds
Delete the ephemeris file	Hold for 15 seconds	
Reset the receiver to factory defaults	Hold for 15 seconds	
Delete application files	Hold for 30 seconds	
Format the CompactFlash card	Hold for 30 seconds	

***Note** – The term “press” means to press the button and release it immediately. The term “hold” means to press the button and hold it down for the given time.*


# LED Behavior

The five LEDs on the top panel of the receiver indicate various operating conditions. Generally, a lit or slowly flashing LED indicates normal operation, an LED that is flashing quickly indicates a condition that may require attention, and an unlit LED indicates that no operation is occurring. The following table defines each possible LED state.

The term ...	means that the LED ...
Flash	is lit briefly every 3 seconds
Slow flash	alternates slowly between being lit and unlit
Fast flash	alternates rapidly between being lit and unlit
On	is lit
Off	is unlit



### Logging/Memory LED

The yellow Logging/Memory LED below the  button indicates the status of data logging and memory usage.

Behavior	Meaning
On	Data is being logged.
Slow flash	Enough FastStatic data has been logged. Alternatively, if the red SV Tracking LED is on solid at the same time, the receiver is in Monitor mode, and is checking for new firmware to install.
Fast flash	Data is being logged but memory is low.
Flash	The receiver is in Sleep mode, and will wake up five minutes before the scheduled start time of a timed application file.
Off	Data is not being logged, or the CompactFlash card is full.

### SV Tracking LED

The red SV Tracking LED below the SV icon  indicates the status of satellite tracking.

Behavior	Meaning
Slow flash	Tracking four or more satellites.
Fast flash	Tracking three or fewer satellites.
Off	Not tracking any satellites.
On	The receiver is in Monitor mode, and is checking for new firmware to install.


### Radio LED

The green Radio LED below the Radio icon  indicates the status of data input and output.

Behavior	Meaning
Slow flash	A data packet or event marker has been received.




### Battery 1 LED and Battery 2 LED

The Battery LEDs inside the two Battery icons  indicate the status of the two internal batteries, or the power sources connected on Ports 2 and 3.

By default, each battery LED indicates the status of the external power source on the corresponding port. If no external source is detected, each LED indicates the status of an internal battery. The color of the LED indicates whether the power source is currently in use (green) or is on standby (yellow).

Color	Meaning	Behavior	Meaning
Green	Power source is in use	On	Healthy
		Fast flash	Low power
		Off	No power source is present
Yellow	Power source is on standby	On	Healthy
		Fast flash	Low power
		Flash	Dead
		Off	No power source is present

### Starting and Stopping the Receiver

To turn on the receiver, press .

To turn off the receiver, hold down  for two seconds.

### Logging Data

You can log data to the CompactFlash card in the 5700 receiver, or alternatively to the survey device.



## Logging internally

The 5700 receiver logs GPS data internally on a CompactFlash card. You can then use the Trimble Data Transfer utility to transfer logged data files to your office computer. The transferred files are in Trimble DAT (.dat) format.



**WARNING** – The 5700 receiver allows for a maximum of 512 files on the CompactFlash card, regardless of the card's capacity. The file names must be in 8.3 format, otherwise files copied to the CompactFlash card may cause data corruption or loss of data when logging.

Data is logged using the current logging settings configured in the receiver. Data files logged internally are named automatically.

To begin internal logging, press [D]. The Logging/Memory LED lights up.

To stop logging, hold down [D] for at least two seconds. The Logging/Memory LED turns off.

**Note** – *When the CompactFlash card is full, the receiver stops logging data, and the Logging/Memory LED switches off. Existing data files are not overwritten.*

Approximate storage requirements for different logging rates are shown in Table 4.2. The values shown are for a one-hour logging session with six satellites visible.

**Table 4.2 Storage requirements**

Logging rate	Memory required
10 Hz	2,588 KB
1 Hz	335 KB
5 seconds	87 KB
15 seconds	37 KB



**Note** – If power is lost, or the CompactFlash card is removed while logging, the file system is designed so that a maximum of ten seconds of data will be lost, regardless of the logging rate. To ensure that this behavior occurs, use the GPS Configurator software to perform a quick format of the CompactFlash card before logging data to the card for the first time.

## Logging to a Trimble controller

When the 5700 receiver is connected to a Trimble controller, you can log GPS data from the receiver to the controller, or to a PC card inserted in the controller. When you use a Trimble controller, you do not use the receiver's controls. Instead, you use the controller functions to set logging options, specify filenames, and to control when logging occurs.

Data is stored in job files, which can be transferred to your office computer using Trimble's Data Transfer utility.

For more information on logging data from a receiver using a Trimble controller refer, to the user guide for your particular controller.

## Resetting to Defaults



**WARNING** – Make sure that you do not hold down **[P]** for more than 30 seconds. After 30 seconds, any application files stored in the receiver are deleted and the CompactFlash card is reformatted.

To reset the 5700 receiver to its factory default settings, hold down **[P]** for at least 15 seconds.

Resetting the receiver to its factory defaults also deletes any ephemeris file in the receiver.

For more information, see Chapter 9, Default Settings.



## Formatting a CompactFlash Card



**WARNING** – Formatting a CompactFlash card while it is in the receiver deletes all the data files on the card and all the application files in the receiver.

To format a CompactFlash card for use in a 5700 receiver, insert the card in the CompactFlash port, then hold down **[P]** for at least 30 seconds. After 15 seconds, the receiver is reset to its factory defaults, and any ephemeris file is deleted. After 30 seconds, any files stored on the card are deleted and the CompactFlash card is reformatted.

**Note** – When you use **[P]** to format the CompactFlash card, a quick format is performed. A quick format reformats the card for use with the 5700 receiver and deletes all data on the card. A full format checks the card for errors or bad sectors, and is only necessary if the card is corrupted. To perform a full format, use the GPS Configurator software. For more information, see *The GPS Configurator Software*, page 66.

## Power Supply

The 5700 receiver can be powered either by its two internal batteries or by an external power source connected to Port 2 or Port 3. The charge provided by the internal batteries depends on the type of survey and operating conditions. Typically, one battery provides about 3.5 hours of power during an RTK survey using the internal radio, and about 5 hours during a survey without the internal radio.

The external power source is always used in preference to the internal batteries. When there is no external power source connected, or if the external power supply fails, the internal batteries are used. The internal batteries are drained in turn, and the receiver automatically switches to the full battery when the first battery is drained.

If no external power is supplied, and both internal batteries are drained, none of the data that you have logged is lost. When internal or external power is restored, the receiver restarts in the same state as



when power was lost. For example, if the receiver was logging data, the data file is not corrupted, and when power is restored the receiver resumes logging with the same settings as before.

The power supply that comes with the 5700 receiver charges the internal batteries while they are still in the receiver. To do this, connect the power supply to the power/serial data cable, connect the cable to Port 2 on the receiver and then connect the power supply to an AC power source, as shown in Figure 4.2.

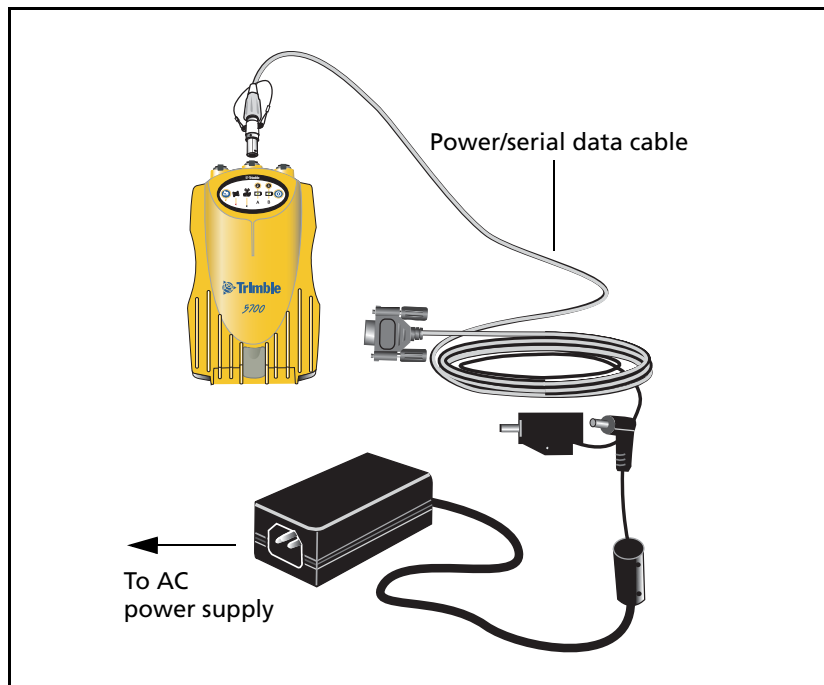


Figure 4.2 Charging the batteries



## Batteries

5700 GPS receivers use rechargeable Lithium-ion batteries.



**WARNING** – Do not damage the rechargeable Lithium-ion battery. A damaged battery can cause an explosion or fire, and can result in personal injury and/or property damage.

To prevent injury or damage:

- Do not use or charge the battery if it appears to be damaged. Signs of damage include, but are not limited to, discoloration, warping, and leaking battery fluid.
- Do not expose the battery to fire, high temperature, or direct sunlight.
- Do not immerse the battery in water.
- Do not use or store the battery inside a vehicle during hot weather.
- Do not drop or puncture the battery.
- Do not open the battery or short-circuit its contacts.



**WARNING** – Avoid contact with the rechargeable Lithium-ion battery if it appears to be leaking. Battery fluid is corrosive, and contact with it can result in personal injury and/or property damage.

To prevent injury or damage:

- If the battery leaks, avoid contact with the battery fluid.
- If battery fluid gets into your eyes, immediately rinse your eyes with clean water and seek medical attention. Do not rub your eyes!
- If battery fluid gets onto your skin or clothing, immediately use clean water to wash off the battery fluid.



**WARNING** – Charge and use the rechargeable Lithium-ion battery only in strict accordance with the instructions. Charging or using the battery in unauthorized equipment can cause an explosion or fire, and can result in personal injury and/or equipment damage.

To prevent injury or damage:

- Do not charge or use the battery if it appears to be damaged or leaking.
- Charge the Lithium-ion battery only in a Trimble product that is specified to charge it. Be sure to follow all instructions that are provided with the battery charger.
- Discontinue charging a battery that gives off extreme heat or a burning odor.



- Use the battery only in Trimble equipment that is specified to use it.
- Use the battery only for its intended use and according to the instructions in the product documentation.

### Charging the rechargeable Lithium-ion batteries

All battery types discharge over time when they are not being used. Batteries also discharge faster in colder temperatures. If a Lithium-ion battery is to be stored for long periods of time, make sure it is fully charged before storing, and re-charged at least every three months.

To protect the batteries from deep discharge (5 volts or less), the receiver is designed to switch batteries or cease drawing power when the battery pack discharges to 5.9 volts.

A battery that has reached the deep discharge level cannot be recharged and must be replaced. The following recommendations provide optimal performance and extend the life of your batteries:

- Fully charge all new batteries before use.
- Do not allow the batteries to discharge below 5 volts.
- Keep all batteries on continuous charge when not in use. Batteries may be kept on charge indefinitely without damage to the receiver or batteries.

The rechargeable Lithium-ion batteries are supplied partially charged. Charge them completely before using for the first time. If a battery has been stored for longer than six months, charge it before use.

The two internal batteries take approximately eight hours to charge. They are charged individually, so each battery takes approximately 4 hours to charge. The internal batteries start charging whenever an external power supply of greater than 15 V is detected.

### Storing the rechargeable Lithium-ion battery

- Do not store batteries in the receiver or external charger unless power is applied.



## 4 General Operation

---

- If you must store the batteries, fully charge them before storing and then recharge them at least every three months.

### Disposing of the rechargeable Lithium-ion battery

Discharge the Lithium-ion battery before disposing of it. When disposing of the battery, be sure to do so in an environmentally sensitive manner. Adhere to any local and national regulations concerning battery disposal or recycling.

### Operating with the controller

If the 5700 receiver is being powered by its internal batteries, it does not supply power to the controller when they are connected. However, the controller batteries and the 5700 receiver batteries can be charged at the same time from the same power supply. To charge both sets of batteries, use two standard power/serial data cables to connect the controller and the 5700 receiver to a power supply, as shown in Figure 4.3.



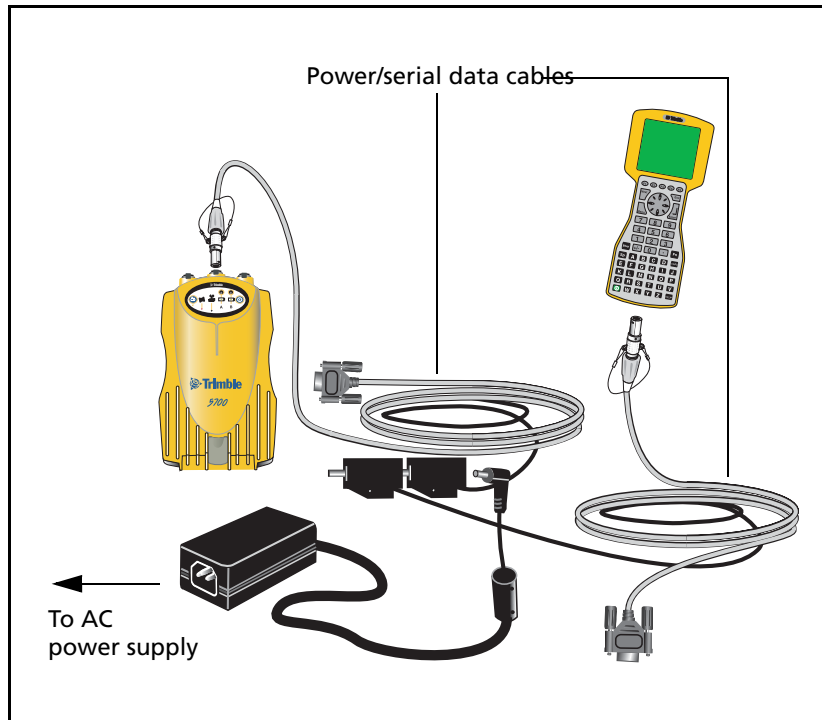


Figure 4.3 Charging receiver and controller batteries

## Power output

If the receiver is being supplied with power from an external source, power is automatically output on Port 1. The output voltage is approximately 0.5 V less than the input voltage. Port 1 outputs a maximum voltage of 20 V, even if the input voltage is higher.

You can use the GPS Configurator or Trimble Survey Controller software to enable power output on Port 3. Port 3 can be enabled for power output regardless of whether power is supplied internally or externally.



## 4 General Operation

---

On Port 3, the output voltage is approximately 0.5 V less than the input voltage. For example, if power is being supplied from the internal Lithium ion batteries, the maximum battery voltage is 8.4 V, so the maximum output voltage is 7.9 V.

**Note** – When you start a survey using the Trimble Survey Controller software, and you are using an external radio, the software automatically enables power output on Port 3.

### Firmware

A receiver's *firmware* is the program inside the receiver that makes the receiver run and controls the hardware. When you need to upgrade the firmware for your 5700 receiver, Trimble recommends that you use the WinFlash software. For more information, see The WinFlash Software, page 67.



---

**WARNING** – Upgrading the firmware deletes all application files on the 5700 receiver.

---

An alternative method of upgrading your firmware is to copy the .elf file directly to the CompactFlash card from your computer.

To do this:

1. Connect the CompactFlash card to your desktop computer.
2. Using Windows Explorer, copy the .elf file from your computer to the CompactFlash card.
3. Disconnect the CompactFlash card from your computer and insert it into the receiver.
4. Turn the receiver off.
5. Hold down **[D]** and press **[P]**.

The receiver starts up in Monitor mode, automatically detects the newer version of the firmware, and installs it. In Monitor mode, the red SV Tracking LED is lit solidly and the yellow Logging/Memory LED flashes slowly.



The upgrade takes about two minutes. Once the upgrade procedure is complete, the receiver restarts automatically.







# Configuration

## In this chapter:

- [Introduction](#)
- [Configuring the Receiver in Real Time](#)
- [Configuring the Receiver Using Application Files](#)
- [Application Files](#)

## Introduction

The 5700 receiver has no controls for changing settings. It can only be configured using external software such as the GPS Configurator, or Trimble Survey Controller software.

There are two ways to configure the 5700 receiver:

- Configuring the receiver in real time
- Applying the settings in an application file

This chapter provides a brief overview of each of these methods, and describes the contents and use of application files.



## Configuring the Receiver in Real Time

The GPS Configurator, and the Trimble Survey Controller software both support real-time configuration of the 5700 receiver.

When you configure the receiver in real time, you use one of these software applications to specify which settings you want to change. When you apply the changes, the receiver settings change immediately.

Any changes that you apply to the receiver are reflected in the Current application file, which is always present in the receiver. The Current application file always records the most recent configuration, so if you apply further changes (either in real time or using an application file) the Current file is updated and there is no record of the changes that you applied originally.

For more information on configuring the receiver in real time, see Chapter 7, Software Utilities.

## Configuring the Receiver Using Application Files

An application file contains information for configuring a receiver. To configure a receiver using an application file, you need to create the application file, transfer it to the receiver, and then apply the file's settings. Use the GPS Configurator software to perform all these tasks.

For more information on applying application files, see Chapter 7, Software Utilities.

## Application Files

An application file is organized into records. Each record stores configuration information for a particular area of receiver operation. Application files can include the following records:

- File Storage
- General Controls



- Serial Port Baud/Format
- Reference Position
- Logging Rate
- SV Enable/Disable
- Output Message
- Antenna
- Device Control
- Static/Kinematic
- Input Message
- Timed Activation

An application file does not have to contain all of these records. When you apply an application file, any option that is not included in the records in the file remains at its current setting. For example, if you apply an application file that only specifies the elevation mask to use, all other settings remain as they were before the application file was applied.

You can store up to twenty different application files in battery-backed memory on the receiver. You can apply an application file's settings at the time it is transferred to the receiver, or at any time afterwards.

## Special application files

The 5700 receiver has three special application files, which control important aspects of the receiver's configuration.

### Default application file

The default application file (Default.cfg) contains the original receiver configuration, and cannot be changed. This file configures the receiver after it is reset. You can reset the receiver by holding down **[P]** for at least 15 seconds, or by using the reset option in the GPS Configurator software.



For more information on the default receiver settings, see Default Settings, page 78.

Although you cannot change or delete the default application file, you can use a power up application file to override any or all of the default settings.

### **Current application file**

The current application file (Current.cfg) reflects the current receiver configuration. Whenever you change the receiver's configuration, either in real time or by applying an application file, the current file changes to match the new configuration.

You cannot delete the current file or change it directly, but every change to the receiver's current configuration is applied to the current file as well.

When you switch off the receiver then turn it on again, all the settings from the current application file are applied, so you do not lose any changes that you have made. The only exceptions are the following logging parameters:

- Logging rate
- Position rate
- Elevation mask

These parameters are always reset to the factory default values whenever the receiver is switched off.

### **Power Up application file**

The power up application file (Power\_up.cfg) is optional. If a power up file is present, its settings are applied whenever the receiver is powered up.



In this file, you can specify that the receiver is reset to defaults before the power up settings are applied. This ensures that restarting the receiver always results in the same configuration. This method is useful for defining “default” settings for the receiver that differ from those in the default file, which cannot be changed.

Alternatively, you can specify that the power up settings are applied immediately after the current application file’s settings have been applied. Restarting the receiver results in a configuration that uses your default settings for the options you define in the power up file, but the current settings for all other options.

By default, there is no power up application file on the receiver. If you want to use a power up application file, you need to create an application file in the GPS Configurator software and make sure that the *As auto power up file* option is selected in the *File* page. When you transfer this file to the receiver, it is transferred with the name *Power\_up.cfg*, and becomes the new power up file.

The power up file is the only special application file that you can overwrite or delete from the receiver.

## Timed application files

A timed application file contains a Timed Activation record which specifies when this file is to be applied. The main use of a timed application file is to automatically start or stop logging at a predefined time.

The Timed Activation record specifies:

- the UTC date and time when the application file is to be applied for the first time
- the interval at which the file is to be reapplied

If you do not specify a repeat interval, the settings are applied only once, at the specified time. If the file specifies a repeat interval, the file’s settings are reapplied at the specified interval until the file is deactivated.



**Note** – *If the receiver is logging continuously, the current logging takes precedence over any timed application file stored in the receiver.*

### Defining timed application files

To send timed application files to a 5700 receiver, set up scheduled survey sessions in the GPS Configurator software. You can define multiple sessions, each specifying:

- basic logging parameters (data logging rate, position logging rate, and elevation mask)
- a starting time
- a duration

When you apply the current settings in the GPS Configurator software, each defined survey session is sent to the 5700 receiver as a pair of timed application files: the first includes the logging settings and start time, and the second contains settings that stop logging at the end time (which is calculated automatically from the duration you specify).

For more information on scheduled survey sessions, refer to the GPS Configurator Help.

The 5700 receiver can store up to 20 application files, so you can define a maximum of 10 scheduled survey sessions (10 pairs of start/stop timed application files).

### Sleep mode

Whenever you press [P] to turn off the 5700 receiver, it checks for a timed application file that is due to be activated in the future. If one exists, the receiver goes into Sleep mode instead of powering down.

In Sleep mode, the yellow Logging/Memory LED flashes every three seconds. The receiver wakes up five minutes before the scheduled activation time, so that it is ready to begin logging at the scheduled time.



## Applying application files

An application file's settings do not affect the receiver's configuration until you **apply** the application file. You can do this at the same time that you save the file. Alternatively, save the file on the computer or in the receiver, then open it later and apply its settings.

**Note** – *If the application file is a timed file, its settings do not take effect as soon as you apply the file, but at the time that the file specifies for its activation.*

## Storing application files

You can store application files that you create in the GPS Configurator software on both your receiver and computer. Each file can, for example, represent a different user sharing the same receiver, or a particular mode of operation or survey style. Saving application files on your computer as well as in your receiver is optional, but it is useful because:

- it gives you a permanent copy of the settings you have sent to a receiver, for audit or your own reference
- you can use the same file to configure multiple receivers identically
- you can use an existing application file as a template for creating other application files with similar settings

## Naming application files

The filename that you use to store the application file in the computer and the name under which the file is stored in the receiver are always the same. This makes recognizing and keeping track of your application files easier. If you change the name of the file on the receiver, this changes the filename used to store the application file on your computer. Similarly, if you change the filename on the computer, the name of the file in the receiver will change.







# Transferring Data

## In this chapter:

- Introduction
- Connecting to the Office Computer
- Transferring Data
- Transferring Files Directly from a CompactFlash Card
- Deleting Files in the Receiver
- Supported File Types

## Introduction

The 5700 receiver keeps satellite measurements and other data in files stored on a CompactFlash card. These files cannot be processed until you transfer them to your office computer.

**Note** – *The 5700 receiver supports a maximum of 512 files on the CompactFlash cards.*



## 6 Transferring Data

On returning to the office after completing a survey, transfer the field data to a computer that has the Trimble Geomatics Office™ software installed. You can then process the survey data in Trimble Geomatics Office to produce baselines and coordinates.

### Connecting to the Office Computer

The 5700 receiver has three serial (COM) ports and one USB port for connection to the office computer. A USB connection is up to ten times faster than normal serial communications.

Use the standard power/serial data cable to connect the 5700 receiver to the computer, as shown in Figure 6.1.

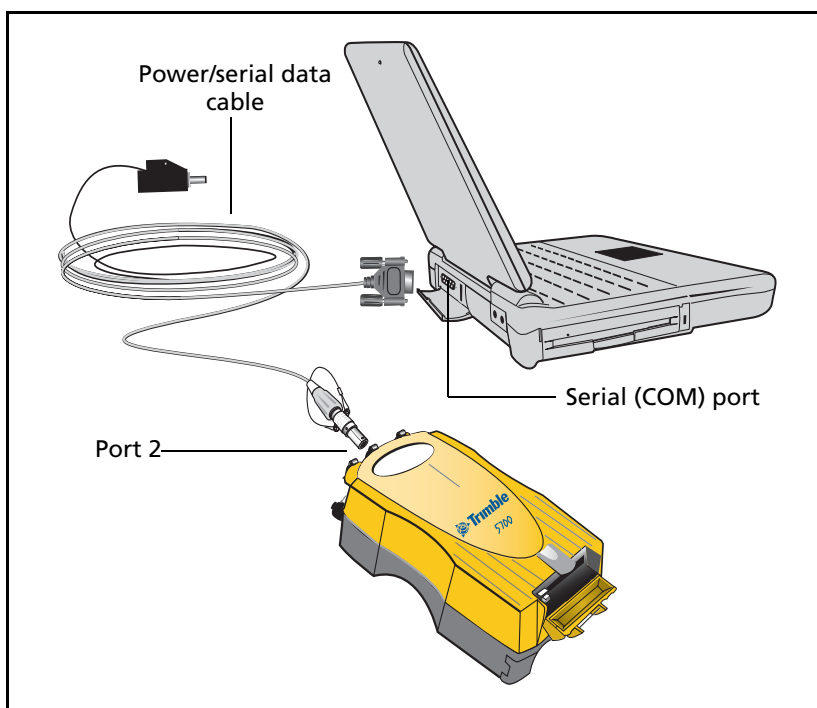


Figure 6.1 Connecting 5700 receiver to a computer for serial data transfer



Use the USB cable to connect the 5700 receiver to the computer, as shown in Figure 6.2.

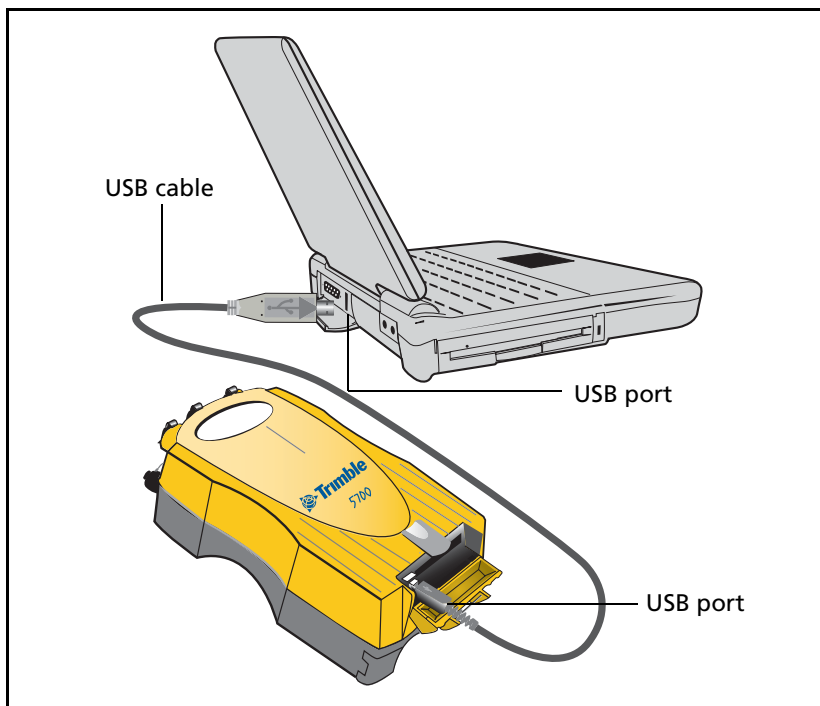


Figure 6.2 Connecting 5700 receiver to a computer for USB data transfer

**Note** – When the 5700 receiver is connected to a USB port on a computer, it is treated as a peripheral device of the computer. If the receiver is unplugged or powered down, a warning message is displayed on the computer.



## Transferring Data

Transfer the data files to the computer using the Trimble Data Transfer utility. You can run this utility as a standalone program or from within Trimble Geomatics Office. For more information about the transfer process, refer to the Data Transfer Help.

**Note** – *When you connect to a 5700 receiver in the Data Transfer utility, you must use a GPS Receiver (5000 Series) device definition. If you use a GPS Receiver (4000 Series) device definition, the Data Transfer utility will be unable to establish communication with the 5700 receiver.*

When transfer is complete, the Data Transfer utility automatically converts the file to the DAT format. If you are using Data Transfer from within Trimble Geomatics Office, the *Check-in* dialog appears. For more information, refer to the *Trimble Geomatics Office User Guide*.

**Note** – *A file in DAT format is approximately six times the size of the corresponding file in the 5700 receiver's internal format. Before transferring files, make sure that there is enough space on your computer.*

## Transferring Files Directly from a CompactFlash Card

All data is stored in a 5700 receiver on an internal CompactFlash card. There are two ways to transfer files between the receiver and your office computer:

- Connect the receiver to the office computer and use the Data Transfer utility to transfer files.
- Remove the CompactFlash card from the receiver and connect it directly to your office computer, where it functions like a normal disk drive. Use Windows Explorer to transfer files.

When you use the Data Transfer utility to transfer data files from the CompactFlash card while it is still inserted in the 5700 receiver, the Data Transfer utility converts the raw receiver data (.T01) files you select into the Trimble DAT file format.




However, if you connect the CompactFlash card to your computer and then copy or move files to your computer, it treats the card like any other disk drive, and transfers the files without converting them. You need to convert these raw receiver files to DAT format files before you can use them on your office computer.

You can convert receiver data files by using a Windows Explorer extension which is installed on your computer when you install the Data Transfer utility.

**Note** – *Although this extension is only available if you have the Data Transfer utility installed, you do not have to run the Data Transfer utility to use it.*

To convert a .T01 file on your office computer into the DAT format:

1. On your office computer, open Windows Explorer and navigate to the location of the .T01 file.
2. Right-click the file, and from the menu that appears select *Convert to DAT format*:

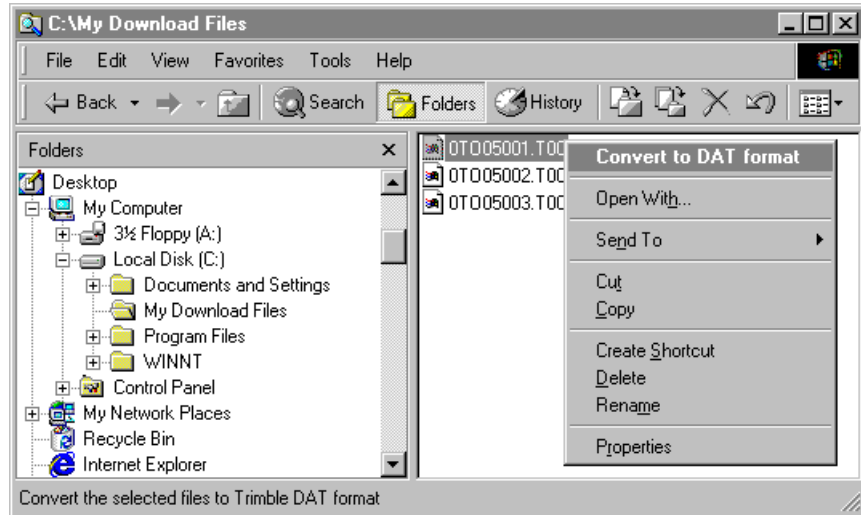


The *DAT File Conversion* dialog appears while the file is converted. When the dialog disappears, the file conversion is complete.



A new file with the same filename but a .dat extension appears in the same folder as the .T01 file.

## Deleting Files in the Receiver

 You can delete files stored in the 5700 receiver at any time. Do one of the following:

- Use the Data Transfer utility in Trimble Geomatics Office.
- Use the controller.
- Hold down the power button  for 30 seconds after the receiver has been powered on. (When you use this method, **all** data is deleted, and the CompactFlash card is reformatted.)
- Use GPS Configurator.

## Supported File Types

Table 6.1 shows the file types that you can transfer to or from a 5700 receiver, and the software or utility that you must use to transfer each file type.

**Table 6.1** Supported file types

File Type	Extensions	Transfer from 5700 receiver?	Transfer to 5700 receiver?	Software
Ephemeris	.eph	Yes	No	Data Transfer
Raw observations	.T01, .dat	Yes	No	Data Transfer
Receiver firmware files	.elf	No	Yes	WinFlash
Application files	.cfg	Yes	Yes	GPS Configurator

**Note** – The 5700 receiver supports a maximum of 512 files on the CompactFlash card. Files stored on the compact flash must be 8.3 format. The 5700 receiver does not support extended file names.



# Software Utilities

**In this chapter:**

- [The GPS Configurator Software](#)
- [The WinFlash Software](#)




This chapter provides information on the software utilities that you can use with the 5700 receiver.

## The GPS Configurator Software

The GPS Configurator office software enables you to configure a survey-grade Trimble GPS receiver connected to your desktop computer and save the configurations. Use the GPS Configurator software to view the current receiver settings, check GPS information, and change receiver settings.

### Configuring the 5700 receiver

1. Connect Port 1, 2, or 3 on the receiver to a serial (COM) port on the computer and apply power.
2. To start GPS Configurator, click  **Start**, then select *Programs / Trimble / GPS Configurator / GPS Configurator*.  
The software automatically establishes a connection with the 5700 receiver.
3. Make appropriate selections for your required receiver settings.  
For more information, refer to the GPS Configurator Help.
4. Click **Apply**.

The settings in GPS Configurator are applied to the receiver.

Alternatively, you can save the settings to your computer. For more information, refer to the GPS Configurator Help.



## The WinFlash Software

The WinFlash software communicates with Trimble products to perform various functions including:

- installing software, firmware, and option upgrades
- running diagnostics (for example, retrieving configuration information)
- configuring radios

For more information, online help is also available when using the WinFlash software.

**Note** – *The WinFlash software runs on Microsoft Windows 95, 98, Windows NT®, 2000, Me, or XP operating systems.*

## Installing the WinFlash software

The WinFlash software can be installed from the *Trimble R7, Trimble R8, 5700, and 5800 GPS Receivers CD*, or from the Trimble website.

### Installing the WinFlash software from the CD

1. Insert the disk into the CD drive on your computer.
2. Using Windows Explorer, navigate to the CD drive.
3. Double-click *Setup.exe*.
4. Follow the onscreen instructions.

## Upgrading firmware

Your 5700 receiver is supplied with the latest version of receiver firmware installed. If a later version becomes available, upgrade the firmware installed on your receiver.

The WinFlash software guides you through the firmware upgrade process. The steps required are described below. For more information, refer to the WinFlash Help.



To upgrade the 5700 receiver firmware:

1. Start the WinFlash software. The *Device Configuration* screen appears.
2. From the *Device type* list, select 5700 Receiver.
3. From the *PC serial port* field, select the serial (COM) port on the computer that the receiver is connected to.
4. Click **Next**.

The *Operation Selection* screen appears. The *Operations* list shows all of the supported operations for the selected device. A description of the selected operation is shown in the *Description* field.

5. Select *GPS software upgrade* and click **Next**.

The *GPS Software Selection* window appears. This screen prompts you to select the software that you want to install on the 5700 receiver.

6. Select the latest version from the *Available Software* list and click **Next**.

The *Settings Review* window appears. This screen prompts you to connect the receiver, suggests a connection method, and then lists the receiver configuration and selected operation.

7. If all is correct, click **Finish**.

Based on the selections shown above, the *Software Upgrade* window appears and shows the status of the operation (for example, **Establishing communication with the 5700. Please wait.**).

8. Click **OK**.

The *Software Upgrade* window appears again and states that the operation was completed successfully.

9. Click **Menu** to select another operation, or click **Exit** to quit the WinFlash software.



10. If you click **Exit**, another screen appears asking you to confirm that you want to quit the WinFlash software. Click **OK**.

## Adding frequencies for the 450 MHz internal radio

If your 5700 receiver has the optional internal radio installed, you can use the WinFlash software to add frequencies to the default list.

To add radio frequencies:


1. Start the WinFlash software. The *Device Configuration* screen appears.
2. From the *Device type* list, select 5700 Receiver.
3. From the *PC serial port* field, select the serial (COM) port on the computer that the receiver is connected to.
4. Click **Next**.

The *Operation Selection* screen appears. The *Operations* list shows all of the supported operations for the selected device. A description of the selected operation is shown in the *Description* field.

5. Select Configure Radio and click **Next**.



The *Frequency Selection* dialog appears:

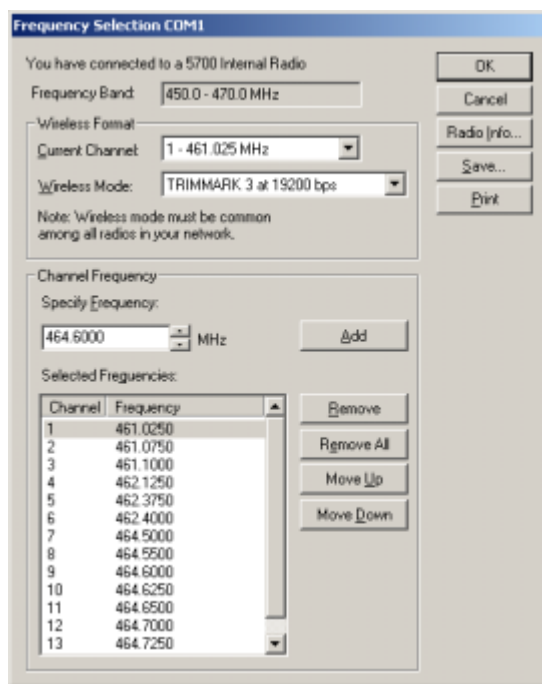

6. In the *Wireless Format* group, select the appropriate channel and wireless mode. The *Wireless Mode* must be the same for all radios in your network.
7. In the *Edit Frequency* field, enter the frequency you require.
8. Click **Add**. The new frequency appears in the *Selected Frequencies* list.

**Note** – The frequencies that you program must conform to the channel spacing and minimum tuning requirements for the radio. To view this information, click **Radio Info**. You may select either 12.5 or 25 kHz channel spacing. All radios in your network must use the same channel spacing.



9. Once you configure all the frequencies you require, click **OK**.  
The WinFlash software updates the 5700 receiver's radio frequencies and then restarts the receiver.

## Configuring the internal 900 MHz radio setup

To configure the internal 900 MHz radio, use one of the following:

- The Trimble Survey Controller software running on a Trimble controller
- The WinFlash software (provided on the *Trimble R7, Trimble R8, 5700, and 5800 GPS Receivers CD*)

The internal radio has 40 selectable networks. You must choose the same network that is configured in the base radio you want to receive from.

## Configuring the radio network using the Trimble Survey Controller software

1. Connect the data/power cable to the controller and the receiver and turn on the controller. The receiver starts automatically.
2. From the main menu on the controller, select *Configuration*.
3. In the dialog that appears, select *Survey styles*, then from the *Type* field, select *RTK*.
4. Select *Rover radio*, then from the *Type* field select *Trimble Internal*.
5. Tap the Connect softkey.
6. Once connected, in the *Network number* field enter the number of the network set on your base radio.  
*Note – The Base Radio Mode field is not used here.*
7. Tap the Enter softkey to complete configuration.



### Configuring the radio network using the WinFlash software

1. Connect the data/power cable to Port 1 on the receiver.
2. Connect the female DE-9 connector on the other end of the data/power cable to a serial (COM) port on the computer.
3. Start the WinFlash software. The *Device Configuration* dialog appears.
4. From the *Device type* list, select *5700 Receiver*.
5. From the *PC serial port* field, select the serial port on the computer that the receiver is connected to and click **Next**.
6. From the *Operation selection* dialog, select *Configure radio* and click **Next**.
7. Confirm that your current settings are correct and click **Finish**. The *Configure 900MHz radio* dialog appears.
8. In the *Network number* field, select the same network that is set on your base radio.
9. In the *Country setting* field, select one of the following (according to how your base radio was shipped):
  - Your country (if available). This sets the radio to the a specific frequency range being transmitted by the base radio.
  - A single frequency. This limits the frequencies used to those authorized in your particular country.
10. Click **OK**.

The WinFlash software updates the radio settings and then restarts the receiver.



# Specifications

**In this chapter:**

- Physical Specifications
- Positioning Specifications
- Technical Specifications



This chapter details the specifications of the 5700 receiver.

Physical Specifications

Table 8.1 lists physical specifications for the 5700 receiver. The temperature rating of the receiver applies only when all doors on the receiver are closed.

Table 8.1 Physical specifications

Feature	Specification
Size	13.5 cm W x 8.5 cm H x 24 cm L (5.3 in. W x 3.4 in. H x 9.5 in. L)
Weight (with 2 batteries inserted)	1.4 kg (3.0 lb)
Battery life (at 20 °C)	RTK with internal radio: 3.5 hours No internal radio: 5 hours
Power input	11–28 VDC
Operating temperature	–40 °C to +65 °C (–40 °F to +149 °F) <sup>a</sup>
Storage temperature	–40 °C to +80 °C (–40 °F to +176 °F)
Humidity	100% condensing, unit fully sealed
Casing	Dust-proof, shock- and vibration-resistant

<sup>a</sup>The USB port only operates when the temperature is above 0 °C (32 °F). The internal batteries only charge when the temperature is in the range 0 °C to 40 °C (32 °F to 104 °F)



Positioning Specifications

Table 8.2 lists positioning specifications for the 5700 receiver.

Table 8.2     Positioning specifications

Positioning	Mode	Horizontal Accuracy (RMS)	Vertical Accuracy (RMS)
RTK (OTF)	Synchronized	1 cm + 1 ppm (× baseline length)	2 cm + 1 ppm (× baseline length)
	Low Latency	2 cm + 2 ppm (× baseline length) <sup>a</sup>	3 cm + 2 ppm (× baseline length) <sup>a</sup>
L1 C/A Code Phase	Synchronized/ Low Latency	.25 m + 1 ppm RMS	.50 m + 1 ppm RMS
Static/ FastStatic	N/A	5 mm + 0.5 ppm (× baseline length)	5 mm + 1 ppm (× baseline length)
WAAS	N/A	Less than 5 m <sup>b</sup>	Less than 5 m <sup>b</sup>

<sup>a</sup>Depends on radio link latency.

<sup>b</sup>3D RMS values depend on WAAS system performance.

Technical Specifications

Table 8.3 lists technical specifications for the 5700 receiver.

Table 8.3     Technical specifications

Feature	Specification
Tracking	24 channels L1 C/A code, L1/L2 full cycle carrier Fully operational during P-code encryption WAAS satellite tracking
Signal processing	Maxwell architecture Very low-noise C/A code processing Multipath suppression
Start-up	Cold start: < 60 seconds from power on Warm start: < 30 seconds with recent ephemeris



**Table 8.3    Technical specifications (Continued)**

Feature	Specification
Initialization	Automatic while moving or static
Minimum initialization time	10 sec + $0.5 \times$ baseline length (km)
Communications	Three RS-232 serial ports (Port 1, Port 2, and Port 3) Baud rates up to 115,200 bps RTS/CTS flow control negotiation supported on Port 3 only One USB port (download only)
Configuration	Via user-definable application files or GPS Configurator
Output formats	NMEA-0183: AVR; GGA; GST; GSV; PTNL,GGK; PTNL,GGK_SYNC; HDT; PTNL,PJK; PTNL,PJT; ROT PTNL,VGK; VHD; VTG; ZDA GSOF (Trimble Binary Streamed Output) 1PPS RT17



# Default Settings

## **In this chapter:**

- [Default Settings](#)
- [Resetting to Factory Defaults](#)
- [Examples](#)



All 5700 receiver settings are stored in application files. The Default application file, Default.cfg, is stored permanently in the receiver, and contains the factory default settings for the 5700 receiver. Whenever the receiver is reset to its factory defaults, the current settings (stored in the Current application file, Current.cfg) are reset to the values in the Default application file.

You cannot modify the Default application file. However, if there is a Power Up application file (Power\_Up.cfg) in the receiver, the settings in this file can be applied immediately after the Default application file, overriding the factory defaults.

For more information about application files, see Application Files, page 52.

## Default Settings

Table 9.1 shows the default settings for the 5700 receiver, as defined in the default application file.

**Table 9.1 Default settings**

Function		Factory Default
SV Enable		All SVs enabled
General Controls:	Elevation mask	13°
	SNR mask	7
	RTK positioning mode	Low Latency
	Motion	Kinematic
Power Output 3		Disabled
1PPS time tags		Off
ASCII time tags		Off
Serial Port 1:	Baud rate	38400
	Format	8-None-1
	Flow control	None



**Table 9.1 Default settings (continued)**

Function		Factory Default
Serial Port 2:	Baud rate	38400
	Format	8-None-1
Serial Port 3:	Baud rate	38400
	Format	8-None-1
	Flow control	None
Input Setup:	Station	Any
NMEA/ASCII (all messages)		All Ports Off
Streamed output		All Types Off Offset = 00
RT17/Binary		All Ports Off
CMR output		[Static] CMR: cref ID 0000
RTCM output		RTCM: Type 1 ID 0000
Reference position:	Latitude	0°
	Longitude	0°
	Altitude	0.00 m HAE
Antenna:	Type	Unknown external
	Height (true vertical)	0.00 m
	Group	All
	Measurement method	Bottom of antenna mount
Logging rate		15 sec
Position rate		5 min
Measurement rate		10 Hz



## Resetting to Factory Defaults

To reset the 5700 receiver to its factory defaults, do one of the following:

- Press and hold down **[P]** on the 5700 receiver for 15 seconds.
- In GPS Configurator, select the *General* tab and then click **Reset Receiver**.

## Examples

The following examples show how the 5700 receiver uses the default settings and special application files in various situations.

### Default behavior

The factory defaults are applied whenever you start the receiver. If a Power Up file is present in the receiver, its settings are applied immediately after the default settings, so you can use a Power Up file to define your own set of defaults.

When you turn the receiver on and ...	then logging settings are ...	and logging ...
it is the first time that the receiver has been used	the factory defaults	does not begin automatically
you have reset the receiver to its factory defaults	the factory defaults, or those in the Power Up file <sup>a</sup>	does not begin automatically
you have performed a full reset	the factory defaults, because resetting deletes any Power Up file	does not begin automatically

<sup>a</sup>A factory default setting is only used if the setting is not defined in the Power Up file.



Power up settings

When you turn the receiver off, any changes that you have made to logging settings are lost and these settings are returned to the factory defaults. Other settings remain as defined in the Current file. The next time you turn on the receiver, the receiver checks for a Power Up file and, if one is present, applies the settings in this file.

When you use <b>P</b> to turn the receiver off then on again and ...	then logging settings are ...	and all other settings are ...
you changed the receiver settings by applying an application file	the factory defaults	the last settings used
you changed the receiver settings using configuration software	the factory defaults	the last settings used
there is a Power Up application file in the receiver	the factory defaults, or those in the Power Up file <sup>a</sup>	the last settings used, or those in the Power Up file <sup>a</sup>

<sup>a</sup>A factory default setting is used only if the setting is not defined in the Power Up file.

Logging after power loss

If the receiver loses power unexpectedly, when power is restored the receiver tries to return to the state it was in immediately before the power loss. The receiver does not reset itself to defaults or apply any Power Up settings. If the receiver was logging when power was lost unexpectedly, it resumes logging when power is restored.



However, when you switch off the receiver using [P], the receiver behaves as if you pressed [D] to stop logging before you pressed [P]. In this case, when power is restored normally, logging does not begin until you start it manually.

When the receiver is logging data and then loses power ...	then when power is restored, data logging ...	and logging settings are ...	and all other settings are ...
unexpectedly	resumes automatically	the last settings used	the last settings used
when you press [P]	does not resume	the factory defaults	the last settings used

Disabling logging

You can disable logging by setting the receiver’s data logging and position logging rates to Off. However, if you press [D] while logging is disabled, the receiver will still log data, using the default logging settings.

When you have disabled logging ...	then if you press [D] to start logging, logging settings are ...
using the Trimble Survey Controller or GPS Configurator software	the factory defaults
in the Power Up application file	the factory defaults

Application files

You can use application files to change the settings in the receiver. Sending an application file to the receiver does not necessarily apply the file’s settings; you can apply a file’s settings at any time after sending it to the receiver. You can also define timed application files. A timed application file contains receiver settings, but also includes a date and time when it is automatically activated.



If there is a timed application file on the receiver, the receiver automatically applies the file's settings and begins logging (if logging settings are included in the file) at the specified time. If the receiver is in Sleep mode, it wakes up five minutes before the start time of the timed application file, and then begins logging, if required, at the specified start time.

When you send an application file to the receiver and ...	then the receiver settings are changed ...
you apply the file's settings immediately	as soon as you send the file to the receiver
you apply the file later	as soon as you apply the file
it is a timed application file	at the specified activation time







# Cables and Connectors

**In this chapter:**

- Port 1, 2, and 3 Connectors
- Power/serial data cable
- Event Marker/1PPS Cable
- GPS Antennas and Cables



This chapter provides pinout information for the 5700 receiver standard and optional cables. This information can be used to build special cables for connecting the 5700 receiver to devices and instruments not supported by the standard and optional cables.

## Port 1, 2, and 3 Connectors

Figure 10.1 shows the location of the 5700 serial ports.

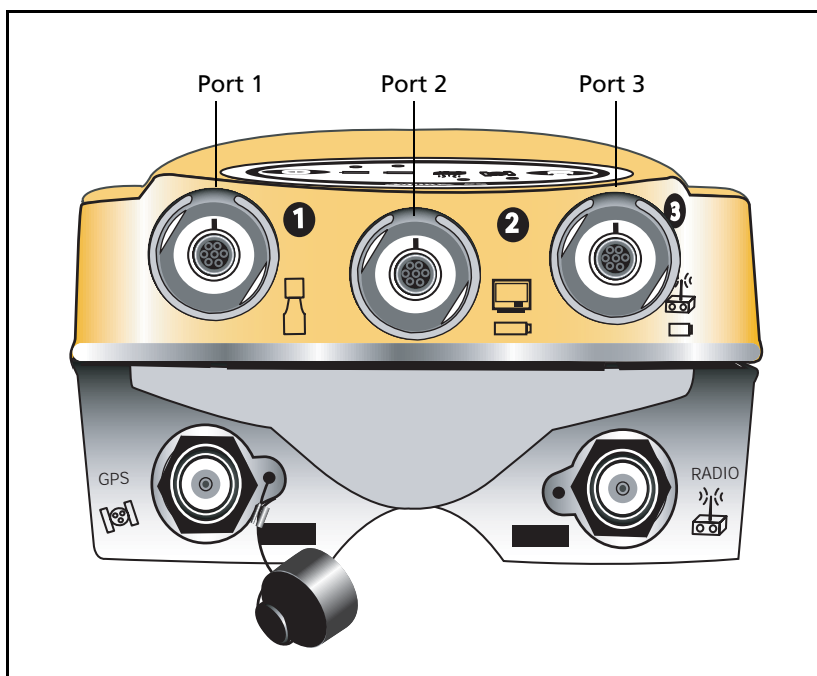


Figure 10.1 5700 serial ports

Figure 10.2 gives pinout requirements for the connector labeled Port 1. The pin locations for the Port 2 and Port 3 connectors are identical.



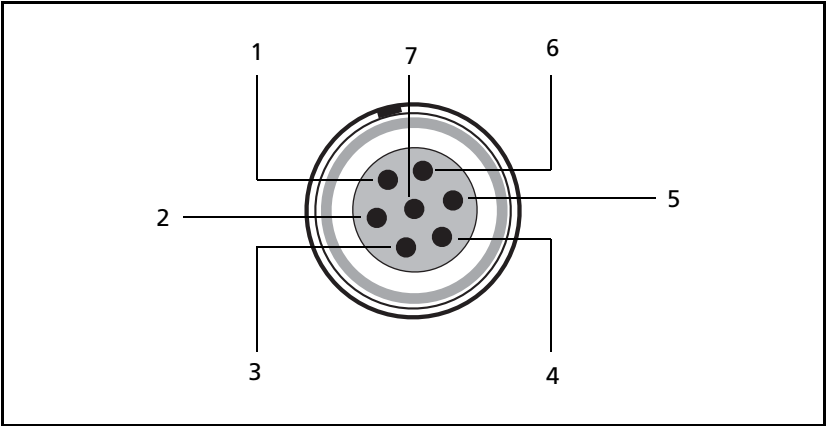


Figure 10.2 Pinout connector diagram

Table 10.1 describes the pinout functionality.

Table 10.1 5700 port pinouts

Pin	Pinout function		
	Port 1 (controller, event, or computer)	Port 2 (Power in, computer, PPS, or event)	Port 3 (External radio or power in)
1	Signal GND	Signal GND	Signal GND
2	GND	GND	GND
3	TX data out (TXD1)	TX data out (TXD2)	TX data out (TXD3)
4	RTS1	1PPS	RTS3
5	CTS1/Event 2	Event 1	CTS3
6	Power Out (+)	Power In (+)	Power In/Out (+)
7	Serial data in (RXD1)	Serial data in (RXD2)	Serial data in (RXD3)



# Power/serial data cable

Table 10.2 gives pinout information for the power/serial data cable (PN 32345), which is supplied with the 5700 receiver.

**Table 10.2** Power/serial data cable pinouts

Lemo 0-shell connector 7 Pin		Direction	DE9-F connector 7 Conductors			Power lead 2 Conductors	
Pin	Function		Pin	Color	Function	Color	Function
1	Signal ground	↔	5	Brown	Signal ground		
2	GND	→				Black	V-OUT
3	TXD	→	2	Orange	TXD		
4	RTS/TXD	→	8	Blue	RTS		
5	CTS/RXD	←	7	Green	CTS		
6	PWR	←				Red	Power IN (+)
7	RXD	←	3	Yellow	TXD		

***Note** – Table 10.2 assumes that the cable is attached to the connector labeled Port 1 or Port 3.*

# Event Marker/1PPS Cable

The event marker/1PPS cable shown in Figure 10.3 provides a breakout box with two BNC (female) connectors for providing 1PPS input and event marker output.

Connect a device that accepts 1PPS output pulses to the BNC connector labeled 1PPS on the breakout box. Connect a device that outputs event marker pulses to the 5700 receiver, such as a photogrammetric camera, to the BNC connector labeled Event Marker on the breakout box.



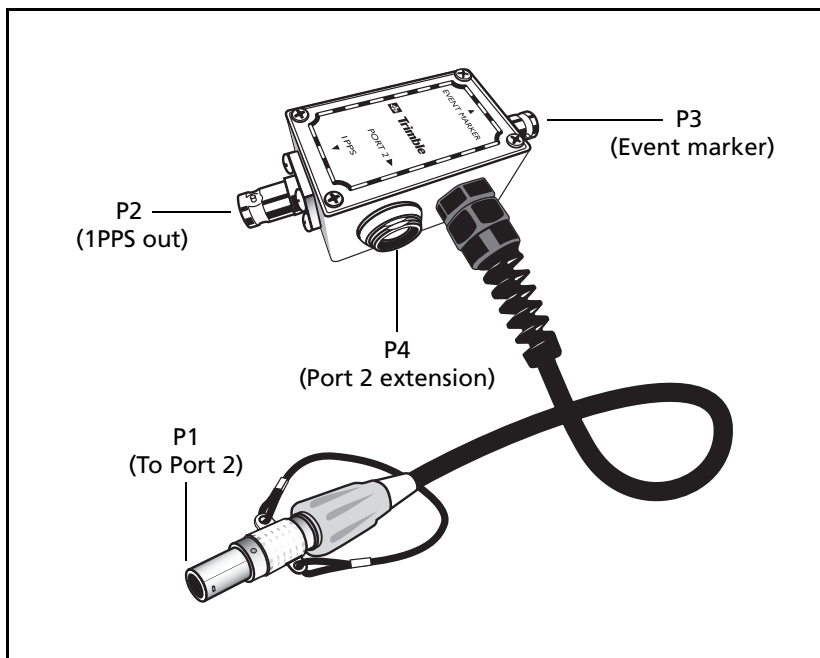


Figure 10.3 Event marker/1PPS cable

In addition, the breakout box includes a Lemo 7-pin connector to extend serial communications and/or power on Port 2. Because the BNC connectors are used to service the event marker and 1PPS features, pins 4 (1PPS) and 5 (Event Marker) are inactive on the Lemo connector.

For Port 2 pinouts, see Port 1, 2, and 3 Connectors, page 86. For more information on 1PPS input and event marker output, see Chapter 11, Event Marker Input and 1PPS Output.



Table 10.3 gives pinout information for the event marker/1PPS cable which is supplied with the 5700 receiver. The event marker/1PPS cable is only used with the 5700 connectors labeled Port 1 (for event marker output) and Port 2.

**Table 10.3 Event marker/1PPS cable pinouts**

P1: Lemo 7-Pin Port 2 5700		Direction	P2: BNC-F connector (1PPS)	P3: BNC-F connector (Event Marker)	P4: Lemo 7s Port 2 extension
Pin	5700 function		Pin	Pin	Pin Function
1	Signal ground	←			1 Signal ground
2	GND	→	GND	GND	2 GND
3	Serial data out (TXD2)	←			3 Serial data in (TXD2)
4	1PPS	←	Center pin		4 No Connect
5	Event Marker	↔		Center pin	5 No Connect
6	Power IN (+)	→			6 Power IN (+)
7	Serial data in (RXD2)	←			7 Serial data out (RXD2)

## GPS Antennas and Cables

The antenna that a receiver uses to collect satellite signals is sometimes called a GPS antenna to distinguish it from a radio antenna. Radio antennas are used for communication between receivers and external networks or systems.

**Note** – To use older models of antennas, such as the Choke Ring or Micro-Centered L1/L2 antennas, with a 5700 receiver, you need to use an antenna power adapter and an external power source for the antenna. For more information, see *Antennas*, page 32.



Connect the 5700 receiver to its GPS antenna using the yellow TNC connector. Use a coaxial cable with a right-angle TNC plug at the antenna end.

If the antenna cable length is ...	use ...
up to 15 meters (45 feet)	RG-58 cable
up to 30 meters (100 feet)	RG-214 cable
over 30 meters (100 feet)	one of the following: <ul style="list-style-type: none"><li>• in-line amplifier</li><li>• semi-rigid coaxial cable</li><li>• a low-loss cable assembly</li></ul>







# Event Marker Input and 1PPS Output

## In this chapter:

- Introduction
- Event Marker Input
- 1PPS Output

## Introduction

The 5700 receiver can accept event marker input on Port 1 and Port 2, and can generate 1PPS output on Port 2.

## Event Marker Input

Event marker input is used to log a precise GPS time tag whenever an externally generated pulse, such as one generated at the time of the shutter closing from a photogrammetric camera, is received.



## 11 Event Marker Input and 1PPS Output

The event is triggered when the source pulse voltage transitions between 1.0 V DC and 2.0 V DC in less than 100 nsec. Trimble recommends that you use TTL level inputs. You can configure the receiver to recognize either a positive (rising) or negative (falling) voltage as the leading edge of a pulse. The accuracy of the associated time tag recorded for an event is determined by the GPS accuracy (typically less than 1  $\mu$ sec.).

The 5700 receiver records each event in the current data file. This record includes the port on which the event was received.


### Enabling and configuring event marker input

To enable or configure the event marker input function, you need either GPS Configurator.

#### In real time

You can use GPS Configurator to configure a Trimble GPS receiver connected to your office computer. For more information, see *The GPS Configurator Software*, page 66, or refer to the *GPS Configurator Help*.

To enable event marker input:

1. Connect the computer to the 5700 receiver.
2. Press **[P]** to turn on the 5700 receiver.
3. To start GPS Configurator, click , then select *Programs / Trimble / GPS Configurator / GPS Configurator*.

The *GPS Configurator* dialog appears and the software automatically connects to the 5700 receiver.

4. In the *General* tab, select the *Event marker* check box.
5. Select the appropriate option, Positive slope or Negative slope, depending on the type of pulse the external device uses.
6. Click **Apply**.



GPS Configurator sends the new configuration information to the 5700 receiver, and the receiver starts to accept event marker input.

7. Click **OK** to exit GPS Configurator.

The software disconnects from the 5700 receiver.

## 1PPS Output

The 5700 receiver can output a one pulse per second (1PPS) time strobe with an associated ASCII time tag output. The pulse is output through Port 2 of the 5700 receiver using the event marker/1PPS cable.

### 1PPS pulse definition

The leading edge of the pulse coincides with the beginning of each UTC second, as shown in Figure 11.1. The pulse is driven by an RS-422 driver between nominal levels of 0 V and 4 V. The leading edge is positive, rising from 0 V to 4 V.

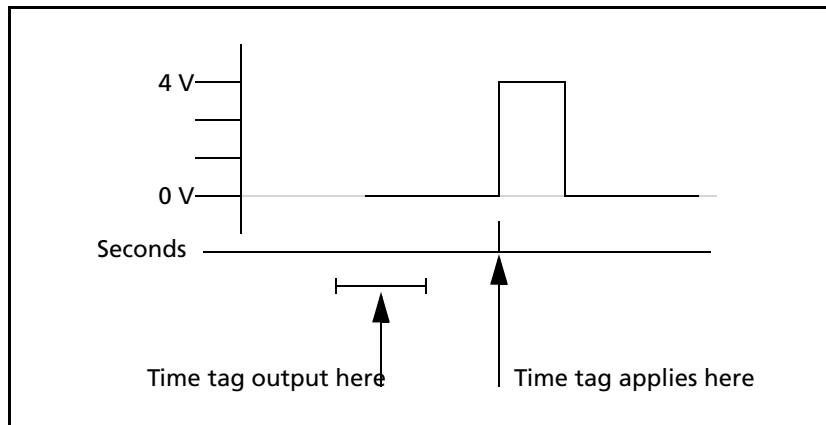


Figure 11.1 Time tag relation to 1PPS wave form



## 11 Event Marker Input and 1PPS Output

The pulse is approximately 8  $\mu$ sec wide, with rise and fall times of about 100 nsec. Resolution is approximately 40 nsec, but several external factors limit accuracy to approximately  $\pm 1 \mu$ sec:

- Position errors, especially with user-entered reference. Each meter of error can result in 3 nsec of error in the 1PPS pulse.
- Antenna cable length. Each meter of cable adds a delay of about 2 nsec to satellite signals, and a corresponding delay in the 1PPS pulse.

### ASCII time tag definition

Each time tag is output about 0.5 second before the corresponding pulse, as shown in Figure 11.1. Time tags are in ASCII format on a user-selected serial port. The format of a time tag is:

UTC yy.mm.dd hh:mm:ss ab

Where:

- *UTC* is fixed text.
- *yy.mm.dd* is the year, month, and date.
- *hh:mm:ss* is the hour (on a 24-hour clock), minute, and second. The time is in UTC, not GPS time.
- *a* is the position-fix type:
  - 1 = 2D Position Fix for E,N only
  - 2 = 3D Position Fix
  - 3 = Single SV Clock-only fix
  - 4 = Automatic Mode
  - 5 = Reference Station Position
  - 6 = Two-Dimensional with Fixed Clock
  - 7 = Overdetermined solution for Clock-only
- *b* is the number of satellites being tracked: 1 to 9, “.” (for 10), “;” (for 11), or “<” (for 12).
- Each time tag is terminated by a *carriage return, line feed* sequence.



A typical printout looks like this:

UTC 93.12.21 20:21:16 56

UTC 93.12.21 20:21:17 56

UTC 93.12.21 20:21:18 56

If *a* and *b* are ??, the time is based on the receiver clock because the receiver is not tracking satellites. The receiver clock is less accurate than time readings extracted from satellite signals.


## Enabling and configuring 1PPS output

To enable or configure the 1PPS output function, you need GPS Configurator.

### In real time

You can use GPS Configurator to configure a Trimble GPS receiver connected to your office computer. For more information, see *The GPS Configurator Software*, page 66, or refer to the GPS Configurator Help.

To enable 1PPS output:

1. Connect the computer to the 5700 receiver.
2. Power on the 5700 receiver.
3. To start GPS Configurator, click  **Start**, then select *Programs / Trimble / GPS Configurator / GPS Configurator*.

The *GPS Configurator* dialog appears and the software automatically connects to the 5700 receiver.

4. Select the *Serial outputs* tab.
5. Select the *1PPS (port 2 only)* check box.
6. If you want ASCII time tags enabled, select the check box and choose an output port.
7. Click **Apply**.



## 11 Event Marker Input and 1PPS Output

---

GPS Configurator sends the new configuration information to the 5700 receiver, and the receiver starts to generate 1PPS output on Port 2.

8. Click **OK** to exit GPS Configurator.

The software disconnects from the 5700 receiver.



**SECTION**

---

**II**

# **5800 GPS RECEIVER**







# Overview

## In this chapter:

- [Features](#)
- [Use and Care](#)
- [COCOM Limits](#)



This chapter introduces the Trimble® 5800 GPS receiver, which is designed for GPS surveying applications. The 5800 receiver incorporates a GPS antenna, receiver, internal radio, and battery in a rugged light-weight unit that is ideally suited as an all-on-the-pole RTK rover. Three LEDs allow you to monitor the satellite tracking, radio reception, data logging status, and power. Bluetooth® wireless technology provides cable-free communications between receiver and controller. The 5800 receiver provides 24 total channels of L1/L2 satellite tracking, and supports logging of raw GPS observables to the handheld controller for post-processed applications.

The 5800 receiver is available as a standalone rover or as part of the GPS Total Station® 5800 system, offering maximum versatility in the system configuration to meet your specific requirements.

## Features

The receiver provides the following features:

- Centimeter-accuracy, real-time positioning with RTK/OTF data, up to 10 Hz position updates
- Submeter-accuracy, real-time positioning using pseudorange corrections
- Adaptive dual-frequency RTK engine
- WAAS/EGNOS capability
- Automatic OTF (on-the-fly) initialization while moving
- Single Lithium-ion rechargeable battery
- Cable-free Bluetooth communications with the Trimble Attachable Control Unit (ACU), or TSCe™ controller with BlueCap® module (“the controller”)
- Two RS-232 serial ports for:
  - NMEA output
  - RTCM SC-104 input and output



- Trimble Format (CMR™ & CMR Plus) input and output
- One TNC port for connecting to a radio antenna
- 2 Mb internal memory for data storage

## Use and Care

The 5800 receiver is designed to withstand the rough treatment that typically occurs in the field. However, the receiver is a high-precision electronic instrument and should be treated with reasonable care.



**WARNING** – Operating or storing the 5800 receiver outside the specified temperature range can damage it. For more information, see Physical specifications, page 140.

High-power signals from a nearby radio or radar transmitter can overwhelm the receiver circuits. This does not harm the instrument, but it can prevent the receiver electronics from functioning correctly. Avoid using the receiver within 400 meters of powerful radar, television, or other transmitters. Low-power transmitters such as those used in cellphones and two-way radios normally do not interfere with 5800 receiver operations.

For more information, see the Trimble technical note *Using Radio Communication Systems with GPS Surveying Receivers*.

## COCOM Limits

The U.S. Department of Commerce requires that all exportable GPS products contain performance limitations so that they cannot be used in a manner that could threaten the security of the United States. The following limitations are implemented on the 5800 receiver.



Immediate access to satellite measurements and navigation results is disabled when the receiver's velocity is computed to be greater than 1000 knots, or its altitude is computed to be above 18,000 meters. The receiver continuously resets until the COCOM situation is cleared.



# Setting up the Receiver

**In this chapter:**

- [Parts of the Receiver](#)
- [Setup Guidelines](#)
- [Pole-Mounted Setup](#)
- [Other System Components](#)



This chapter provides general information on setup, connection, and cabling for the 5800 receiver.

### Parts of the Receiver

All operating controls on the 5800 receiver are located on the front panel. Serial ports and connectors are located on the bottom of the unit.

#### Front panel

Figure 13.1 shows a front view of the 5800 receiver. The front panel contains the three indicator LEDs, and the power button.



Figure 13.1 5800 receiver front panel

The power button controls the receiver's power on or off functions.

The indicator LEDs show the status of power, satellite tracking, and radio reception. For more information, see LED Behavior, page 117.



## Lower housing

Figure 13.2 shows the lower housing of the 5800 receiver. The lower housing contains the two serial ports, one TNC radio antenna connector, the removable battery compartment and the 5/8-11 threaded insert.

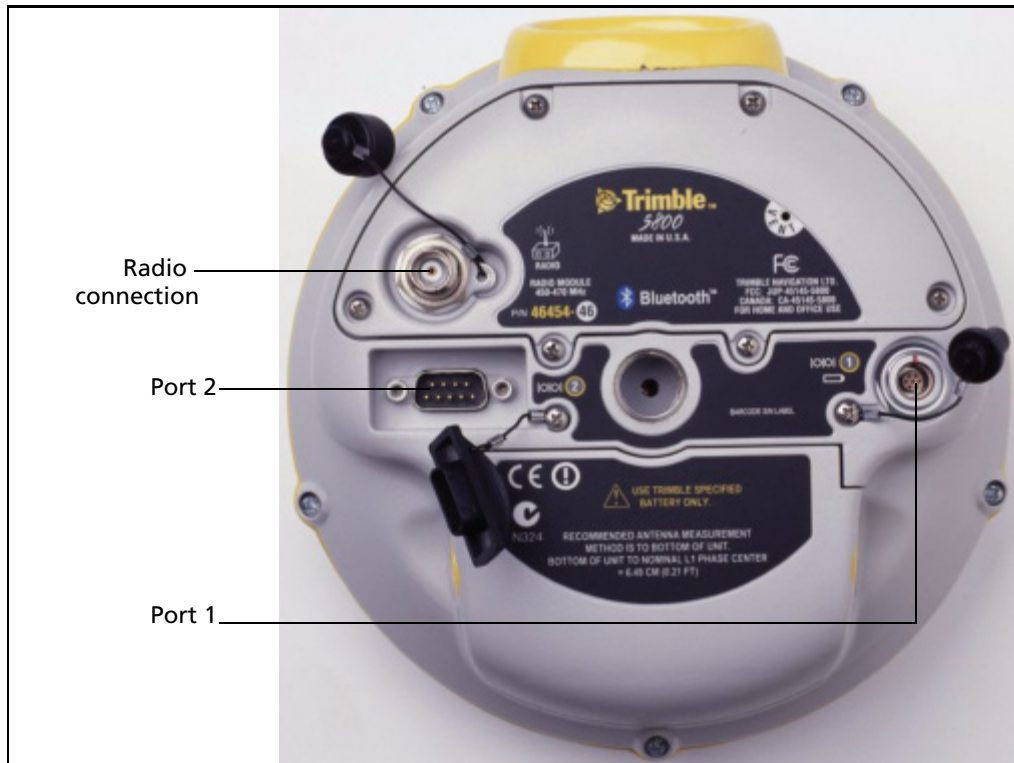





Figure 13.2 5800 receiver lower housing



Each port or connector on the 5800 receiver is marked with an icon to indicate its main function, as shown in Table 13.1.

**Table 13.1    5800 receiver ports**

Icon	Name	Connections
	Port 1	Device, computer, external radio, power in
	Port 2	Device, computer, external radio
	RADIO	Radio communications antenna

Port 1 is a 7-pin 0-shell Lemo connector that supports RS-232 comms and external power input. Port 1 has no power outputs.

Port 2 is a DB-9 male connector that allows for full 9-pin RS-232 comms. Port 2 does not support power in or out. For more information, see Default Settings, page 144 and Cables and Connectors, page 147.

The TNC port connector is for connecting a radio antenna to the receiver internal radio. A whip “rubber duck” antenna is supplied with the system for units with internal UHF or 900 MHz radios. This connector is not used if you are using an external radio receiver. For more information on connecting the 5800 receiver, see the following sections in this chapter.

## Setup Guidelines

Consider the following guidelines when setting up the 5800 receiver.

### Environmental conditions

Although the 5800 receiver has a waterproof housing, reasonable care should be taken to protect the unit. Avoid exposure to extreme environmental conditions, including:



- Water
- Heat greater than 65 °C (149 °F)
- Cold less than -40 °C (-40 °F)
- Corrosive fluids and gases

## Sources of electrical interference

Avoid the following sources of electrical and magnetic noise:

- Gasoline engines (spark plugs)
- Televisions and computer monitors
- Alternators and generators
- Electric motors
- Equipment with DC-to-AC converters
- Fluorescent lights
- Switching power supplies

## General guidelines



**WARNING** – 5700 and 5800 GPS receivers use a rechargeable Lithium-ion battery. To avoid personal injury or equipment damage, make sure that you read and understand the Safety Information chapter at the front of this manual.

The following guidelines apply whenever you set up your receiver for operation:

- When plugging in a Lemo cable, make sure that the red dots on the receiver port and the cable connector line up. **Do not** use force to plug cables in, as this may damage the connector pins.



- When disconnecting a Lemo cable, grasp the cable by the sliding collar or lanyard and pull the cable connector straight out of the port. Do not twist the connector or pull on the cable itself.
- To securely connect a TNC cable, align the cable connector with the receiver receptacle, then thread the cable connector onto the receptacle until it is snug.
- To insert the internal battery place the battery in the battery compartment, ensuring that the contact points are in the correct position to align with the contacts in the receiver. Slide the battery and compartment as a unit upward into the receiver until the battery compartment latches are locked into position.

### Pole-Mounted Setup

Figure shows the pole-mounted setup for the 5800 receiver. To mount the 5800 receiver on a range pole:

1. Thread the unit onto the range pole
2. Attach the controller bracket to the pole
3. Insert the controller into the bracket.

With the Trimble ACU, or TSCe controller with BlueCap module, no cabling is required, as shown in Figure 13.3.



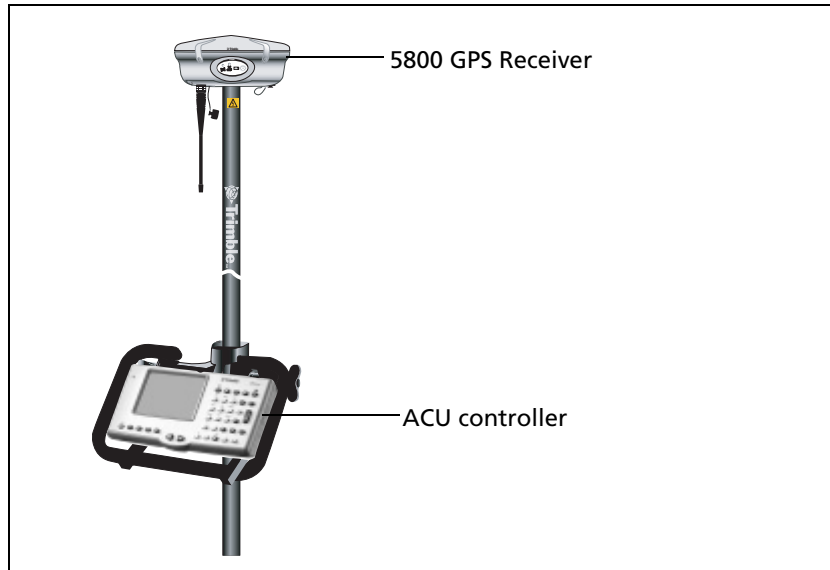


Figure 13.3 5800 receiver pole-mounted setup

## Other System Components

This section describes optional components that you can use with the 5800 receiver.

### Radios

Radios are the most common data link for Real-Time Kinematic (RTK) surveying. The 5800 receiver is available with an optional internal radio in either the 450 or 900 MHz UHF band. You can also connect an external radio to either port, whether the internal radio is installed or not.

The 5800 receiver supports the following Trimble base radios with the internal 450 MHz or 900 MHz UHF radios:

- TRIMMARK™ 3



- TRIMMARK IIe
- TRIMTALK™ 450S
- SiteNet™ 450
- SiteNet 900

### Internal Radio Setup

You can configure the receiver's optional internal radio using any of the following software:

- GPS Configurator
- WinFlash
- Trimble Survey Controller

For more information, refer to the GPS Configurator Help, the WinFlash Help, or the *Trimble Survey Controller User Guide*.

By default, the internal radio has only a few “test” frequencies installed at the factory. Use the WinFlash software to program your licensed frequencies prior to using the receiver. For more information, see Adding frequencies for the 450 MHz internal radio, page 133.

### Cellular modems and external radios

You can use a cellular modem or external radio instead of the internal radio as your data communications link.

To connect a cellular modem to a 5800 receiver, you need the following:

- 5800 receiver.
- A cellular modem, or a cellphone that can transmit and receive data.
- Serial (cellphone to DB9) cable (supplied with the cellular modem or phone).



*Note – For more information, refer to the document Using Cellular and CDPD Modems for RTK, which is available from the Trimble website.*

- Port 2 of the 5800 receiver supports full RS-232 protocol, and should function properly with most cellular phone cables. Some cellular units may require custom cabling.

Alternatively, the receiver also supports a cable-free Bluetooth connection with Bluetooth enabled cell phones.

For more information on using a cellular modem as a data link, refer to the *Trimble Survey Controller User Guide*.

To connect an external radio modem to a 5800 receiver, you need the following:

- 5800 Receiver.
- An external radio capable of receiving and decoding Trimble data packets.
- Serial cable for either Port 1 or Port 2 of the receiver, as supplied by the radio manufacturer.
- Radio mount for the range pole.







# General Operation

## In this chapter:

- Button Functions
- LED Behavior
- Starting and Stopping the Receiver
- Logging Data
- Resetting to Defaults
- Batteries and Power



Figure 14.1 shows the 5800 receiver front panel controls for the power on/off functions, or receiver reset. The LEDs provide power, radio, data logging, and SV tracking status information.

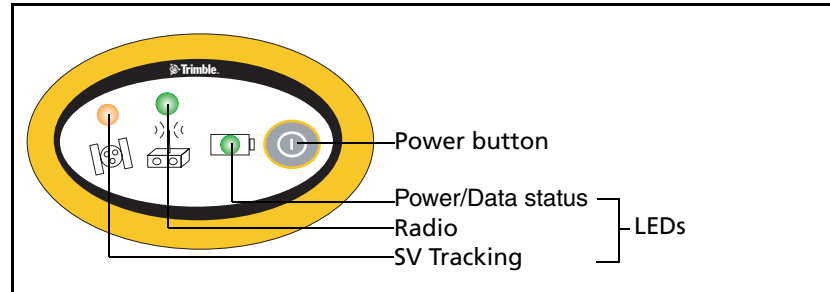
 
 


Figure 14.1 Controls and LEDs on the front panel of the 5800 receiver

## Button Functions

The 5800 receiver has only one button, the Power button, represented in this manual by . Use  to switch the receiver on or off, and to perform other functions, as described in Table 14.1.

**Table 14.1 Power button functions**

Action	Power button
Turn the receiver on	Press
Turn the receiver off	Hold for 2 seconds
Delete the ephemeris file	Hold for 15 seconds
Reset the receiver to factory defaults	Hold for 15 seconds
Delete application files	Hold for 30 seconds

**Note** – The term “press” indicates that you should press the button and release it immediately. The term “hold” indicates that you should press the button and hold it down until the time indicated has elapsed.



## LED Behavior

The three LEDs on the front panel of the receiver indicate various operating conditions. Generally, a lit or slowly flashing LED indicates normal operation, a LED that is flashing quickly indicates a condition that may require attention, and an unlit LED indicates that no operation is occurring. The following table defines each possible LED state.

The term ...	means that the LED ...
Slow flash	alternates on/off for 500 milliseconds.
Fast flash	alternates rapidly on/off for 100 milliseconds
On	is lit steady
Off	is unlit

## LED flash patterns

The following table details the possible flash patterns to indicate various states of receiver operation.

Receiver mode	Power LED Green	Radio LED Green	Satellite LED Amber
Receiver OFF	OFF	OFF	OFF
Receiver ON:			
Healthy power	ON	N/A	N/A
Low power	Fast flash	N/A	N/A
Tracking <4 SVs	ON	N/A	Fast flash
Tracking >4 SVs	ON	N/A	Slow flash
Logging data internally	Flashes off every 3 seconds	N/A	N/A
Receiving valid data packets	ON	Slow flash	N/A
No data packets	ON	OFF	N/A
Receiver in Monitor	ON	Slow flash	ON



**Note** – If a column shows “N/A”, that specific LED may or may not be on, but it is not relevant to that particular mode.

## Starting and Stopping the Receiver

To turn on the receiver, press [P].

To turn off the receiver, hold down [P] for two seconds.

## Logging Data

You can log data internally or to a Trimble controller.

### Logging internally

The 5800 receiver logs GPS data internally on 2 Mb of internal memory.

You can then use the Trimble Data Transfer utility to transfer logged data files to the office computer. The transferred files are in Trimble DAT (.dat) format.



---

**WARNING** – The 5800 allows for a maximum of 512 files on the internal memory. The filenames must be in 8.3 format, otherwise files copied to the internal memory may cause data corruption or loss of data when logging.

Data is logged using the current logging settings configured in the receiver. Data files logged internally are named automatically.

---

To begin internal logging, you must use a Trimble controller, or the GPS Configurator utility. The 5800 receiver does not have an internal clock, so you cannot conduct timed sessions.

**Note** – When the internal memory is full, the receiver stops logging data, and the Logging/Memory LED switches off. Existing data files are not overwritten.



Table 14.2 shows approximate storage requirements for different logging rates. The values shown are for a one-hour logging session with six satellites visible.

**Table 14.2 Storage requirements**

Logging rate	Memory required
10 Hz	2,588 KB
1 Hz	335 KB
5 seconds	87 KB
15 seconds	37 KB

Logging to a Trimble controller

When the 5800 receiver is connected to a Trimble controller, you can log GPS data from the receiver to the controller, or to a PC card inserted in the controller. When you use a Trimble controller, you do not use the receiver’s controls. Instead, you use the controller functions to set logging options, specify filenames, and control when logging occurs.

Data is stored in job files, which can be transferred to your office computer using Trimble’s Data Transfer utility.

For more information on logging data from a receiver using a Trimble controller refer to the user guide for your particular controller.

Resetting to Defaults

To reset the 5800 receiver to its factory default settings, hold down **[P]** for at least 15 seconds.

For more information, see Chapter 18, Default Settings.



## Batteries and Power

5800 GPS receivers use rechargeable Lithium-ion batteries.



**WARNING** – Do not damage the rechargeable Lithium-ion battery. A damaged battery can cause an explosion or fire, and can result in personal injury and/or property damage.

To prevent injury or damage:

- Do not use or charge the battery if it appears to be damaged. Signs of damage include, but are not limited to, discoloration, warping, and leaking battery fluid.
- Do not expose the battery to fire, high temperature, or direct sunlight.
- Do not immerse the battery in water.
- Do not use or store the battery inside a vehicle during hot weather.
- Do not drop or puncture the battery.
- Do not open the battery or short-circuit its contacts.



**WARNING** – Avoid contact with the rechargeable Lithium-ion battery if it appears to be leaking. Battery fluid is corrosive, and contact with it can result in personal injury and/or property damage.

To prevent injury or damage:

- If the battery leaks, avoid contact with the battery fluid.
- If battery fluid gets into your eyes, immediately rinse your eyes with clean water and seek medical attention. Do not rub your eyes!
- If battery fluid gets onto your skin or clothing, immediately use clean water to wash off the battery fluid.



**WARNING** – Charge and use the rechargeable Lithium-ion battery only in strict accordance with the instructions. Charging or using the battery in unauthorized equipment can cause an explosion or fire, and can result in personal injury and/or equipment damage.

To prevent injury or damage:

- Do not charge or use the battery if it appears to be damaged or leaking.
- Charge the Lithium-ion battery only in a Trimble product that is specified to charge it. Be sure to follow all instructions that are provided with the battery charger.
- Discontinue charging a battery that gives off extreme heat or a burning odor.



- Use the battery only in Trimble equipment that is specified to use it.
- Use the battery only for its intended use and according to the instructions in the product documentation.

### Charging the rechargeable Lithium-ion batteries

All battery types discharge over time when they are not being used. Batteries also discharge faster in colder temperatures. If a Lithium-ion battery is to be stored for long periods of time, make sure it is fully charged before storing, and re-charged at least every three months.

To protect the batteries from deep discharge (5 volts or less), the receiver is designed to switch batteries or cease drawing power when the battery pack discharges to 5.9 volts.

A battery that has reached the deep discharge level cannot be recharged and must be replaced. The following recommendations provide optimal performance and extend the life of your batteries:

- Fully charge all new batteries before use.
- Do not allow the batteries to discharge below 5 volts.
- Keep all batteries on continuous charge when not in use. Batteries may be kept on charge indefinitely without damage to the receiver or batteries.

The rechargeable Lithium-ion batteries are supplied partially charged. Charge them completely before using for the first time. If a battery has been stored for longer than six months, charge it before use.

The two internal batteries take approximately eight hours to charge. They are charged individually, so each battery takes approximately 4 hours to charge. The internal batteries start charging whenever an external power supply of greater than 15 V is detected.

### Storing the rechargeable Lithium-ion battery

- Do not store batteries in the receiver or external charger unless power is applied.



- If you must store the batteries, fully charge them before storing and then recharge them at least every three months.

### Disposing of the rechargeable Lithium-ion battery

Discharge the Lithium-ion battery before disposing of it. When disposing of the battery, be sure to do so in an environmentally sensitive manner. Adhere to any local and national regulations concerning battery disposal or recycling.

### Power output

The 5800 receiver does not supply power from either of its 2 ports.

### Firmware

A receiver's *firmware* is the program inside the receiver that controls receiver operations and hardware. You can upgrade the firmware for the 5800 receiver using the WinFlash software provided on the *Trimble R7, Trimble R8, 5700, and 5800 GPS Receivers CD*.

For more information, see The WinFlash Software, page 131.



---

**WARNING** – Upgrading the firmware deletes all application files on the 5800 receiver.

---



# Configuration

## In this chapter:

- [Configuring the Receiver in Real Time](#)
- [Configuring the Receiver Using Application Files](#)
- [Application Files](#)



The 5800 receiver has no controls for changing settings. It can only be configured using external software such as GPS Configurator, WinFlash, or Trimble Survey Controller.

There are two ways to configure the 5800 receiver. You can:

- configure the receiver in real time
- apply the settings in an application file

This chapter provides a brief overview of each of these methods and describes the contents and use of application files.

## Configuring the Receiver in Real Time

GPS Configurator and Trimble Survey Controller software both support real-time configuration of the 5800 receiver.

When you configure the receiver in real time, you use one of these software applications to specify which settings you want to change. When you apply the changes, the receiver settings change immediately.

Any changes that you apply to the receiver are reflected in the current application file, which is always present in the receiver. The current application file always records the most recent configuration, so if you apply further changes (either in real time or using an application file) the current file is updated and there is no record of the changes that you applied originally.

For more information on configuring the receiver in real time, see Chapter 16, Software Utilities.

## Configuring the Receiver Using Application Files

An application file contains information for configuring a receiver. To configure a receiver using an application file, you need to create the application file, transfer it to the receiver, and then apply the file's settings. Use the GPS Configurator software to perform all these tasks.



For more information on applying application files, see Chapter 16, Software Utilities.

## Application Files

An application file is organized into records. Each record stores configuration information for a particular area of receiver operation. Application files can include the following records:

- File Storage
- General Controls
- Serial Port Baud/Format
- Reference Position
- Logging Rate
- SV Enable/Disable
- Output Message
- Antenna
- Device Control
- Static/Kinematic
- Input Message

An application file does not have to contain all of these records. When you apply an application file, any option that is not included in the records in the file remains at its current setting. For example, if you apply an application file that only specifies the elevation mask to use, all other settings remain as they were before the application file was applied.

You can store up to twenty different application files in the receiver. You can apply an application file's settings at the time it is transferred to the receiver, or at any time afterwards.



## Special application files

The 5800 receiver has three special application files, which control important aspects of the receiver's configuration.

### Default application file

The default application file (Default.cfg) contains the original receiver configuration, and cannot be changed. This file configures the receiver after it is reset. You can reset the receiver by holding down **[P]** for at least 15 seconds, or by using the reset option in GPS Configurator.

For more information on the default receiver settings, see Default Settings, page 143.

Although you cannot change or delete the default application file, you can use a power up application file to override any or all of the default settings.

### Current application file

The current application file (Current.cfg) reflects the current receiver configuration. Whenever you change the receiver's configuration, either in real time or by applying an application file, the current file changes to match the new configuration.

You cannot delete the current file or change it directly, but every change to the receiver's current configuration is applied to the current file as well.

When you switch off the receiver then turn it on again, all the settings from the current application file are applied, so you do not lose any changes that you have made. The only exceptions are the following logging parameters:

- Logging rate
- Position rate
- Elevation mask



These parameters are always reset to the factory default values whenever the receiver is switched off.

### Power Up application file

The power up application file (Power\_up.cfg) is used to set the receiver to a specific configuration any time the unit is powered up.

You can specify that the receiver is reset to defaults before the power up settings are applied. This ensures that restarting the receiver always resets it to factory defaults prior to applying the power up application file.

Alternatively, you can specify that the power up settings are applied immediately after the current application file's settings have been applied. Restarting the receiver results in a configuration that uses your default settings for the options you define in the power up file, but the current settings for all other options.

By default, there is no power up application file on the receiver. If you want to use a power up application file, you need to create an application file in GPS Configurator and make sure that the *As auto power up file* option is selected in the *File* page. When you transfer this file to the receiver, it is transferred with the name Power\_up.cfg, and becomes the new power up file.

The power up file is the only special application file that you can overwrite or delete from the receiver.

### Applying application files

An application file's settings do not affect the receiver's configuration until you **apply** the application file. You can do this at the same time that you save the file. Alternatively, you can save the file on the computer or in the receiver, then open it later and apply its settings.



## Storing application files

You can store application files that you create in GPS Configurator on both your receiver and computer. Each file can, for example, represent a different user sharing the same receiver, or a particular mode of operation or survey style. Saving application files on your computer as well as in your receiver is optional, but it is useful because:

- it gives you a permanent copy of the settings you have sent to a receiver, for audit or your own reference
- you can use the same file to configure multiple receivers identically
- you can use an existing application file as a template for creating other application files with similar settings

## Naming application files

The filename that you use to store the application file in the computer and the name under which the file is stored in the receiver are always the same. This makes recognizing and keeping track of your application files easier. If you change the name of the file on the receiver, this changes the filename used to store the application file on your computer. Similarly, if you change the filename on the computer, the name of the file in the receiver will change.



# Software Utilities

**In this chapter:**

- [The GPS Configurator Software](#)
- [The WinFlash Software](#)



This chapter provides information on the software utilities that you can use with the 5800 receiver.

## The GPS Configurator Software

The GPS Configurator software enables you to configure a survey-grade Trimble GPS receiver connected to your desktop computer and save the configurations. Use the GPS Configurator software to view the current receiver settings, check GPS information, and change receiver settings.

### Installing GPS Configurator


A copy of GPS Configurator is included on the *Trimble R7, Trimble R8, 5700, and 5800 GPS Receivers CD*.

To install the software:

1. Insert the CD into the CD drive on your computer.
2. From the main menu select *Install individual software packages*.
3. Select *Install GPS Configurator vX.XX*
4. Follow the onscreen instructions.

### Configuring the 5800 receiver

To configure a 5800 receiver using GPS Configurator:

1. Connect Port 1 or 2 on the receiver to a serial (COM) port on the computer and apply power.
2. To start GPS Configurator, click , then select *Programs / Trimble / GPS Configurator / GPS Configurator*.
3. Select 5800 in the *Device Type* dialog.



The software automatically establishes a connection with the 5800 receiver.

4. Make appropriate selections for your required receiver settings.  
For more information, refer to the GPS Configurator Help.
5. Click **Apply**.

The settings in GPS Configurator are applied to the receiver.

Alternatively, you can save the settings to your computer. For more information, refer to the GPS Configurator Help.

## The WinFlash Software

The WinFlash software communicates with Trimble products to perform various functions including:

- installing software, firmware, and option upgrades
- running diagnostics ( for example, retrieving configuration information)
- configuring radios

For more information, online help is also available when using the WinFlash software.

**Note** – *The WinFlash software runs on Microsoft Windows 95, 98, Windows NT®, 2000, Me, or XP operating systems.*

## Installing the WinFlash software

The WinFlash software can be installed from the *Trimble R7, Trimble R8, 5700, and 5800 GPS Receivers CD*, or from the Trimble website.



### Installing the WinFlash software from the CD

1. Insert the disk into the CD drive on your computer.
2. From the main menu select *Install individual software packages*.
3. Select *Install WinFlash vX.XX with 5700/5800 drivers and firmware*.
4. Follow the on-screen instructions.

### Upgrading firmware

Your 5800 receiver is supplied with the latest version of receiver firmware installed. If a later version becomes available, upgrade the firmware installed on your receiver.

The WinFlash software guides you through the firmware upgrade process. The steps required are described below. For more information, refer to the WinFlash Help.

To upgrade the 5800 receiver firmware:

1. Start the WinFlash software. The *Device Configuration* screen appears.
2. From the *Device type* list select 5800 Receiver.
3. From the *PC serial port* field select the serial (COM) port on the computer that the receiver is connected to.
4. Click **Next**.

The *Operation Selection* screen appears. The *Operations* list shows all of the supported operations for the selected device. A description of the selected operation is shown in the *Description* field.

5. Select GPS software upgrade and click **Next**.

The *GPS Software Selection* window appears. This screen prompts you to select the software that you want to install on the 5800 receiver.



6. Select the latest version from the *Available Software* list and click **Next**.

The *Settings Review* window appears. This screen prompts you to connect the receiver, suggests a connection method, and then lists the receiver configuration and selected operation.

7. If all is correct, click **Finish**.

Based on the selections shown above, the *Software Upgrade* window appears and shows the status of the operation (for example, **Establishing communication with the 5800. Please wait...**).

8. Click **OK**.

The *Software Upgrade* window appears again and states that the operation was completed successfully.

9. Click **Menu** to select another operation, or click **Exit** to quit the WinFlash software.
10. If you click **Exit**, another screen appears asking you to confirm that you want to quit the WinFlash software. Click **OK**.

## Adding frequencies for the 450 MHz internal radio

If your 5800 receiver has the optional internal 450 MHz radio installed, you must use the WinFlash software to add frequencies to the default list.

To add radio frequencies:

1. Start the WinFlash software. The *Device Configuration* screen appears.
2. From the *Device type* list select 5800 Receiver.
3. From the *PC serial port* field select the serial (COM) port on the computer that the receiver is connected to.
4. Click **Next**.



The *Operation Selection* screen appears. The *Operations* list shows all of the supported operations for the selected device. A description of the selected operation is shown in the *Description* field.

5. Select **Configure Radio** and click **Next**.

The *Frequency Selection* dialog appears:

**Frequency Selection**

You have connected to a 5800 Internal Radio

Frequency Band: 450.0 - 470.0 MHz

Wireless Format

Current Channel: 3 - 461.100 MHz

Wireless Mode: TRIMMARK 3 at 19200 bps

Note: Wireless mode must be common among all radios in your network.

Channel Frequency

Specify Frequency: 461.1000 MHz

Add

Selected Frequencies:

Channel	Frequency
1	461.0250
2	461.0750
3	461.1000
4	462.1250
5	462.3750
6	462.4000
7	464.5000
8	464.5500
9	464.6000
10	464.6250
11	464.6500
12	464.7000
13	464.7250

Remove

Remove All

Move Up

Move Down

6. In the *Wireless Format* group, select the appropriate channel and wireless mode. The Wireless Mode must be the same for all radios in your network.



7. In the *Edit Frequency* field, enter the frequency you require.
8. Click **Add**. The new frequency appears in the *Selected Frequencies* list.

*Note – The frequencies that you program must conform to the channel spacing and minimum tuning requirements for the radio. To view this information, click **Radio Info**. You may select either 12.5 or 25 kHz channel spacing. All radios in your network must use the same channel spacing.*

9. When you have configured all the frequencies you require, click **OK**.

The WinFlash software updates the 5800 receiver's radio frequencies and then restarts the receiver.

## Configuring the internal 900 MHz radio setup

Use one of the following:

- The Trimble Survey Controller software running on a Trimble controller
- The WinFlash software (provided on the *Trimble R7, Trimble R8, 5700, and 5800 GPS Receivers CD*)

The internal radio has 40 available networks. You must choose the same network that is configured in the base radio you want to receive from.

## Configuring the radio network using the Trimble Survey Controller software

1. Connect to the 5800 receiver with Bluetooth (or the appropriate data cable if necessary).
2. From the main menu on the controller, select *Configuration*.
3. In the dialog that appears, select *Survey styles*, then from the *Type* field, select *RTK*.



4. Select *Rover radio*, then from the *Type* field select *Trimble Internal*.
5. Tap the Connect softkey.
6. Once connected, in the *Network number* field enter the number of the network set on your base radio.

*Note – The Base Radio Mode field is not used here.*

7. Tap the Enter softkey to complete configuration.

### Configuring the radio network using the WinFlash software

1. Connect the data/power cable to Port 1 on the receiver.
2. Connect the female DE-9 connector on the other end of the data/power cable to a serial (COM) port on the computer.
3. Start the WinFlash software. The *Device Configuration* dialog appears.
4. From the *Device type* list, select *5800 Receiver*.
5. From the *PC serial port* field, select the serial port on the computer that the receiver is connected to and click **Next**.
6. From the *Operation selection* dialog, select *Configure radio* and click **Next**.
7. Confirm that your current settings are correct and click **Finish**. The *Configure 900MHz radio* dialog appears.
8. In the *Network number* field, select the same network that is set on your base radio.
9. In the *Country setting* field, select one of the following (according to how your base radio was shipped):
  - Your country (if available). This sets the radio to the a specific frequency range being transmitted by the base radio.



- A single frequency. This limits the frequencies used to those authorized in your particular country.

10. Click **OK**.

The WinFlash software updates the radio settings and then restarts the receiver.







# Specifications

**In this chapter:**

- Physical Specifications
- Positioning Specifications
- Technical Specifications



This chapter details the specifications of the 5800 receiver.

## Physical Specifications

Table 17.1 lists physical specifications for the 5800 receiver.

**Table 17.1 Physical specifications**

Feature	Specification
Size	19cm (7.5") wide x 10cm (3.9") deep including connectors
Weight: with internal battery and radio	1.21 kg (2.7 lbs)
Battery life (at 20 °C)	Approximately 5.5 hours for one 2.0 ah Lithium-ion battery
External Power input	11–28 VDC
Operating temperature	–40 °C to +65 °C (–40 °F to +149 °F) <sup>a</sup>
Storage temperature	–40 °C to +70 °C (–40 °F to +158 °F)
Humidity	100% condensing, unit fully sealed
Casing	Dust-proof, shock- and vibration-resistant

<sup>a</sup>Receiver is rated to -40 °C. Batteries are rated to -20 °C.



## Positioning Specifications

Table 17.2 lists positioning specifications for the 5800 receiver.

**Table 17.2   Positioning specifications**

Positioning	Mode	Horizontal Accuracy (RMS)	Vertical Accuracy (RMS)
RTK (OTF)	Synchronized	1 cm + 1 ppm (× baseline length)	2 cm + 1 ppm (× baseline length)
	Low Latency	2 cm + 2 ppm (× baseline length) <sup>a</sup>	3 cm + 2 ppm (× baseline length) <sup>a</sup>
L1 C/A Code Phase	Synchronized/ Low Latency	.25m + 1ppm RMS	.50m + 1ppm RMS
Static/ FastStatic	N/A	5 mm + 0.5 ppm (× baseline length)	5 mm + 1 ppm (× baseline length)
WAAS	N/A	Less than 5 m <sup>b</sup>	Less than 5 m <sup>b</sup>

<sup>a</sup>Depends on radio link latency.

<sup>b</sup>3D RMS values depend on WAAS system performance.



## Technical Specifications

Table 17.3 lists technical specifications for the 5800 receiver.

**Table 17.3 Technical specifications**

Feature	Specification
Tracking	24 channels L1 C/A code, L1/L2 full cycle carrier Fully operational during P-code encryption WAAS satellite tracking
Signal processing	Maxwell architecture Very low-noise C/A code processing Multipath suppression
Start-up	Cold start: < 60 seconds from power on Warm start: < 30 seconds with recent ephemeris
Initialization	Automatic while moving or static
Minimum initialization time	10 sec + $0.5 \times$ baseline length (km)
Communications	Two RS-232 serial ports (Port 1, Port 2,) Port 1: Baud Rates up to 115,200 bps Port 2: Baud Rates up to 115,200 bps RTS/CTS flow control negotiation supported on Port 2 only Bluetooth communications with Trimble ACU or TSCe controller with BlueCap module
Configuration	Via user-definable application files or GPS Configurator
Output formats	NMEA-0183: AVR; GGA; GSA; GST; GSV; PTNL,GGK; PTNL,GGK_SYNC; HDT; PTNL,PJK; PTNL,PJT; ROT; PTNL,VGK; VHD; VTG; ZDA GSOF (Trimble Binary Streamed Output) RT17



# Default Settings

## In this chapter:

- [Default Settings](#)
- [Resetting to Factory Defaults](#)



All 5800 receiver settings are stored in application files. The default application file, Default.cfg, is stored permanently in the receiver, and contains the factory default settings for the 5800 receiver. Whenever the receiver is reset to its factory defaults, the current settings (stored in the current application file, Current.cfg) are reset to the values in the default application file.

You cannot modify the default application file. However, if there is a power up application file (Power\_Up.cfg) in the receiver, the settings in this file can be applied immediately after the default application file, overriding the factory defaults.

For more information, see Application Files, page 125.

## Default Settings

Table 18.1 defines the default settings for the 5700 receiver, as defined in the default application file.

**Table 18.1    Default settings**

Function		Factory default
SV Enable		All SVs enabled
General Controls:	Elevation mask	13°
	SNR mask	7
	RTK positioning mode	Low Latency
	Motion	Kinematic
Serial Port 1:	Baud rate	115,200
	Format	8-None-1
	Flow control	None
Serial Port 2:	Baud rate	115,200
	Format	8-None-1
	Flow control	None



Table 18.1 Default settings (Continued)

Function		Factory default
Input Setup:	Station	Any
NMEA/ASCII (all messages)		All Ports Off
Streamed output		All Types Off Offset = 00
RT17/Binary		All Ports Off
Reference position:	Latitude	0°
	Longitude	0°
	Altitude	0.00 m HAE
Antenna:	Type	5800 Internal
	Height (true vertical)	0.00 m
	Group	All
	Measurement method	Bottom of mount

## Resetting to Factory Defaults

To reset the 5800 receiver to its factory defaults, do one of the following:

- Press and hold down **[P]** on the 5800 receiver for 15 seconds.
- In GPS Configurator select the *General* tab and then click **Reset Receiver**.

## Default behavior

The factory defaults specified above are applied whenever you start the receiver. If a Power Up file is present in the receiver, its settings are applied immediately after the default settings, so you can use a Power Up file to define your own set of defaults.



Power up settings

When you turn the receiver off, any changes that you have made to logging settings are lost and these settings are returned to the factory defaults. Other settings remain as defined in the Current file. The next time you turn on the receiver, the receiver checks for a Power Up file and, if one is present, applies the settings in this file.

When you use <b>P</b> to turn the receiver off then on again and ...	then logging settings are ...	and all other settings are ...
you changed the receiver settings by applying an application file	the factory defaults	the last settings used
you changed the receiver settings using configuration software	the factory defaults	the last settings used
there is a Power Up application file in the receiver	the factory defaults, or those in the Power Up file <sup>a</sup>	the last settings used, or those in the Power Up file

<sup>a</sup>A factory default setting is used only if the setting is not defined in the Power Up file.



# Cables and Connectors

## In this chapter:

- [Port 1 and 2 Connectors](#)
- [Power/Serial Data Cables](#)



This chapter provides pinout information for the 5800 receiver standard and optional cables. This information can be used to prepare special cables for connecting the 5800 receiver to devices and instruments not supported by the standard and optional cables.

## Port 1 and 2 Connectors

Figure 19.1 shows the location of the 5800 receiver serial ports.



Figure 19.1 5800 serial ports

Figure 19.2 gives pinout requirements for the connector labeled Port 1.



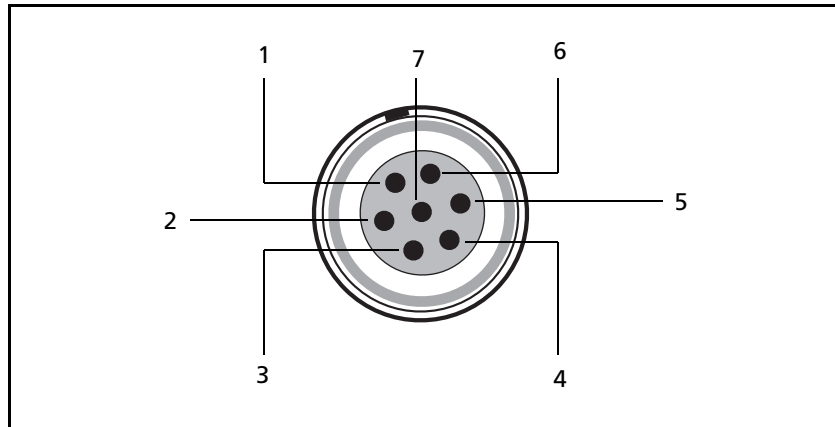


Figure 19.2 Port 1 connector

Figure 19.3 gives pinout requirements for the connector labeled Port 2.

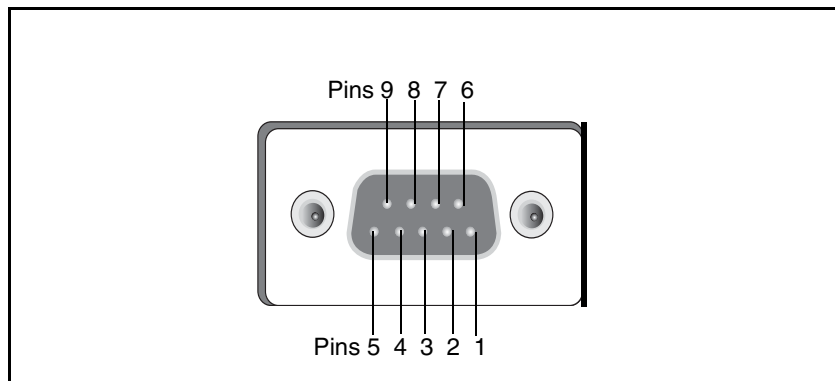


Figure 19.3 Port 2 connector



Table 19.1 describes the pinout functionality.

**Table 19.1 5800 port pinouts**

Pin	Pinout function	
	Port 1 - 7-pin Lemo	Port 2 - DB-9
1	Signal ground	DCD
2	- Power ground	RXD
3	TXD	TXD
4	N/C	DTR
5	N/C	Signal ground
6	+ Power in	DSR
7	TRXD	RTS
8	N/A	CTS
9	N/A	Ring indicator

## Power/Serial Data Cables

**Note** – Table 19.2 gives pinout information for the data-I/O cable, (PN 18532) which is supplied with the 5800 receiver

**Note** – Table 19.2 assumes that the cable is attached to the connector labeled Port 2.

**Table 19.2 Data-I/O cable pinouts**

DB-9 Female 9 Pin		DB-9 Female 9 pin	
Pin	Function	Pin	Function
1-6	DCD5_232	4	DTR5_232
2	RX5_232	3	TX5_232
3	TX5_232	2	RX5_232
4	DTR5_232	1-6	DCD5_232
5	GND	5	GND



**Table 19.2 Data-I/O cable pinouts (Continued)**

DB-9 Female 9 Pin		DB-9 Female 9 pin	
Pin	Function	Pin	Function
7	RTS5_232	8	CTS5_232
8	CTS5_232	7	RTS5_232
9	no connection RI5_232	9	

This data cable may be used for firmware upgrades and other computer functions with the 5800. Power must be supplied to the unit via Port 1, or from the internal battery.

**Note** – Table 19.2 gives pinout information for the power/serial data cable, (PN 32345) which is optional for use with the 5800 receiver. This cable may be used for firmware upgrades through Port 1 of the 5800, while also supplying external power.

**Note** – Table 19.3 assumes that the cable is attached to the connector labeled Port 1.

**Table 19.3 Power/serial data cable pinouts**

Lemo 0-shell connector 7 Pin		Direction	DE9-F connector 7 Cond			Power lead 2 Cond	
Pin	Function		Pin	Color	Function	Color	Function
1	GND	↔	5	Brown	Signal ground		
2	GND	→				Black	V-OUT
3	TX3_232	→	2	Orange	TXD		
4	RTS/TXD	→	8	Blue	RTS		
5	CTS/RXD	←	7	Green	CTS		
6	PWR_IN	←				Red	Power IN (+)
7	RX3_232	←	3	Yellow	TXD		







**SECTION**

---

**III**

# **5700 and 5800 GPS RECEIVER APPENDIXES**







# NMEA-0183 Output

## In this chapter:

- [NMEA-0183 Outputs](#)
- [Common Message Elements](#)
- [NMEA Messages](#)



This appendix describes the formats of the subset of NMEA-0183 messages that are available for output by the receivers. For a copy of the NMEA-0183 Standard, go to the National Marine Electronics Association website at [www.nmea.org](http://www.nmea.org).

## NMEA-0183 Outputs

When NMEA-0183 output is enabled, a subset of NMEA-0183 messages can be output to external instruments and equipment connected to the 5700 or 5800 serial ports. These NMEA-0183 messages let external devices use selected data collected or computed by the GPS receiver.

All messages conform to the NMEA-0183 version 2.30 format. All begin with \$ and end with a carriage return and a line feed. Data fields follow comma (,) delimiters and are variable in length. Null fields still follow comma (,) delimiters but contain no information.

An asterisk (\*) delimiter and checksum value follow the last field of data contained in an NMEA-0183 message. The checksum is the 8-bit exclusive *OR* of all characters in the message, including the commas between fields, but not including the \$ and asterisk delimiters. The hexadecimal result is converted to two ASCII characters (0–9, A–F). The most significant character appears first.

Table A.1 summarizes the set of NMEA messages supported by the 5700 and 5800 receivers, and shows the page where detailed information about each message can be found.

**Table A.1 NMEA message summary**

Message	Function	Page
AVR	Time, yaw, tilt, range, mode, PDOP, and number of SVs for Moving Baseline RTK	160
GGA	Time, position, and fix related data	161
GSA	GPS receiver operating mode	162
GST	Position error statistics	163



**Table A.1 NMEA message summary (continued)**

Message	Function	Page
GSV	Number of SVs in view, PRN, elevation, azimuth, and SNR	164
HDT	Heading from True North	164
PTNL,GGK	Time, position, position type and DOP values	165
PTNL,GGK_SYNC	Time, synchronized position, position type and DOP values	166
PTNL,PJK	Local coordinate position output	168
PTNL,PJT	Projection type	169
PTNL,VGK	Time, locator vector, type and DOP values	169
PTNL,VHD	Heading Information	170
ROT	Rate of turn	171
VTG	Actual track made good and speed over ground	172
ZDA	UTC day, month, and year, and local time zone offset	173

To enable or disable the output of individual NMEA messages, do one of the following:

- Create an application file in GPS Configurator that contains NMEA output settings and then send the file to the receiver.
- Add NMEA outputs in the *Serial outputs* tab of GPS Configurator and then apply the settings.



## Common Message Elements

Each message contains:

- A message ID consisting of *\$GP* followed by the message type. For example, the message ID of the GGA message is *\$GPGGA*.
- A comma
- A number of fields, depending on the message type, separated by commas
- An asterisk
- A checksum

Below is an example of a simple message with a message ID (*\$GPGGA*), followed by 13 fields and checksum value:

```
$GPGGA,172814.0,3723.46587704,N,12202.26957864,W,2,6,1.2,18.893,M,-25.669,M,2.0,0031*4F
```

## Message values

The following values can be found in NMEA messages that the receiver generates.

### Latitude and Longitude

Latitude is represented as *ddmm.mmmm* and longitude is represented as *dddmm.mmmm*, where:

- *dd* or *ddd* is degrees
- *mm.mmmm* is minutes and decimal fractions of minutes

### Direction

Direction (north, south, east, or west) is represented by a single character: *N*, *S*, *E*, or *W*.



## Time

Time values are presented in Universal Time Coordinated (UTC) and are represented as *hhmmss.cc*, where:

- *hh* is hours, from 00 to 23
- *mm* is minutes
- *ss* is seconds
- *cc* is hundredths of seconds

## NMEA Messages

When NMEA-0183 output is enabled, the following messages can be generated.



# AVR

## Time, Yaw, Tilt, Range for Moving Baseline RTK

The AVR message string is shown below, and Table A.2 describes the message fields.

\$PTNL,AVR,181059.6,+149.4688,Yaw,+0.0134,Tilt,,,60.191,3,2.5,6\*00

**Table A.2 AVR message fields**

Field	Meaning
1	UTC of vector fix
2	Yaw angle in degrees
3	Yaw
4	Tilt angle in degrees
5	Tilt
6	Reserved
7	Reserved
8	Range in meters
9	Quality indicator: 0: Fix not available or invalid 1: Autonomous GPS fix 2: Differential carrier phase solution RTK (Float) 3: Differential carrier phase solution RTK (Fix) 4: Differential code-based solution, DGPS
10	PDOP
11	Number of satellites used in solution



**GGA**      **Time, Position, and Fix Related Data**

An example of the GGA message string is shown below. Table A.3 describes the message fields.

```
$GPGGA,172814.0,3723.46587704,N,12202.26957864,W,  
2,6,1.2,18.893,M,-25.669,M,2.0,0031*4F
```

**Table A.3      GGA message fields**

Field	Meaning
1	UTC of position fix
2	Latitude
3	Direction of latitude: N: North S: South
4	Longitude
5	Direction of longitude: E: East W: West
6	GPS Quality indicator: 0: Fix not valid 1: GPS fix 2: Differential GPS fix 4: Real Time Kinematic, fixed integers 5: Real Time Kinematic, float integers
7	Number of SVs in use, range from 00 to 12
8	HDOP
9	Orthometric height (MSL reference)
10	M: unit of measure for height is meters
11	Geoid separation
12	M: geoid separation is measured in meters



**Table A.3 GGA message fields (continued)**

Field	Meaning
13	Age of differential GPS data record, Type 1 or Type 9. Null field when DGPS is not used.
14	Reference station ID, ranging from 0000 to 1023. A null field when any reference station ID is selected and no corrections are received.

**GSA GNSS DOP and active satellites**

An example of the GSA message string is shown below. Table A.4 describes the message fields.

\$GPGSA,<1>,<2>,<3>,<3>,,,,,<3>,<3>,<3>,<4>,<5>,  
<6>\*<7><CR><LF>

**Table A.4 GSA message fields**

Field	Meaning
1	Mode 1, M = manual, A = automatic
2	Mode 2, Fix type, 1 = not available, 2 = 2D, 3 = 3D
3	PRN number, 01 to 32, of satellite used in solution, up to 12 transmitted
4	PDOP-Position dilution of precision, 0.5 to 99.9
5	HDOP-Horizontal dilution of precision, 0.5 to 99.9
6	VDOP-Vertical dilution of precision, 0.5 to 99.9
7	Checksum



**GST**      **Position Error Statistics**

An example of the GST message string is shown below. Table A.5 describes the message fields.

\$GPGST,172814.0,0.006,0.023,0.020,273.6,  
0.023,0.020,0.031\*6A

**Table A.5      GST message fields**

Field	Meaning
1	UTC of position fix
2	RMS value of the pseudorange residuals (includes carrier phase residuals during periods of RTK(float) and RTK(fixed) processing)
3	Error ellipse semi-major axis 1 sigma error, in meters
4	Error ellipse semi-minor axis 1 sigma error, in meters
5	Error ellipse orientation, degrees from true north
6	Latitude 1 sigma error, in meters
7	Longitude 1 sigma error, in meters
8	Height 1 sigma error, in meters



## GSV Satellite Information

The GSV message string identifies the number of SVs in view, the PRN numbers, elevations, azimuths, and SNR values. An example of the GSV message string is shown below. Table A.6 describes the message fields.

```
$GPGSV,4,1,13,02,02,213,,03,-3,000,,  
11,00,121,,14,13,172,05*67
```

**Table A.6 GSV message fields**

Field	Meaning
1	Total number of messages of this type in this cycle
2	Message number
3	Total number of SVs visible
4	SV PRN number
5	Elevation, in degrees, 90° maximum
6	Azimuth, degrees from True North, 000° to 359°
7	SNR, 00–99 dB (null when not tracking)
8–11	Information about second SV, same format as fields 4–7
12–15	Information about third SV, same format as fields 4–7
16–19	Information about fourth SV, same format as fields 4–7

## HDT Heading from True North

The HDT string is shown below, and Table A.7 describes the message fields.

```
$GPHDT,123.456,T*00
```

**Table A.7 Heading from true north fields**

Field	Meaning
1	Heading in degrees
2	T: Indicates heading relative to True North



# PTNL,GGK

## Time, Position, Position Type, DOP

An example of the PTNL,GGK message string is shown below. Table A.8 describes the message fields.

```
$PTNL,GGK,172814.00,071296,  
3723.46587704,N,12202.26957864,W,  
3,06,1.7,EHT-6.777,M*48
```

**Table A.8 PTNL,GGK message fields**

Field	Meaning
1	UTC of position fix
2	Date
3	Latitude
4	Direction of latitude: N: North S: South
5	Longitude
6	Direction of Longitude: E: East W: West
7	GPS Quality indicator: 0: Fix not available or invalid 1: Autonomous GPS fix 2: Differential, floating carrier phase integer-based solution, RTK(float) 3: Differential, fixed carrier phase integer-based solution, RTK(fixed) 4: Differential, code phase only solution (DGPS)
8	Number of satellites in fix
9	DOP of fix



**Table A.8 PTNL,GGK message fields (continued)**

Field	Meaning
10	Ellipsoidal height of fix
11	M: ellipsoidal height is measured in meters

***Note** – The PTNL,GGK message is longer than the NMEA-0183 standard of 80 characters.*

## PTNL,GGK\_SYNC

### Time, Synchronized Position, Position Type, DOP

The PTNL,GGK\_SYNC message has the same format as the PTNL,GGK message, but outputs Synchronized 1 Hz positions even in Low Latency mode. An example of the PTNL,GGK\_SYNC message string is shown below. Table A.9 describes the message fields.

\$PTNL,GGK\_SYNC,172814.00,071296,  
3723.46587704,N,12202.26957864,W,  
3,06,1.7,EHT-6.777,M\*48

**Table A.9 PTNL,GGK\_SYNC message fields**

Field	Meaning
1	UTC of position fix
2	Date
3	Latitude
4	Direction of latitude: N: North S: South
5	Longitude
6	Direction of Longitude: E: East W: West



**Table A.9    PTNL,GGK\_SYNC message fields (continued)**

Field	Meaning
7	GPS Quality indicator: 0: Fix not available or invalid 1: Autonomous GPS fix 2: Differential, floating carrier phase integer-based solution, RTK(float) 3: Differential, fixed carrier phase integer-based solution, RTK(fixed) 4: Differential, code phase only solution (DGPS)
8	Number of satellites in fix
9	DOP of fix
10	Ellipsoidal height of fix
11	M: ellipsoidal height is measured in meters

***Note** – The PTNL,GGK\_SYNC message is longer than the NMEA-0183 standard of 80 characters.*



# PTNL,PJK

## Local Coordinate Position Output

An example of the PTNL,PJK message string is shown below. Table A.10 describes the message fields.

```
$PTNL,PJK,010717.00,081796,  
+732646.511,N,+1731051.091,E,  
1,05,2.7,EHT-28.345,M*7C
```

**Table A.10 PTNL,PJK message fields**

Field	Meaning
1	UTC of position fix
2	Date
3	Northing, in meters
4	Direction of Northing will always be N (North)
5	Easting, in meters
6	Direction of Easting will always be E (East)
7	GPS Quality indicator: 0: Fix not available or invalid 1: Autonomous GPS fix 2: Differential, floating carrier phase integer-based solution, RTK (float) 3: Differential, fixed carrier integer-based solution, RTK (fixed) 4: Differential, code phase only solution (DGPS)
8	Number of satellites in fix
9	DOP of fix
10	Ellipsoidal height of fix
11	M: ellipsoidal height is measured in meters

***Note** – The PTNL,PJK message is longer than the NMEA-0183 standard of 80 characters.*



## PTNL,PJT

### Projection Type

An example of the PTNL,PJT message string is shown below. Table A.11 describes the message fields.

\$PTNL,PJT,NAD83(Conus),California Zone 4 0404,\*51

**Table A.11 PTNL,PJT message fields**

Field	Meaning
1	Coordinate system name (can include multiple words)
2	Projection name (can include multiple coordinates)

## PTNL,VGK

### Vector Information

An example of the PTNL,VGK message string is shown below. Table A.12 describes the message fields.

\$PTNL,VGK,160159.00,010997,-0000.161,  
00009.985,-0000.002,3,07,1,4,M\*0B

**Table A.12 PTNL,VGK message fields**

Field	Meaning
1	UTC of vector in hhmmss.ss format
2	Date in mmddyy format
3	East component of vector, in meters
4	North component of vector, in meters
5	Up component of vector, in meters



**Table A.12 PTNL,VGK message fields (continued)**

Field	Meaning
6	GPS quality indicator: 0: Fix not available or invalid 1: Autonomous GPS fix 2: Differential carrier phase solution RTK(float) 3: Differential carrier phase solution RTK(fix) 4: Differential code-based solution, DGPS
7	Number of satellites if fix solution
8	DOP of fix
9	M: Vector components are in meters

# PTNL,VHD

## Heading Information

An example of the PTNL,VHD message string is shown below.  
Table A.13 describes the message fields.

\$PTNL,VHD,030556.00,093098,187.718,  
-22.138,-76.929,-5.015,0.033,0.006,  
3,07,2.4,M\*22

**Table A.13 PTNL,VHD message fields**

Field	Meaning
1	UTC of position, in <i>hhmmss.ss,ddmmyy</i> format
2	Date in <i>mmddy</i> format
3	Azimuth
4	$\Delta$ Azimuth/ $\Delta$ Time
5	Vertical Angle
6	$\Delta$ Vertical/ $\Delta$ Time
7	Range
8	$\Delta$ Range/ $\Delta$ Time



**Table A.13 PTNL,VHD message fields (continued)**

Field	Meaning
9	Quality indicator: 0: Fix not available or invalid 1: Autonomous GPS fix 2: Differential carrier phase solution RTK(float) 3: Differential carrier phase solution RTK(fix) 4: Differential code-based solution, DGPS
10	Number of satellites used in solution
11	PDOP

**ROT**

**Rate of Turn**

The ROT string is shown below, and Table A.14 describes the message fields.

\$GPROT,35.6,A\*4E

**Table A.14 ROT message fields**

Field	Meaning
1	Rate of turn, degrees/minutes, "-" indicates bow turns to port
2	A: Valid data V: Invalid data



**VTG**      **Actual Track Made Good Over and Speed Over Ground**

An example of the VTG message string is shown below. Table A.15 describes the message fields.

\$GPVTG,,T,,M,0.00,N,0.00,K\*4E

**Table A.15**    **VTG message fields**

Field	Meaning
1	Track made good (degrees true)
2	T: track made good is relative to true north
3	Track made good (degrees magnetic)
4	M: track made good is relative to magnetic north
5	Speed, in knots
6	N: speed is measured in knots
7	Speed over ground in kilometers/hour (kph)
8	K: speed over ground is measured in kph



**ZDA**      **UTC Day, Month, And Year, and Local Time Zone Offset**

An example of the ZDA message string is shown below. Table A.16 describes the message fields.

\$GPZDA,172809,12,07,1996,00,00\*45

**Table A.16    ZDA message fields**

Field	Meaning
1	UTC
2	Day, ranging between 01 and 31
3	Month, ranging between 01 and 12
4	Year
5	Local time zone offset from GMT, ranging from 00 to ±13 hours
6	Local time zone offset from GMT, ranging from 00 to 59 minutes

Fields 5 and 6 together yield the total offset. For example, if field 5 is -5 and field 6 is +15, local time is 5 hours and 15 minutes earlier than GMT.







# RTCM Output

## In this chapter:

- [RTCM Output](#)
- [Message Scheduling](#)



# RTCM Output

Table B.1 shows the messages that are generated when you select a specific RTCM version. The messages in the table are in the same order as they appear in GPS Configurator. For details of the contents of individual messages, refer to the RTCM documentation.

**Table B.1    RTCM output**

Selection	Message									
Version 2	1	3			22				59	
USCG 9-3		3	9-3							
RTCM/RTK 2.2+2.3	1	3		18	19	22	23	24	59	
RTK Only 2.2+2.3		3		18	19	22	23	24	59	
RTCM/RTK 2.3	1			18	19		23	24		
RTK Only 2.3				18	19	22				
RTCM/RTK 2.2	1	3		18	19	22			59	
RTK Only 2.2		3		18	19	22			59	
RTCM/RTK 2.1	1	3		18	19	22			59	
RTK Only 2.1		3		18	19	22			59	
RTCM/RTK 3.0						1006	1008	1013	1004	



## Message Scheduling

Table B.2 describes the frequency at which messages are generated when they are enabled in a base receiver.

**Table B.2    Message scheduling**

Type	Frequency
1	Every second
3	The 10th second after the first measurement, then every 10 seconds after that
9-3	Every second
18	Every second
19	Every second
22	The 5th second after the first measurement, then every 10 seconds after that
23	The 4th second after the first measurement, then every 10 seconds after that
24	The 4th second after the first measurement, then every 10 seconds after that
59-sub, 13	The 5th second after the first measurement, then every 10 seconds after that
1004	Every second
1006	Every 10 seconds
1008	Every 10 seconds
1013	Every 300 seconds







# Troubleshooting

## In this chapter:

- [LED conditions](#)
- [Receiver issues](#)



An LED that is flashing quickly indicates a condition that may require attention, and an unlit LED indicates that no operation is occurring. Table C.1 describes some LED conditions, possible causes, and how to solve them.

Table C.1 LED conditions

Condition	Possible cause	Solution
The SV Tracking LED is lit solidly and the Logging/Memory LED is flashing slowly. (5700 receiver only)	The receiver is in Monitor mode, ready for new firmware to be loaded or new options to be added.	Turn on or turn off the receiver.  Load the latest version of the firmware, which you can download from the Trimble website at <a href="ftp://ftp.trimble.com/pub/survey/bin/">ftp://ftp.trimble.com/pub/survey/bin/</a>
	The receiver is tracking fewer than four satellites.	Wait until the SV Tracking LED is flashing slowly.
The SV Tracking LED is not flashing.	The radio antenna cable and GPS antenna cable are mixed up.(5700 receiver only)	Make sure that the GPS antenna cable (with the yellow over-mould) is connected between the yellow TNC connector marked GPS and the GPS antenna.



Table C.2 describes some possible receiver issues, possible causes, and how to solve them.

**Table C.2 Receiver issues**

Issue	Possible cause	Solution
The receiver does not power up.	External power is too low.	Check the charge on the external battery, and check the fuse if applicable. Replace the battery if necessary.
	Internal power is too low.	Check the charge on the internal batteries and replace if necessary. Ensure battery contacts are clean.
	External power is not properly connected.	Check that the Lemo connection is seated properly. Check for broken or bent pins in the connector.
	Faulty power cable.	Try a different cable. Check pinouts with multimeter to ensure internal wiring is intact.
Receiver does not log data.(5700 receiver only)	Insufficient memory on the CompactFlash card.	Delete old files using the GPS Configurator or Trimble Survey Controller software, or by holding down <b>[P]</b> for 30 seconds.
	No CompactFlash card is inserted.	Insert a CompactFlash card in the receiver.
	The CompactFlash card is not seated properly.	Remove the Compact Flash card and reinsert it, making sure that it slides into the housing easily and seats into the pins.
	The receiver is tracking fewer than four satellites.	Wait until the SV Tracking LED is flashing slowly.
	The CompactFlash card is not formatted, or is corrupted.	Format the CompactFlash card using GPS Configurator, or by holding down <b>[P]</b> for 30 seconds. If the problem persists, use GPS Configurator to perform a full format.



**Table C.2 Receiver issues (Continued)**

Issue	Possible cause	Solution
The receiver is not responding.	Receiver needs soft reset.	Power down the receiver and power back up.
	Receiver needs full reset.	If you want to retain data files, remove the CompactFlash card first. Hold down <b>P</b> for 30 seconds.
Reference receiver is not broadcasting.	Port settings between reference receiver and radio are incorrect.	Using the Trimble Survey Controller software, connect to the reference radio through the receiver. If no connection is made, connect directly to the radio and change the port settings. Try to connect through the receiver again to ensure that they are communicating.
	Faulty cable between receiver and radio.	Try a different cable.
		Examine the ports for missing pins.
		Use a multimeter to check pinouts.
	No power to radio.	If the radio has its own power supply, check the charge and connections.  If power is routed through the receiver, ensure that the receiver's external power source is charged and that power output on Port 3 is enabled.



**Table C.2 Receiver issues (Continued)**

Issue	Possible cause	Solution
Roving receiver is not receiving radio.	Reference receiver is not broadcasting.	See page 182.
	Incorrect over air baud rates between reference and rover.	Connect to the roving receiver's radio and check to ensure it has the same setting as the reference receiver.
	Incorrect port settings between roving external radio and receiver.	If the radio is receiving data (the Logging/Memory LED is flashing) and the receiver is not getting radio communications, use the Trimble Survey Controller software to check that the port settings are correct.
	The radio antenna cable and GPS antenna cable are mixed up.	Make sure that the radio antenna cable (with the blue over-mould) is connected between the blue TNC connector marked RADIO and the radio antenna.
	The cellular modem does not have hardware flow control enabled.	Disable flow control on the modem.  Use a special cable. For more information, refer to the document <i>Using Cellular and CDPD Modems for RTK</i> , which is available from the Trimble website.







# Index

## Symbols

- \$ (NMEA start of message delimiter) 156
- \* (NMEA checksum delimiter) 158
- , (NMEA field delimiter) 156
- .cfg files 52–57, 64, 125–128
- .dat files 62, 64
  - size 62
- .elf files 48, 64, 122
- .eph files 64
- .T01 files 62, 64

## Numerics

- 1PPS output
  - 5700 receiver 6, 76, 95
  - configuring in real time 97
  - default settings 78
  - enabling in real time 97
  - pulse definition 95
  - time tag definition 96
- 5700 receiver
  - backpack setup 25
  - buttons 36
  - factory default settings 78
  - features 6
  - internal radio 28
  - LEDs 37
  - maximum number of application files 53
  - output formats 76

- parts of the receiver 10–15
- pole-mounted setup 19
- postprocessed setup 17
- resetting to factory defaults 37, 80
- setup 9–33
- specifications 73–76
- turning on and off 37, 39
- upgrading firmware 48, 67
- use and care 7

- 5800 receiver
  - buttons 116
  - factory default settings 144
  - inserting the internal battery 110
  - internal radio 112
  - LEDs 117
  - maximum number of application files 125
  - output formats 142
  - parts of the receiver 106–108
  - pole-mounted setup 110
  - resetting to factory defaults 116
  - setup 105–113
  - specifications 139–142
  - turning on and off 116, 118
  - upgrading firmware 122, 132
  - use and care 103

## A

- accuracy
  - centimeter-level 6, 102



- submeter-level 6, 102
- Actual Track Made Good Over and Speed
  - Over Ground message 172
- adding frequencies for internal radio 69, 133
- ANT port 14, 183
- antenna information, default 79, 145
- antenna power adapter 90
- Antenna record, in application file 53, 125
- antennas
  - electrical interference 16, 109
  - mounting 16, 109
  - RPA 25
  - rubber duck 20, 25
  - using with the 5700 receiver 90
  - whip 20, 25
  - Zephyr 21
  - Zephyr Geodetic 21
- application files
  - applying 57, 127
  - configuring the receiver with 124, 125
  - Current (Current.cfg) 54, 78, 126, 144
  - Default (Default.cfg) 53, 78, 126, 144
  - deleting 37, 116
  - deleting by formatting CompactFlash card 42
  - maximum number 53, 125
  - naming 57, 128
  - overview 52, 125
  - Power Up (Power\_Up.cfg) 54, 78, 127, 144
  - records 52, 125
  - storing 57, 128
  - timed 38, 55, 82, 83
- applying application files 57, 127
- ASCII
  - output, default settings 79, 145
  - time tags, default 78
  - time tags, definition 96

## B

- backpack setup 25
- base station *See* reference station
- baseline, moving 156
- batteries
  - camcorder 30
  - charging while in 5700 receiver 43
  - charging with TSCe/TSC1
    - batteries 46
  - minimum power to charge 45, 121
  - operating time 42, 74, 140
  - standby 39
- battery
  - compartments 11, 14, 108
  - inserting in the 5800 receiver 110
- Battery LEDs 39
- baud rate
  - default 78, 79, 144
  - maximum 76, 142
- binary output, default settings 79, 145
- blue RPA cable 14, 183
- blue TNC port 14, 183
- Bluetooth 3
- bottom panel 14, 108
- bracket
  - insert 22
  - receiver 22, 23
  - RPA 20
- breakout box, on event marker/1PPS
  - cable 89
- buttons 10, 36, 106, 116

## C

- cables
  - coaxial 91
  - data/power 60, 88, 150
  - event marker/1PPS 88
  - GPS antenna 14, 96



- 
- RPA 14
  - camcorder batteries 30
  - catch
    - for battery compartment 11
    - for CompactFlash/USB door 10, 106
  - cellphones 30, 112
  - cellular modems 30, 112, 183
  - centimeter-level accuracy 6, 102
  - charging
    - 5700 and TSC1/TSCe batteries 46
    - internal batteries 43
    - minimum time required 45, 121
  - CMR
    - input 7, 103
    - output 7, 103
    - output, default settings 79
  - coaxial cable, for connecting to GPS
    - antenna 91
  - COCOM limits 7, 103
  - cold start, time required 75, 142
  - color-coded TNC ports 14
  - CompactFlash card
    - corrupted 181
    - formatting 37, 42, 181
    - full 40
    - logging data to 40
    - transferring files from 62
    - Type I 33
    - upgrading receiver firmware from 48, 122
  - CompactFlash port 14, 15, 108
  - CompactFlash/USB door 14, 15, 108
  - CompactFlash/USB door catch 10, 106
  - configuring
    - 1PPS output in real time 97
    - event marker input in real time 94
    - MS Series parameters 160
    - multiple receivers identically 128
    - receiver in real time 52, 124
    - receiver using application files 124
  - connecting to computer for data transfer 60
  - controller
    - mounting on pole 24
    - setup 24
  - corrupted CompactFlash card 181
  - Current application file 54, 78, 126, 144
  - current receiver configuration 126
  - current settings 144
  - Current.cfg 54, 78, 126, 144
- D**
- DAT files 62
  - data
    - logging internally 40
    - logging to Trimble Survey
      - Controller 41, 119
    - transferring from the receiver 59
  - Data button 10, 36
  - data files
    - 5700 receiver 62, 64
    - deleting by formatting CompactFlash
      - card 42
    - transferring from CompactFlash
      - card 62
  - Data LED *See* Logging/Memory LED
  - data link, using a cellular modem 30, 112
  - data outputs, NMEA 160
  - data storage cards *See* CompactFlash cards
  - data transfer
    - transferring files 59–64
    - with serial connection 60
    - with USB connection 61
  - Data Transfer utility
    - deleting files on receiver with 64
    - transferring files with 62
  - data/power cable pinouts 88, 150, 151
  - Default application file 53, 78, 126, 144



- default settings
    - 1PPS time tags 78
    - 5700 receiver 78
    - 5800 receiver 144
    - antenna 79, 145
    - ASCII output 79, 145
    - ASCII time tags 78
    - baud rate 78, 79, 144
    - binary output 79, 145
    - changing 127
    - CMR output 79
    - elevation mask 78, 144
    - logging rate 79
    - measurement rate 79
    - motion 78, 144
    - NMEA output 79, 145
    - overriding 126
    - Port 3 power output 78
    - position logging rate 79
    - reference position 79, 145
    - reference station 79, 145
    - resetting 119
    - RT17 output 79, 145
    - RTCM output 79
    - serial format 78, 79, 144
    - SNR mask 78, 144
    - streamed output 79, 145
    - SV enabling 78, 144
  - Default.cfg 53, 78, 126, 144
  - deleting files
    - application files 37, 116
    - by formatting CompactFlash card 42
    - ephemeris file 37, 116
    - in the receiver 64
  - delimiters, NMEA
    - checksum 158
    - field separator 158
    - start of message 156
  - Device Control record, in application file 53, 125
  - diameter, of pole 22
  - dimensions
    - 5700 receiver 74
    - 5800 receiver 140
  - direction, NMEA field format 158
  - disabling flow control 183
  - dual event marker input 6, 93
  - dual-frequency RTK engine 6, 102
- E**
- electrical interference 16, 109
  - electronic interference 103
  - elevation mask
    - default 78, 144
  - enabling
    - 1PPS output in real time 97
    - event marker input in real time 94
    - power output on Port 3 47, 122
  - enhanced RTK *See* extended RTK
  - environmental factors
    - when setting up the receiver 16, 108
  - ephemeris file
    - deleting 37, 116
    - supported file type 64
  - eRTK Range Pole antenna *See* RPA
  - event marker input
    - configuring in real time 94
    - feature 6
  - Event Marker LED *See* Radio LED
  - event marker/1PPS
    - cable 88
    - cable pinouts 90
  - examples, of default behavior 80
  - extended RTK 6
  - external power 47
    - minimum required to charge internal batteries 45, 121



## F

## factory defaults

- 5700 receiver 77–83
- 5800 receiver 143–146
- resetting to 37, 80, 116, 145

## FastStatic surveying

- specifications 75, 141

## features

- 1PPS output 6
- 5800 receiver 102
- automatic OTF (on-the-fly)
  - initialization 6, 102
- centimeter accuracy 6, 102
- charging batteries internally 6
- CMR input and output 7, 103
- CompactFlash card 6
- extended RTK 6
- OTF data 6, 102
- real-time positioning 6, 102
- RS-232 ports 7
- RTCM SC-104 input and output 7, 102
- RTK data 6, 102
- submeter accuracy 6, 102
- USB port 6
- WAAS capability 6, 102

## file size 62

## File Storage record, in application file 52, 125

## file types

- .cfg 64
- .dat 62
- .elf 64
- .eph 64
- .T01 62
- application (.cfg) 64
- DAT 62
- data (.dat) 62
- data files 62
- ephemeris (.eph) 64
- job 41, 119

raw observations (.T01) 64

receiver firmware (.elf) 64

supported 64

## files

- deleting 64
- transferring from CompactFlash
  - card 62

## firmware

- (.elf) files 64
- upgrading 48, 67, 122, 132

## flashing LED 37, 117

## flow control

- 5700 receiver 76
- 5800 receiver 142
- default setting 79, 144
- disabling on cellular modem 31, 113, 183

formatting a CompactFlash card 33, 37, 42

frequencies, for internal radio 69, 133

front panel 10, 106

full format 181

full memory 40

full reset 182

## G

General Controls record, in application  
file 52, 125

GGA message, time, position, and fix related  
data 160

GPS antenna cable 14

GPS antenna port 7, 14, 103, 183

GPS Configurator software

- 5700 receiver 41, 66
- 5800 receiver 112, 124, 130
- configuring 1PPS output 97
- configuring 5700 receiver 66
- configuring 5800 receiver 130
- configuring event marker input 94



- deleting files on receiver with 64
- installing 130
- performing a full format 181
- GPS LED *See* SV Tracking LED
- green LEDs 38, 39
- GSOF output 76
- GST message 163
- GSV message 164
- guidelines for setting up receiver 17, 109

## H

- Heading Information message 170

## I

- icons, on top panel 13, 108
- indicator LEDs 10, 37, 106, 117
- initialization
  - minimum time required 76, 142
  - on-the-fly 6, 102
  - specifications 76, 142
- input
  - CMR 7, 103
  - event marker 6, 93
  - RTCM 7, 102
- Input Message record, in application file 53, 125
- insert, for receiver bracket 22
- installing
  - GPS Configurator software 130
  - WinFlash software 67, 131
- interference
  - electrical 16, 109
  - electronic 103
- internal batteries
  - charging 6
  - charging while in 5700 receiver 43

- charging with TSC1/TSCe
  - batteries 46
  - minimum power to charge 45, 121
  - operating time 42, 74, 140
  - standby 39

- internal radio
  - 5700 receiver 28
  - 5800 receiver 112
  - adding frequencies 69, 133

## J

- job files 41, 119

## L

- latency of 5700 receiver 75
- latency of 5800 receiver 141
- latitude, NMEA field format 158
- LEDs
  - 5700 receiver 10, 37
  - 5800 receiver 106, 117
  - Battery 1 39
  - Battery 2 39
  - flashing 37, 117
  - Logging/Memory 38
  - Radio 38
  - SV Tracking 38
- Lemo cables, plugging in 17, 109
- limits, imposed by COCOM 7, 103
- Lithium ion batteries, voltage 48
- Local Coordinate Position Output message 168
- logging
  - internally 40
  - scheduling 55
  - starting 37
  - stopping 37



- to Trimble Survey Controller
  - software 41, 119
- Logging button *See* Data button
- Logging Rate record, in application file 53, 125
- logging rate, default 79
- Logging/Memory LED 38
- longitude, NMEA field format 158
- Low Latency RTK mode, specifications 75, 141

## M

- maximum
  - baud rate 76, 142
  - number of application files 53, 125
- Maxwell architecture 75, 142
- measurement rate, default 79
- Memory LED *See* Logging/Memory LED
- memory, full 40, 181
- message ID, in NMEA messages 158
- mobile phones 30, 112
- Monitor mode 38, 48, 122, 180
- motion, default settings 78, 144
- mounting antenna, avoiding electrical interference 16, 109
- multiple receivers, configuring identically 128

## N

- naming application files 57, 128
- NMEA
  - output 7, 102, 155–173
  - output, default settings 79, 145
- NMEA messages
  - common elements 157
  - common message elements 158
  - delimiters 158

- enabling and disabling 157
- GGA 161
- GST 163
- GSV 164
- ID 158
- PTNL,GGK 165
- PTNL,GGK\_SYNC 166
- PTNL,PJK 168
- PTNL,PJT 169
- PTNL,VGK 169
- PTNL,VHD 170
- summary 156
- values 158
- VTG 172
- ZDA 173

NMEA-0183 output 156

## O

- One Pulse per Second output *See* 1PPS
  - output
- on-the-fly (OTF) initialization 6, 102
- operating controls 106
- operating temperature 15, 74, 140
- OTF initialization *See* on-the-fly initialization
- output formats
  - 1PPS 6, 76, 93
  - 5700 receiver 76
  - 5800 receiver 142
  - CMR 7, 103
  - GSOFF 76
  - NMEA 7, 102, 155
  - RT17 76, 79, 142, 145
  - RTCM 7, 102
- Output Message record, in application file 53, 125
- overriding default settings 126



## P

parts of the receiver 10–15

physical specifications 74, 140

pinout information 148

pinouts

data/power cable 88, 150, 151

event marker/1PPS cable 90

serial ports 86, 148, 149

pole diameter 22

pole-mounted setup

5700 receiver 19

5800 receiver 110

pole diameter 22

TSC1/TSCe controller 24

Port 1

connector pin locations 86

default baud rate 78, 144

default serial format 78, 144

event marker input 93

flow control 78, 144

icon 13, 108

pinout diagram 86, 148, 149

pinout functions 87

power output 47, 122

Port 2

1PPS output 93

connector pin locations 86

default baud rate 79, 144

default serial format 79, 144

event marker input 93

icon 13, 108

pinout diagram 86, 148, 149

pinout functions 87

Port 3

connector pin locations 86

default baud rate 79

default power output 78

default serial format 79

flow control 79, 144

icon 14

pinout diagram 86, 148, 149

pinout functions 87

power output 47, 48, 122

port settings, checking 183

Position Error Statistics message 163

position logging rate, default 79

positioning specifications 75, 141

postprocessed setup 17

power

external 47

minimum to charge batteries 45, 121

Power button 10, 36, 116

power cable, pinouts 88, 150, 151

Power LEDs *See* Battery LEDs

power output

automatically enabling on Port 3 48

enabling on Port 3 47, 122

on Port 1 47, 122

power supply 43

Power Up application file

5700 receiver 54

5800 receiver 127

overriding factory defaults with 78,  
144

power/data ports 12

Power\_Up.cfg

5700 receiver 54

5800 receiver 127

overriding factory defaults with 78,  
144

powering down the receiver 37, 116

powering up the receiver 37, 39, 116, 118

problems, troubleshooting 179–180

Projection Type message 169

PTNL,GGK message 165

PTNL,GGK message, Time, Position, Position  
Type, DOP 164

PTNL,GGK\_SYNC message 166

PTNL,PJK message 168

PTNL,PJT message 169



PTNL,VGK message 169  
PTNL,VHD message 170  
pulse, for 1PPS output 95

## Q

quick format 33, 41, 181

## R

radio antenna port 7, 14, 103, 183  
Radio LED 38  
RADIO port  
    5700 receiver 14  
    icon 14, 108  
    troubleshooting 183  
radio-modems, using 3  
radios  
    5700 receiver 111  
    5800 receiver 28  
    internal 28, 112  
    TRIMMARK 3 28, 111  
    TRIMMARK IIe 28, 112  
    TRIMTALK 450S 28, 112  
Range Pole antenna *See* RPA  
raw observations 64  
real time, configuring receiver in 52, 124  
real-time configuring receiver in 124  
rear panel 11, 107  
receiver  
    bracket 22, 23  
    catch lock 11, 107  
    changing default settings 127  
    configuring 124  
    connecting to devices 148  
    current configuration 126  
    data files 62  
    firmware files 64  
    resetting 126

receiver setup 9–33, 105–113  
receivers, multiple  
    configuring identically 128  
red LED 38  
Reference Position record, in application  
    file 53, 125  
reference position, default 79, 145  
reference station  
    default 79, 145  
    default settings 79, 145  
reformatting CompactFlash card 42  
registration 2  
release notes 2  
reset  
    5800 receiver 126  
    full 182  
    soft 182  
    to factory defaults 37, 80, 116  
RPA 25  
RPA bracket 20  
RS-232 ports 7  
RT17 output  
    5700 receiver 76  
    5800 receiver 142  
    default settings 79, 145  
RTCM input 7, 102  
RTCM output  
    5700 receiver 7  
    5800 receiver 102  
    default settings 79  
    messages 176  
RTK engine 6, 102  
RTK/OTF data 6, 102  
rubber duck antenna 20, 25

## S

safety 3  
Satellite Information message 164



- Satellite LED *See* SV Tracking LED
- scheduling logging sessions 55
- security limits 103
- serial format, default setting 78, 79, 144
- Serial Port Baud/Format record, in
  - application file 53, 125
- serial ports
  - 5700 receiver 6, 7, 12
  - pinouts 87, 150
- setup
  - 5700 receiver 9–33
  - 5800 receiver 105–113
  - backpack 25
  - guidelines 16, 108
  - pole-mounted 19, 110
  - postprocessed survey 17
  - TSC1/TSCe controller 24
- signal processing 75, 142
- size
  - 5700 receiver 74
  - 5800 receiver 140
- Sleep mode 38, 83
- SNR mask, default setting 78, 144
- soft reset 182
- specifications
  - 5700 receiver 73–76
  - 5800 receiver 139–142
  - physical 74, 140
  - positioning 75, 141
  - technical 75, 142
- standby, battery 39
- starting logging manually 37
- start-up specifications 75, 142
- Static surveying
  - specifications 75, 141
- Static/Kinematic record, in application
  - file 53, 125
- stopping logging manually 37
- storage temperature 15, 74, 140
- storing application files 57, 128

- streamed output, default settings 79, 145
- submeter-level accuracy 6, 102
- supported file types 64
- Survey Controller software *See* Trimble
  - Survey Controller software
- SV Enable/Disable record, in application
  - file 53, 125
- SV enabling, default settings 78, 144
- SV Tracking LED 38
- switching the receiver on and off 37, 39, 116, 118
- Synchronized RTK mode, specifications 75, 141

## T

- technical specifications 75, 142
- temperature
  - operating range 15, 74, 140
  - storage range 15, 74, 140
- time tag definition 96
- time values in NMEA messages 159
- Time, Position, and Fix Related Data
  - message 161
- Time, Position, and Fix Related Data, GGA
  - message 160
- Time, Position, Position Type, DOP
  - message 165
- Time, Synchronized Position, Position Type, DOP message 166
- Timed Activation record, in application
  - file 53
- timed application files 38, 55, 82, 83
- TNC connector 7, 91, 103
- TNC ports 7, 103
- top panel 12
- tracking specifications 75, 142
- transferring
  - data files from CompactFlash card 62
  - data files from the receiver 59



Trimble Binary Streamed Output *See* GSOF output  
Trimble Format (CMR) *See* CMR format  
Trimble Survey Controller software  
    automatically enabling power output 48  
    configuring the internal radio with 112  
    configuring the receiver with 124  
    logging data to 41  
Trimble web site 1, 31, 113  
TRIMMARK 3 radio 28, 111  
TRIMMARK IIe radio 28, 112  
TRIMTALK radio 28, 112  
troubleshooting 179–180  
TSC1/TSCe controller  
    deleting files on receiver with 64  
    mounting on pole 24  
    setup 24  
turning the receiver on and off 37, 39, 116, 118  
Type approval 3  
Type I CompactFlash cards 6, 33  
types of files supported 64

## U

U.S. Department of Commerce 7, 103  
Universal Time Coordinated (UTC) *See* UTC  
upgrading receiver firmware 48, 67, 122, 132  
USB cable, connecting for data transfer 61  
USB port 6, 14, 76, 108  
use and care of 5700 receiver 7  
use and care of 5800 receiver 103  
UTC Day, Month, and Year, and Local Time  
    Zone Offset message 173  
UTC, NMEA time values 159

## V

Vector Information message 169  
voltage  
    minimum required to charge internal batteries 45, 121  
    of internal batteries 48  
VTG message 172

## W

WAAS  
    5700 receiver 6  
    5800 receiver 102  
    specifications 75, 141  
waking up, from Sleep mode 56  
warm start, time required 75, 142  
web site 1, 31, 113  
weight  
    5700 receiver 74  
    5800 receiver 140  
whip antenna 20  
WinFlash software  
    5700 receiver 67  
    5800 receiver 131  
    installing 67, 131  
    upgrading receiver firmware with 67, 132  
world wide web site 1, 31, 113

## Y

yellow GPS antenna cable 14, 183  
yellow LEDs 38, 39  
yellow TNC port 14, 183



### Z

ZDA message 173

Zephyr antenna 21

Zephyr Geodetic antenna 21